




DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

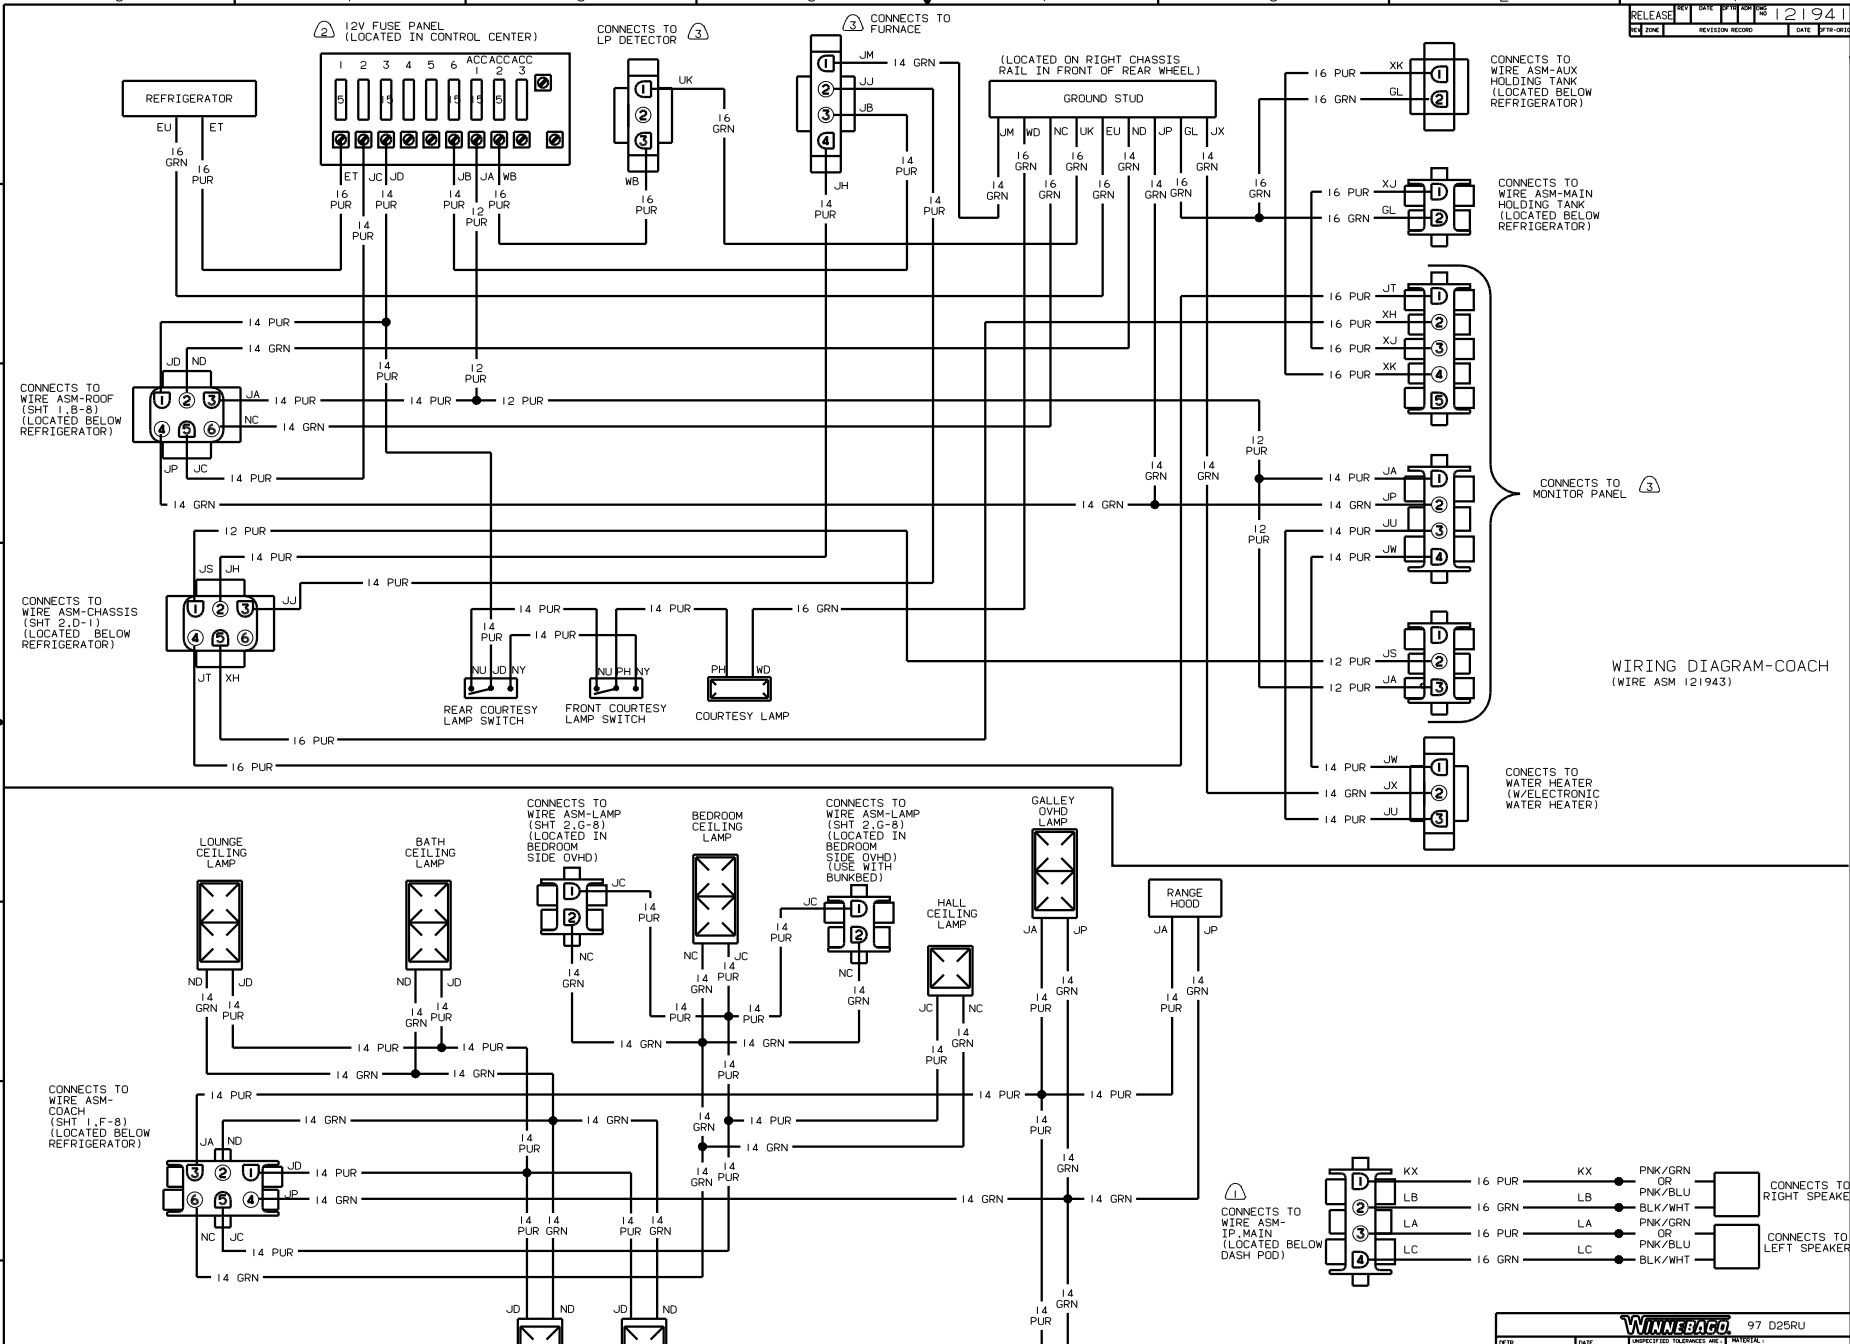

WIRING DIAGRAM-COACH (WIRE ASM 121943)

WIRING DIAGRAM-ROOF (WIRE ASM 121942)

③ SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.
 ② SEE SHT 2, FOR ADDITIONAL INFORMATION.
 ① SEE WIRING DIAGRAM-AUTO FOR ADDITIONAL INFORMATION.

WINNEBAGO		97 D25RU
OF IN	DATE	UNSPECIFIED TOLERANCES ARE MATERIAL
CHP	DATE	WHOLE OR 1/16"
FPE	DATE	ONE-PLACE OR .01"
D/E	DATE	HIGH-PLACE OR .001"
DATE		ANGLE
DATE		INDIC. W/ANGLE
DATE		PROJECTION
DRW #	SCALE	NO. OF SHEETS
1	1:1	3
WIRING DIAGRAM-BODY		121941

