



DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION


If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

CENTER BRAKE LAMP



LEFT TAILLAMPS

RIGHT TAILLAMPS

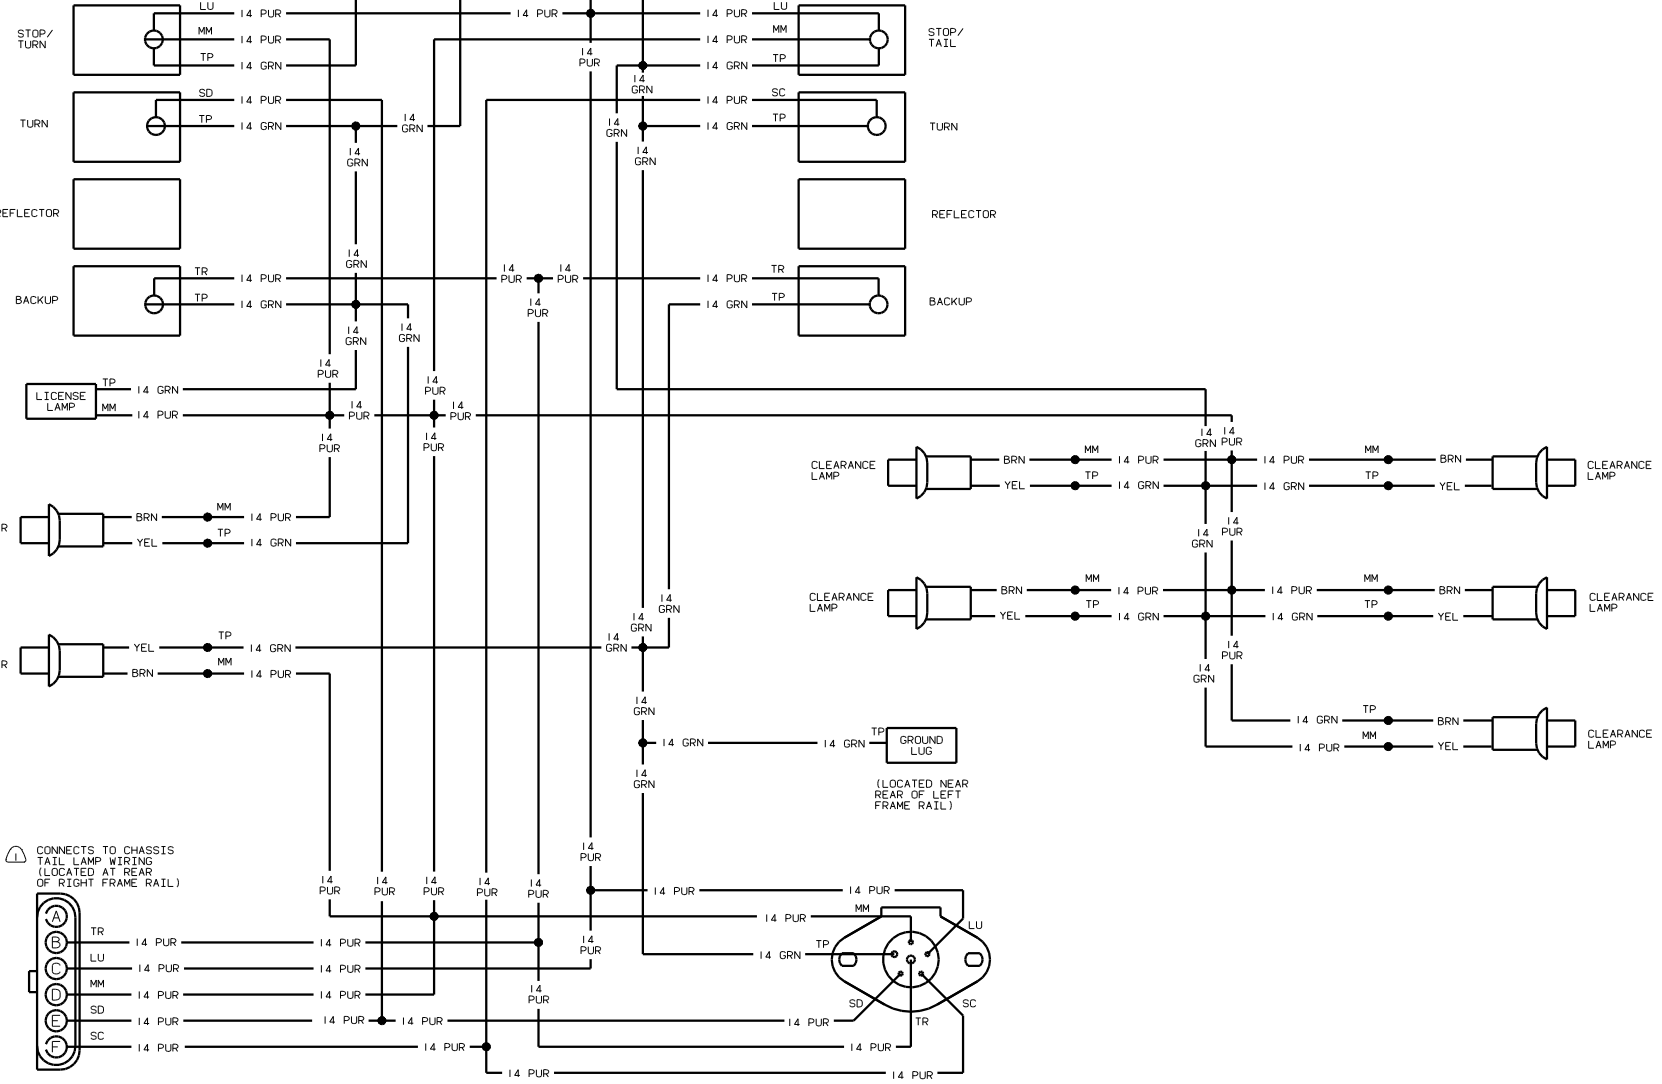

CONNECTS TO CHASSIS TAIL LAMP WIRING (LOCATED AT REAR OF RIGHT FRAME RAIL)



(LOCATED NEAR REAR OF LEFT FRAME RAIL)

WIRING DIAGRAM-BACKWALL (WIRE ASM 124158)

97 0-SERIES

SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.

NOTES:

TITLE		WIRING DIAGRAM-AUTO LAMPS	
DATE	BY	DATE	BY
11/16	1.6		
SHEET 2 OF 2		124076	