




DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

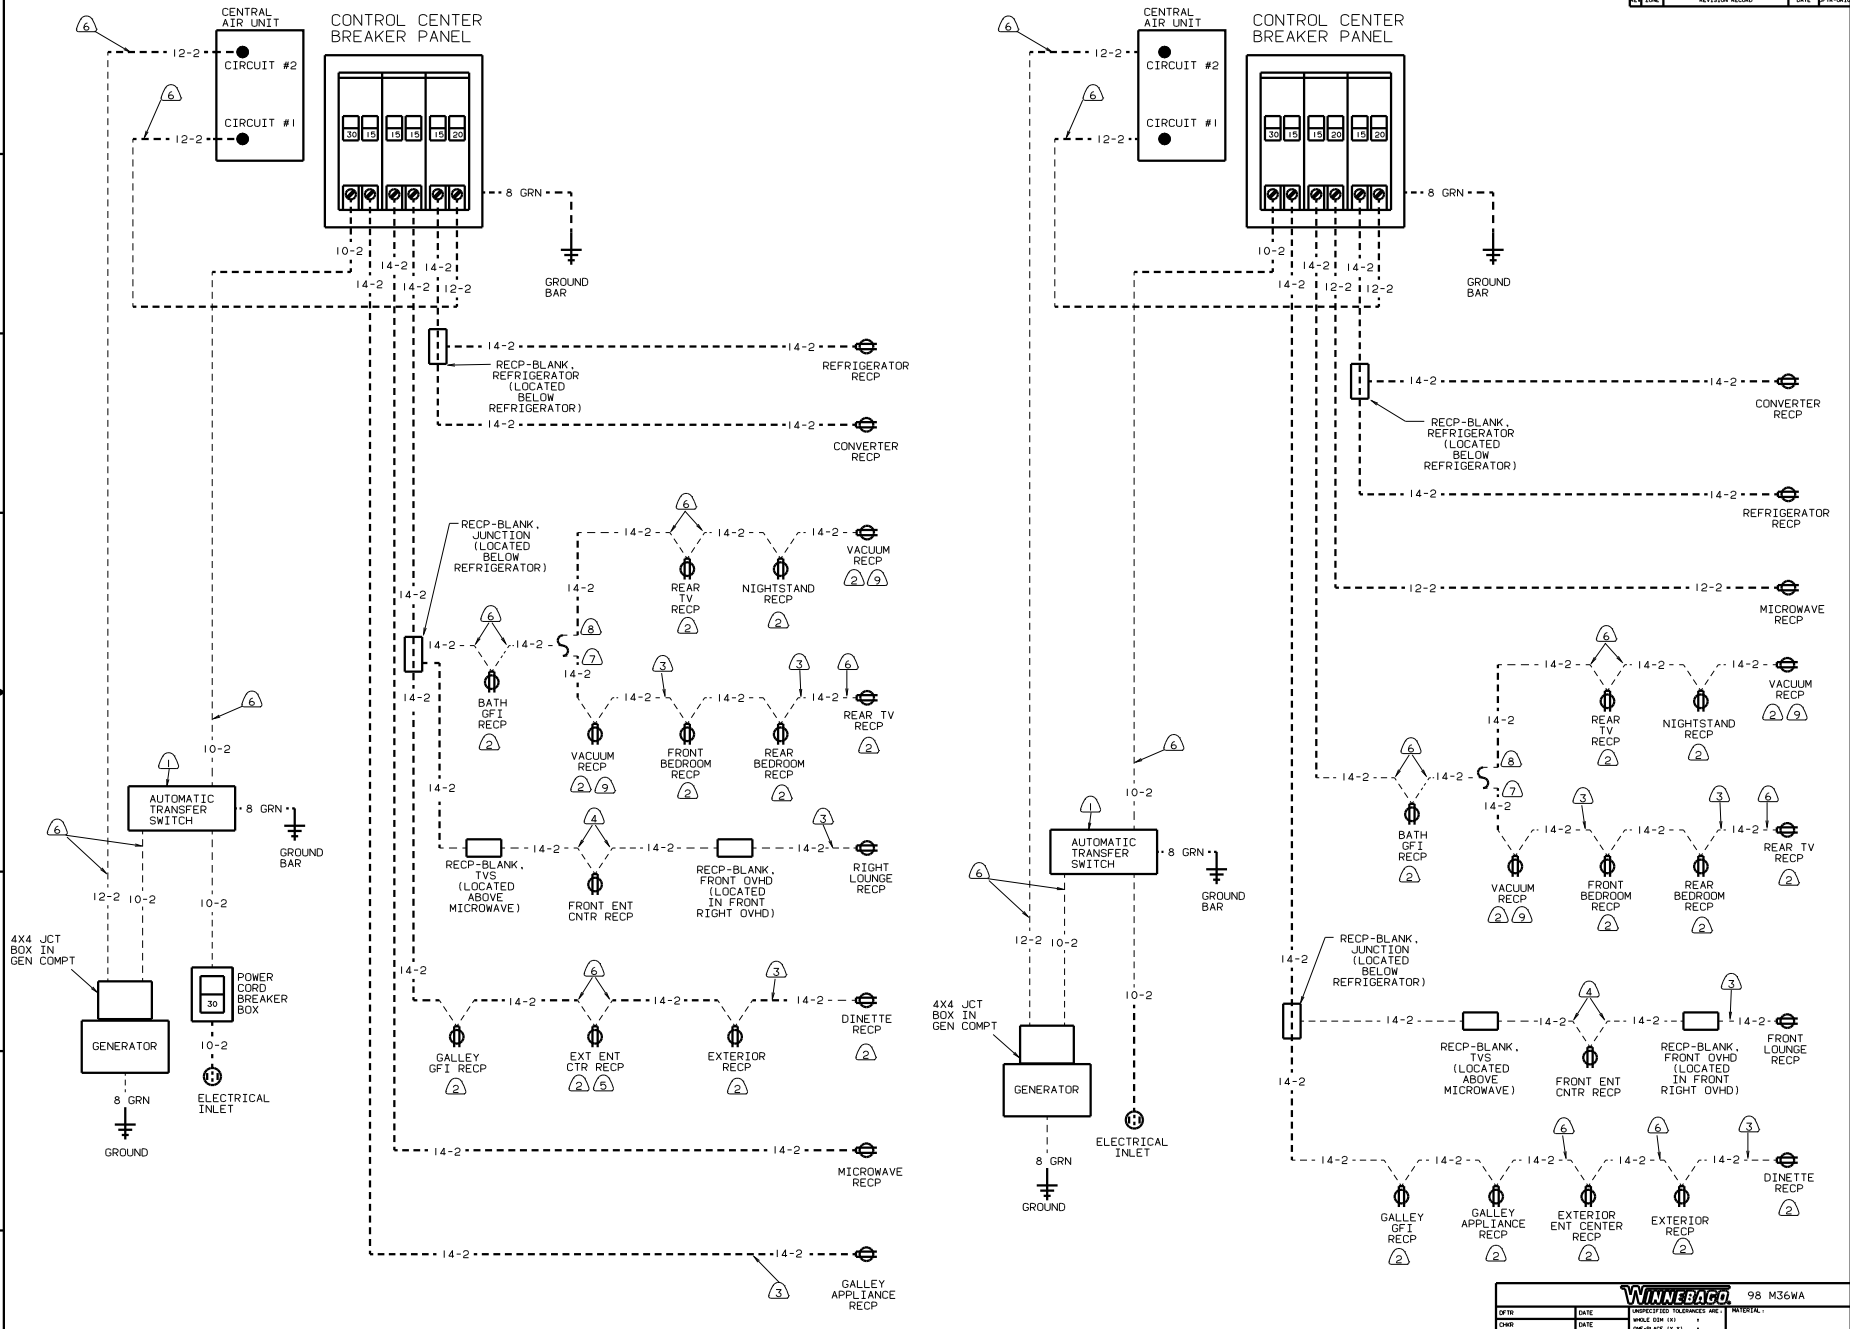


(CAN 30A 110V)

WINNEBAGO 98 M36WA





OF IN	DATE	UNDESIGNED TOLERANCES ARE	MATERIAL
CHP	DATE	WHOLE OR 1/2	
DFE	DATE	ONE-PLACE OR .01	
DVE	DATE	TWO-PLACE OR .005	
COMR	DATE	THREE-PLACE OR .001	
DATE	DATE	THREE-PLACE OR .001	

WIRING DIAGRAM-BODY 110V
 SHEET 1 OF 3


CONTROL CENTER
BREAKER PANEL

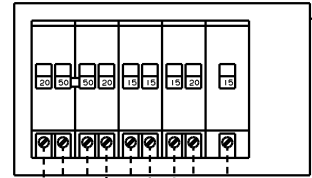

GROUND
BAR

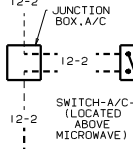   

- (9) USED WITH QUEEN BED
- (8) USED WITH WTWIN BED OPTION
- (7) USED WITH EXT ENTERTAINMENT CENTER OPTION
- (6) WIRE ROUTED BELOW MAIN FLOOR.
- (5) USED WITH VACUUM OPTION
- (4) WIRE ROUTED IN ROOF.
- (3) WIRE ROUTED IN SIDEWALL.
- (2) PROTECTED BY GROUND FAULT INTERRUPTER RECP.
- (1) SEE MANUFACTURER'S WIRING DIAGRAM FOR ADDITIONAL INFORMATION





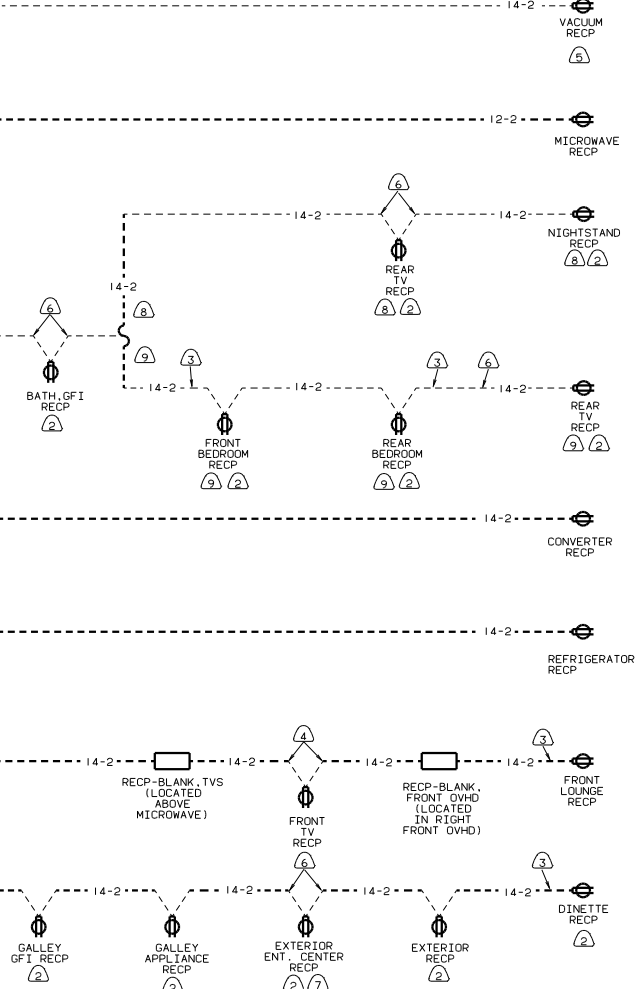


(US 50A 110V)


98 M36WA

TITLE		WIRING DIAGRAM-BODY_110V	
NO. OF SHEETS	DATE	REV.	BY
2 OF 3		1	

   CONTROL CENTER
BREAKER PANEL

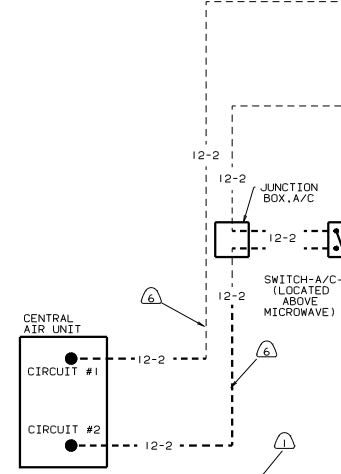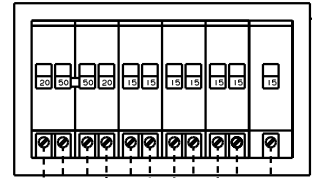

- ⑨ USED WITH QUEEN BED
- ⑧ USED WITH TWIN BED OPTION
- ⑦ USED WITH EXT ENTERTAINMENT CENTER OPTION
- ⑥ WIRE ROUTED BELOW MAIN FLOOR.
- ⑤ USED WITH VACUUM OPTION
- ④ WIRE ROUTED IN ROOF.
- ③ WIRE ROUTED IN SIDEWALL.
- ② PROTECTED BY GROUND FAULT INTERRUPTER RECP.
- ① SEE MANUFACTURER'S WIRING DIAGRAM FOR ADDITIONAL INFORMATION

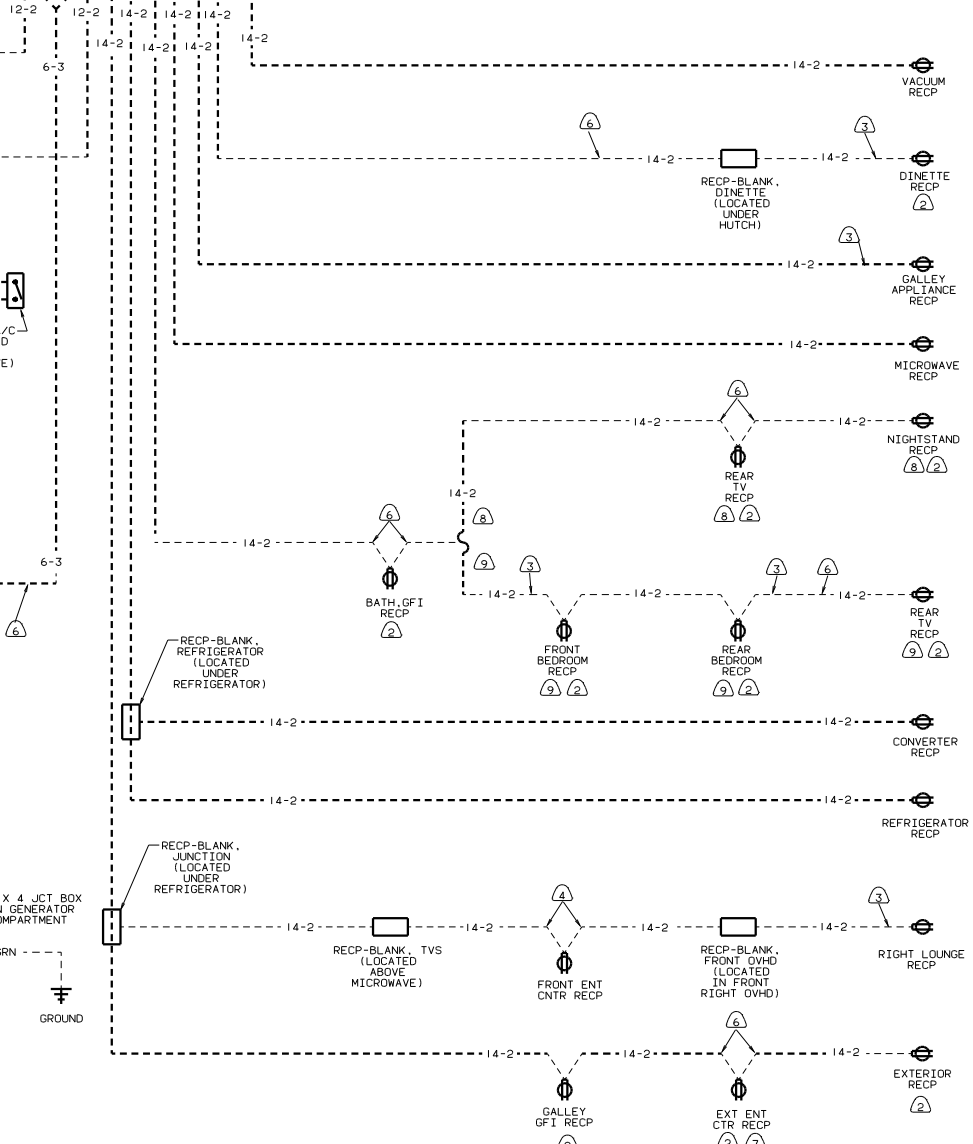

(CAN 50A 110V) 98 M36WA

TITLE		WIRING DIAGRAM-BODY 110V	
NO. OF SHEETS	DATE	REV.	FILE NO.
3 OF 3		1	126638