




DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

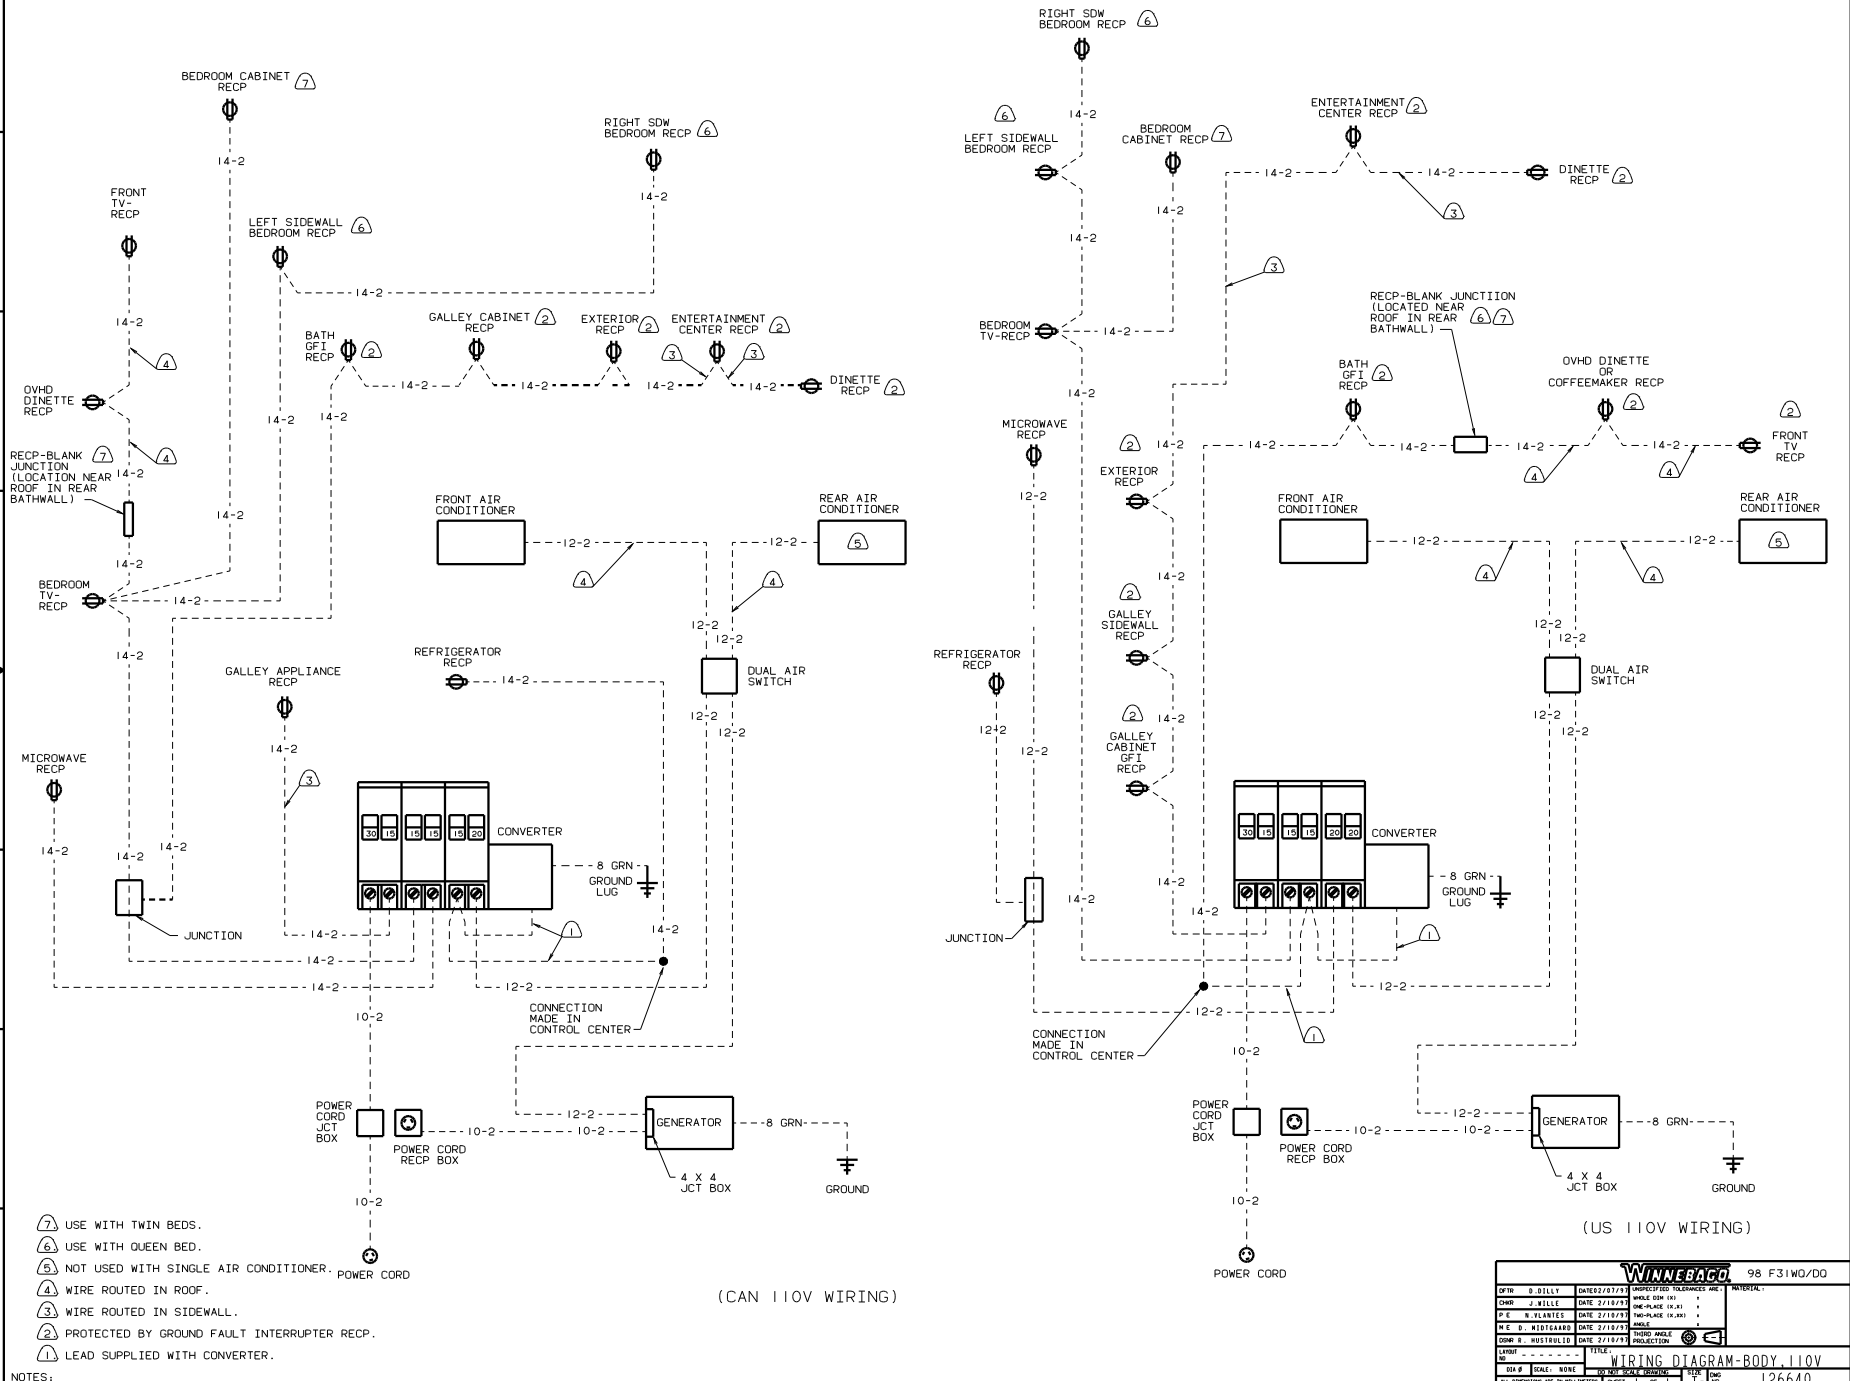

- ⑦ USE WITH TWIN BEDS.
- ⑥ USE WITH QUEEN BED.
- ⑤ NOT USED WITH SINGLE AIR CONDITIONER.
- ④ WIRE ROUTED IN SIDEWALL.
- ③ WIRE ROUTED IN ROOF.
- ② PROTECTED BY GROUND FAULT INTERRUPTER RECP.
- ① LEAD SUPPLIED WITH CONVERTER.

(CAN 110V WIRING)

(US 110V WIRING)

WINNEBAGO 98 F31W0/DO

OPN: D. BILLY	DATE: 02/17/97	UNSPECIFIED TOLERANCES ARE:	INTEGRA:
CHP: J. WILLE	DATE: 2/15/97	WHOLE OR 1/2	
DR: M. WILKINS	DATE: 2/17/97	ONE-PLACE OR .01	
DLE: D. HESTER	DATE: 2/15/97	TWO-PLACE OR .005	
COM: R. MUSTRUBEL	DATE: 2/15/97	THREE-PLACE OR .002	

LANOT: ----- TITLE: WIRING DIAGRAM-BODY 110V
 REV: 1 SCALE: NONE 30 X 60 SCALE: 3/32"=1" SHEET: 1 OF 1
 ALL DIMENSIONS ARE IN MILLIMETERS