




DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

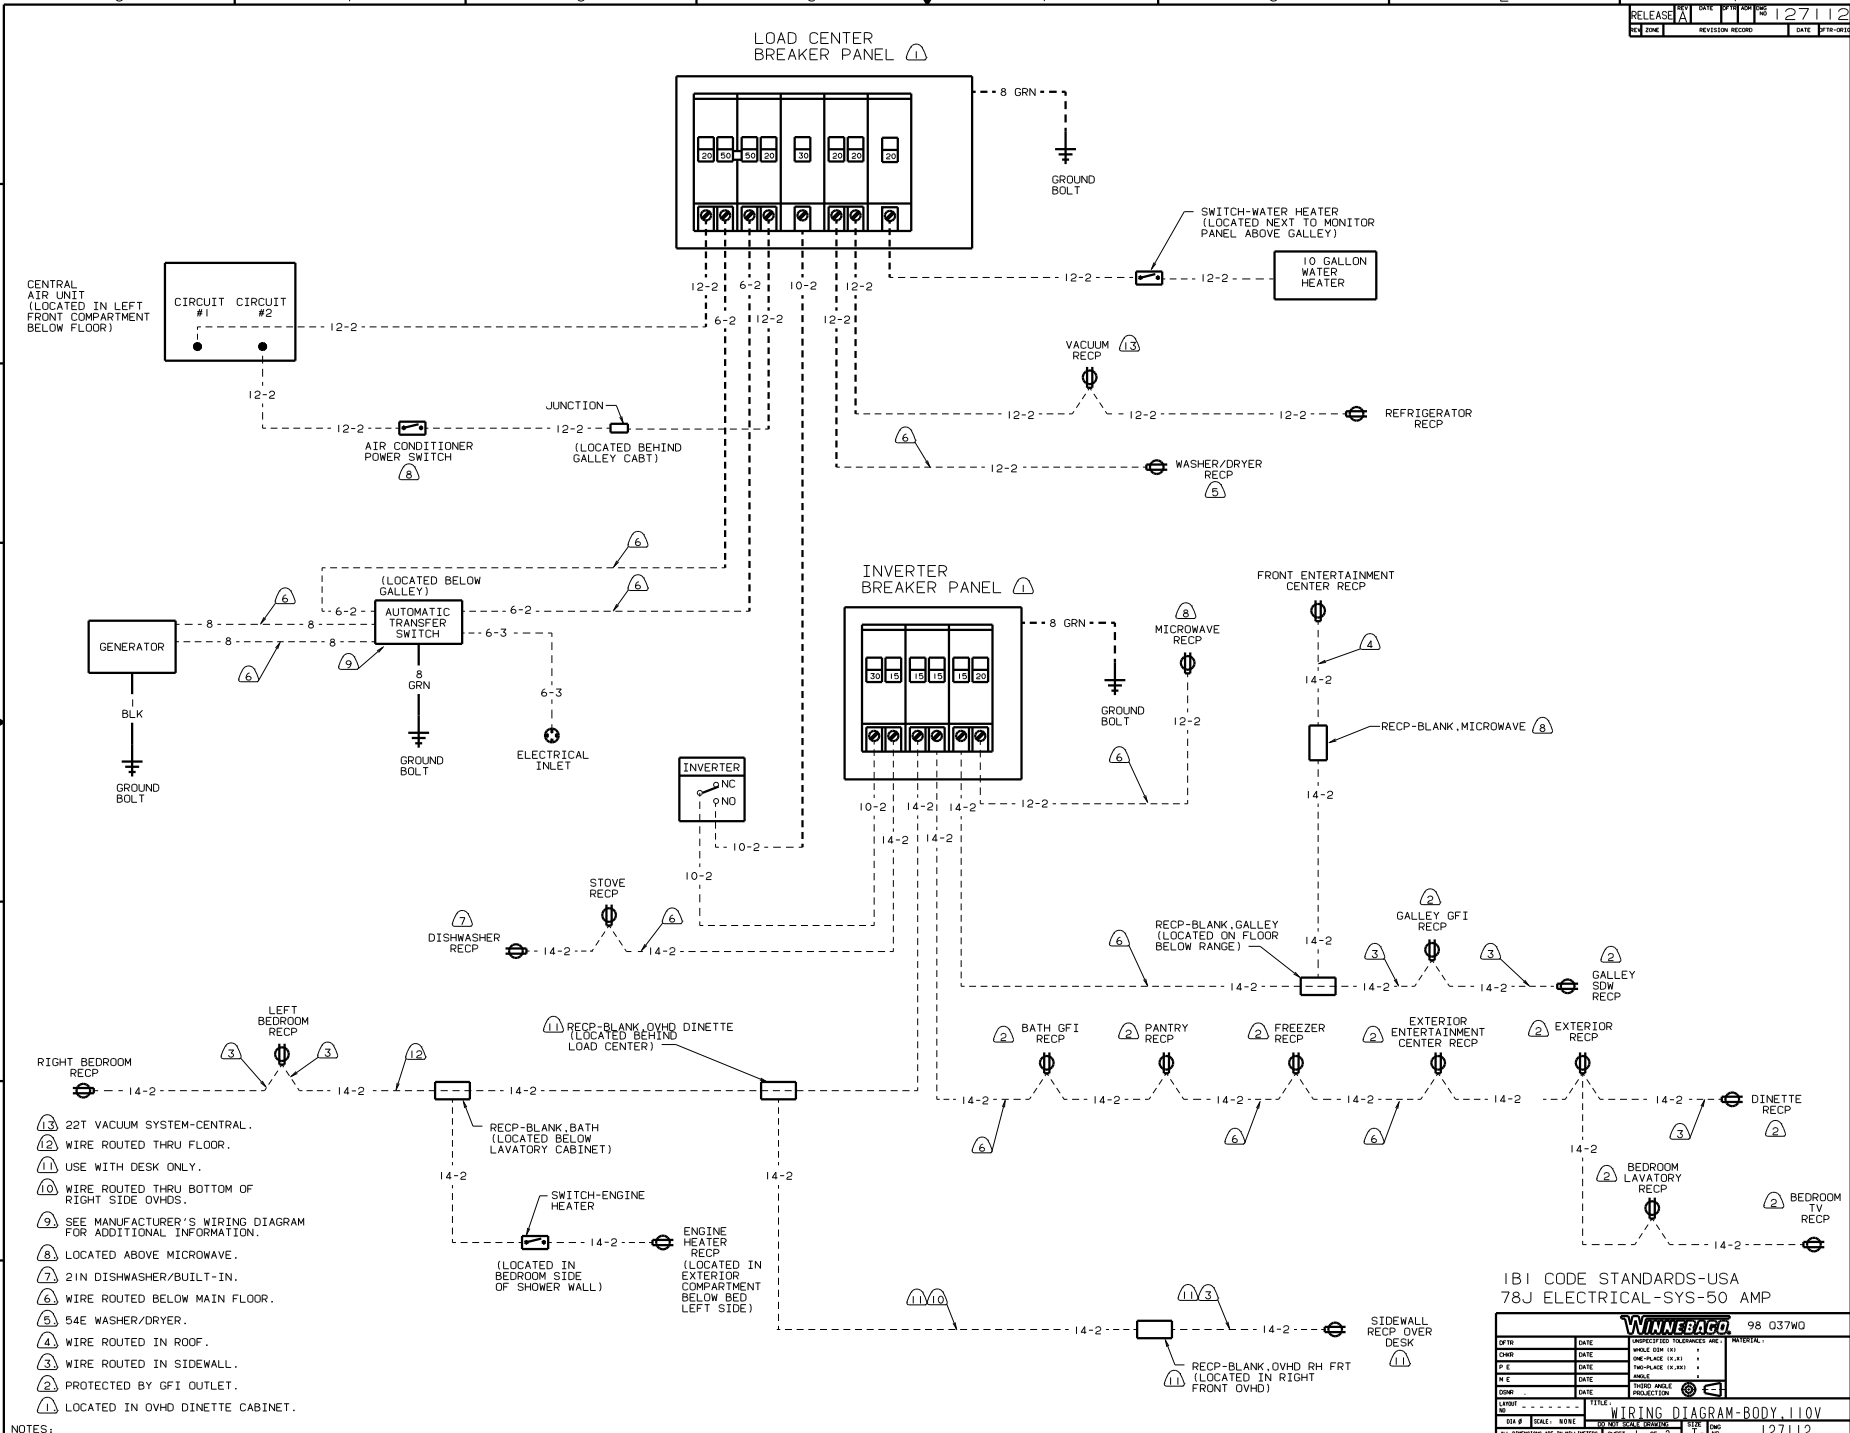

- 13 22T VACUUM SYSTEM-CENTRAL.
- 12 WIRE ROUTED THRU FLOOR.
- 11 USE WITH DESK ONLY.
- 10 WIRE ROUTED THRU BOTTOM OF RIGHT SIDE OVHDS.
- 9 SEE MANUFACTURER'S WIRING DIAGRAM FOR ADDITIONAL INFORMATION.
- 8 LOCATED ABOVE MICROWAVE.
- 7 21N DISHWASHER/BUILT-IN.
- 6 WIRE ROUTED BELOW MAIN FLOOR.
- 5 54E WASHER/DRYER.
- 4 WIRE ROUTED IN ROOF.
- 3 WIRE ROUTED IN SIDEWALL.
- 2 PROTECTED BY GFI OUTLET.
- 1 LOCATED IN OVHD DINETTE CABINET.

NOTES:

81 CODE STANDARDS-USA
 78J ELECTRICAL-SYS-50 AMP

WINNEBAGO		98 Q37W0
DATE	UNSPECIFIED TOLERANCES ARE:	MATERIAL
DATE	WHOLE OR 1/16"	
DATE	ONE-PLACE (1/32)"	
DATE	TWO-PLACE (1/64)"	
DATE	MILS	
DATE	THIRD ANGLE PROJECTION	
DATE		
LAYOUT		
TITLE		
WIRING DIAGRAM-BODY 110V		
SHEET	1 OF 2	127112

REF: 123733-C 1



- 12 22T VACUUM SYSTEM-CENTRAL.
- 11 USE WITH DESK ONLY.
- 10 WIRE ROUTED THRU BOTTOM OF RIGHT SIDE OVHDS.
- 9 SEE MANUFACTURER'S WIRING DIAGRAM FOR ADDITIONAL INFORMATION.
- 8 LOCATED ABOVE MICROWAVE.
- 7 WIRE ROUTED THRU FLOOR.
- 6 WIRE ROUTED BELOW MAIN FLOOR.
- 5 54E WASHER/DRYER.
- 4 WIRE ROUTED IN ROOF.
- 3 WIRE ROUTED IN SIDEWALL.
- 2 PROTECTED BY GFI OUTLET.
- 1 LOCATED IN OVHD DINETTE CABINET.

98 Q37W0
 265 CODE STANDARDS-CSA
 78J ELECTRICAL-SYS 50 AMP

TITLE	WIRING DIAGRAM-BODY
NO. OF SHEETS	16
SHEET	2 OF 2
DATE	1.6
NO.	127112