



DANGER


 

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

CONTROL CENTER BREAKER PANEL

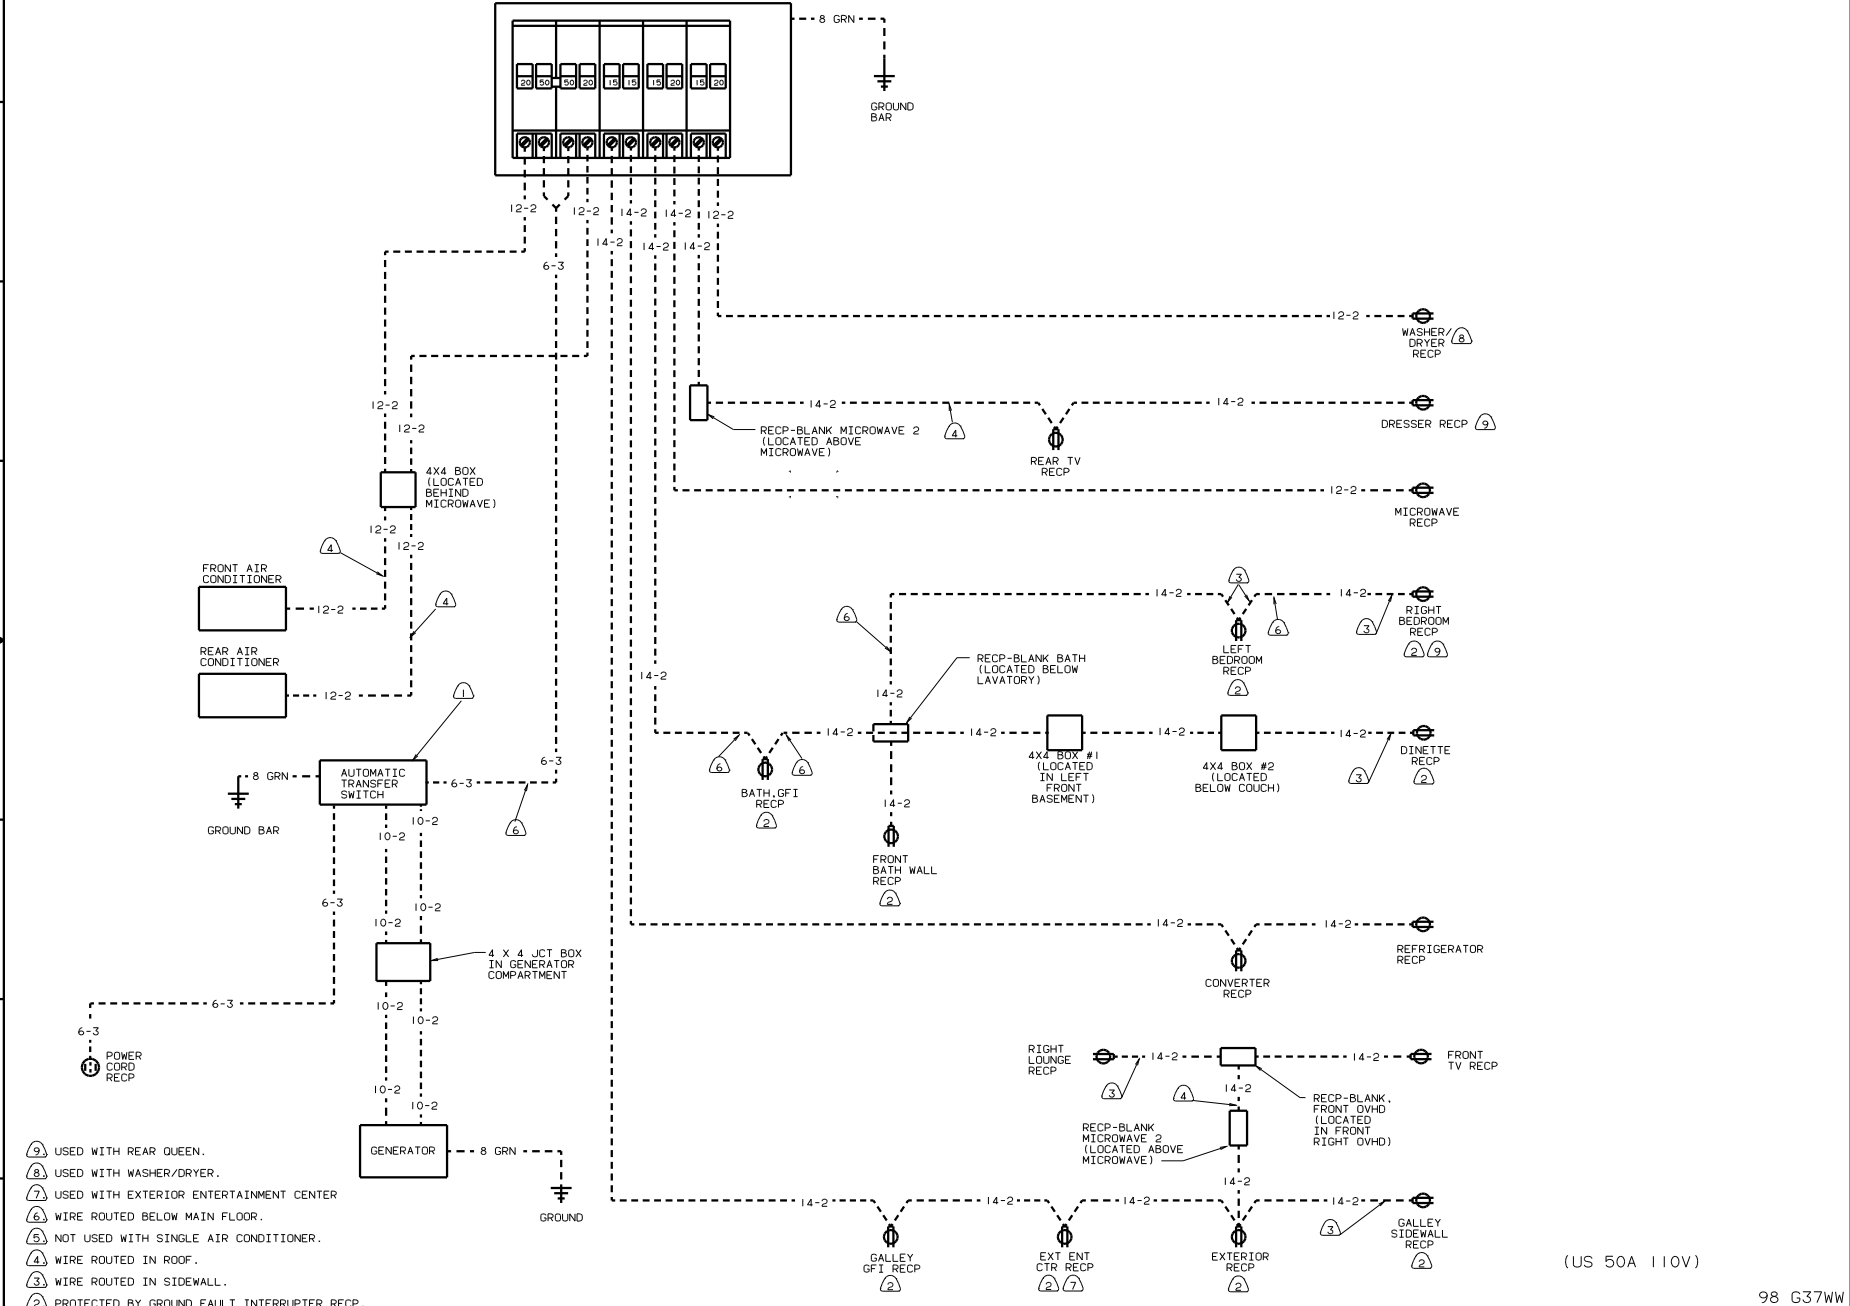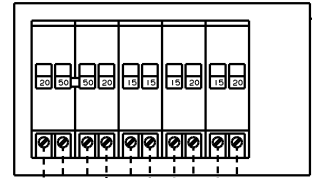




- (9) USED WITH REAR QUEEN.
 (8) USED WITH WASHER/DRYER.
 (7) USED WITH EXTERIOR ENTERTAINMENT CENTER
 (6) WIRE ROUTED BELOW MAIN FLOOR.
 (5) NOT USED WITH SINGLE AIR CONDITIONER.
 (4) WIRE ROUTED IN ROOF.
 (3) WIRE ROUTED IN SIDEWALL.
 (2) PROTECTED BY GROUND FAULT INTERRUPTER RECP.
 (1) SEE MANUFACTURER'S WIRING DIAGRAM FOR ADDITIONAL INFORMATION

(US 50A 110V)

98 G37WW

TITLE		WIRING DIAGRAM-BODY 110V	
NO. OF SHEETS	DATE	REV.	NO.
2 OF 3		1	1
SHEET		127470	

 CONTROL CENTER BREAKER PANEL

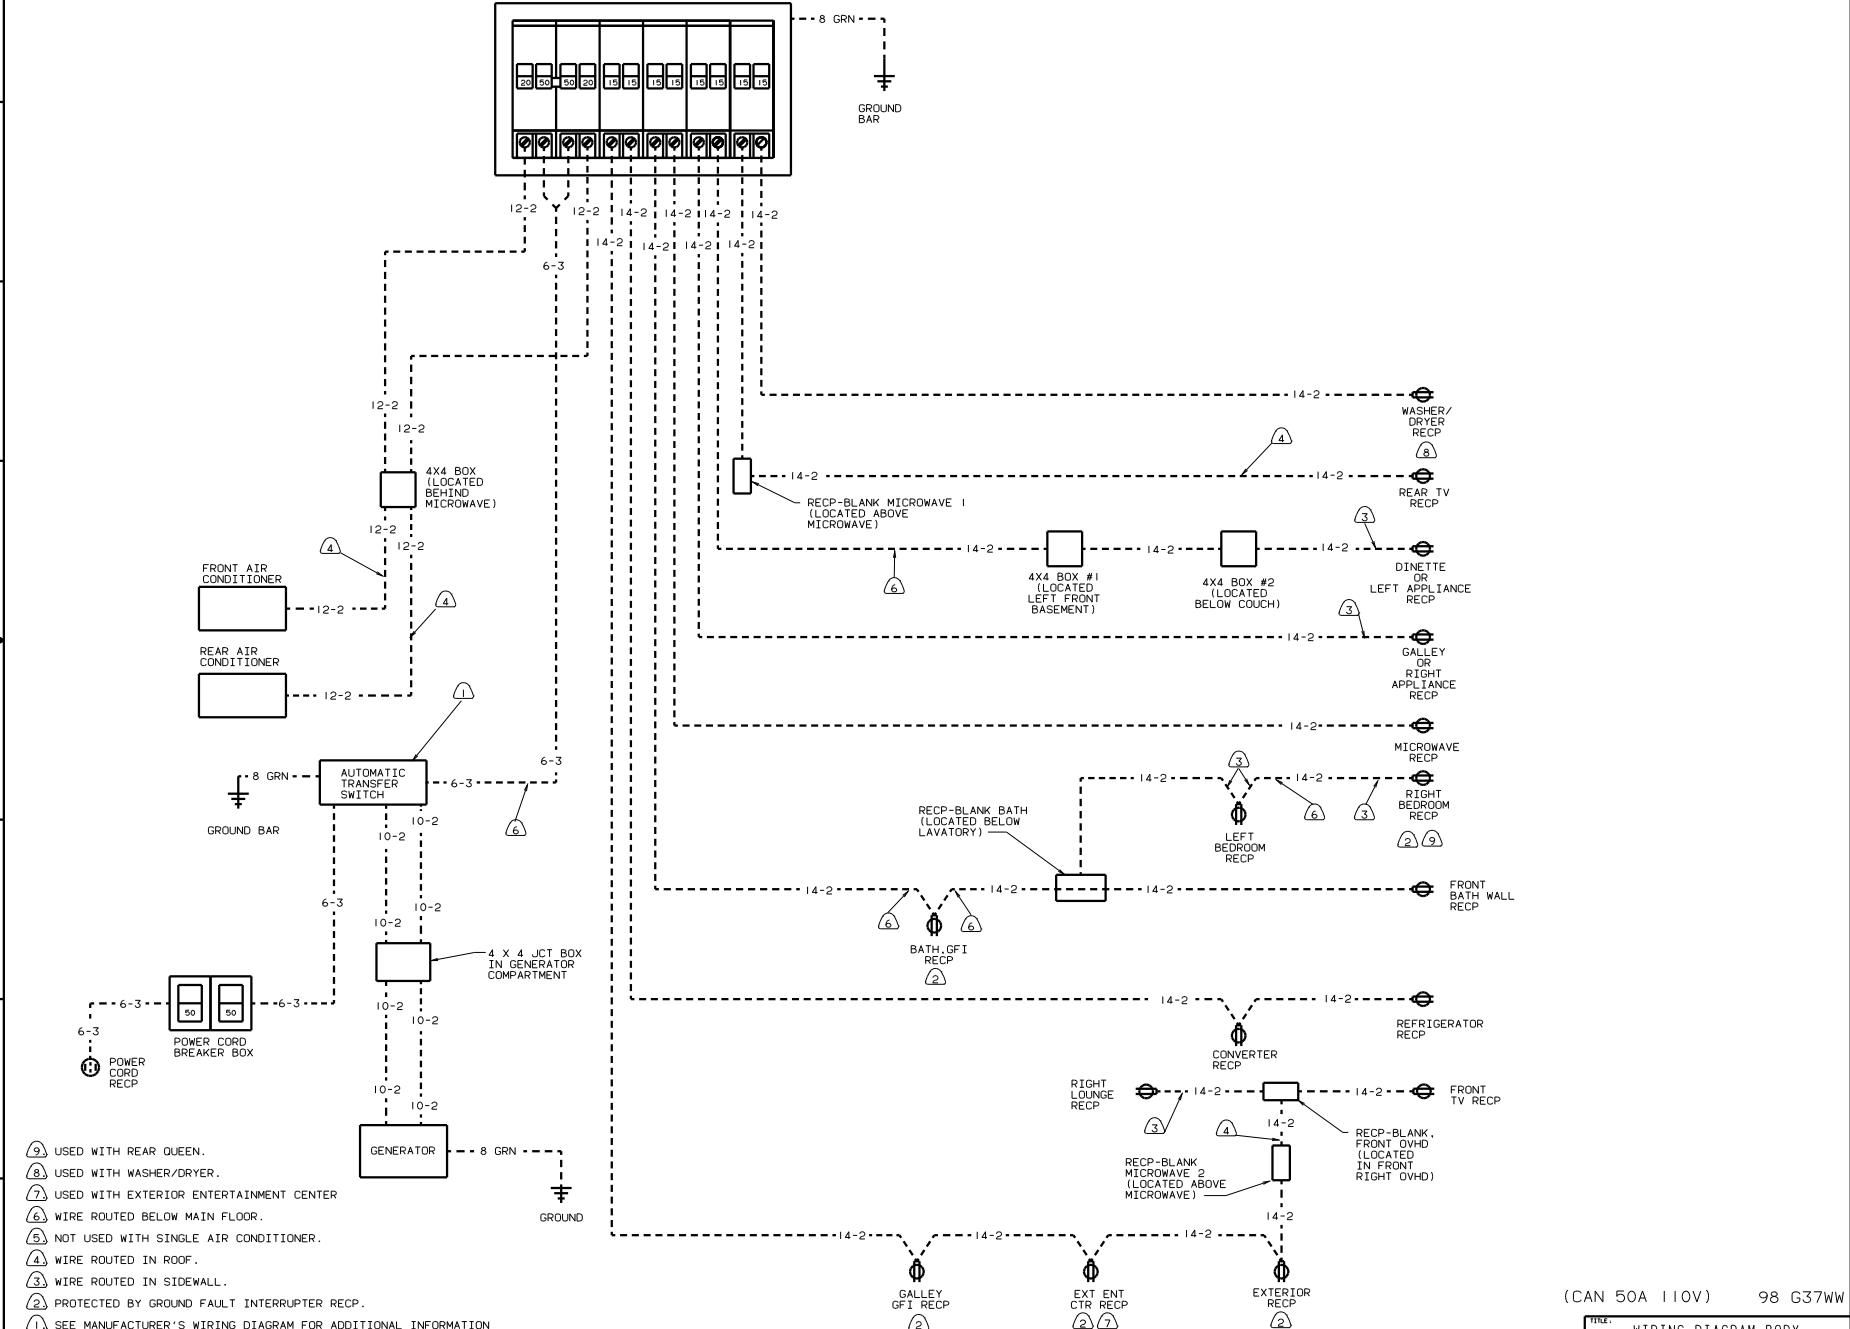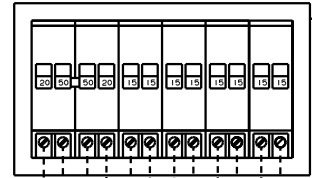

- (9) USED WITH REAR QUEEN.
- (8) USED WITH WASHER/DRYER.
- (7) USED WITH EXTERIOR ENTERTAINMENT CENTER
- (6) WIRE ROUTED BELOW MAIN FLOOR.
- (5) NOT USED WITH SINGLE AIR CONDITIONER.
- (4) WIRE ROUTED IN ROOF.
- (3) WIRE ROUTED IN SIDEWALL.
- (2) PROTECTED BY GROUND FAULT INTERRUPTER RECP.
- (1) SEE MANUFACTURER'S WIRING DIAGRAM FOR ADDITIONAL INFORMATION

(CAN 50A 110V) 98 G37WW

TITLE: WIRING DIAGRAM-BODY	
30 MIN SCALE: 1/8" = 1'-0"	REV: 1/1
SHEET 3 OF 3	NO. 127470