




DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

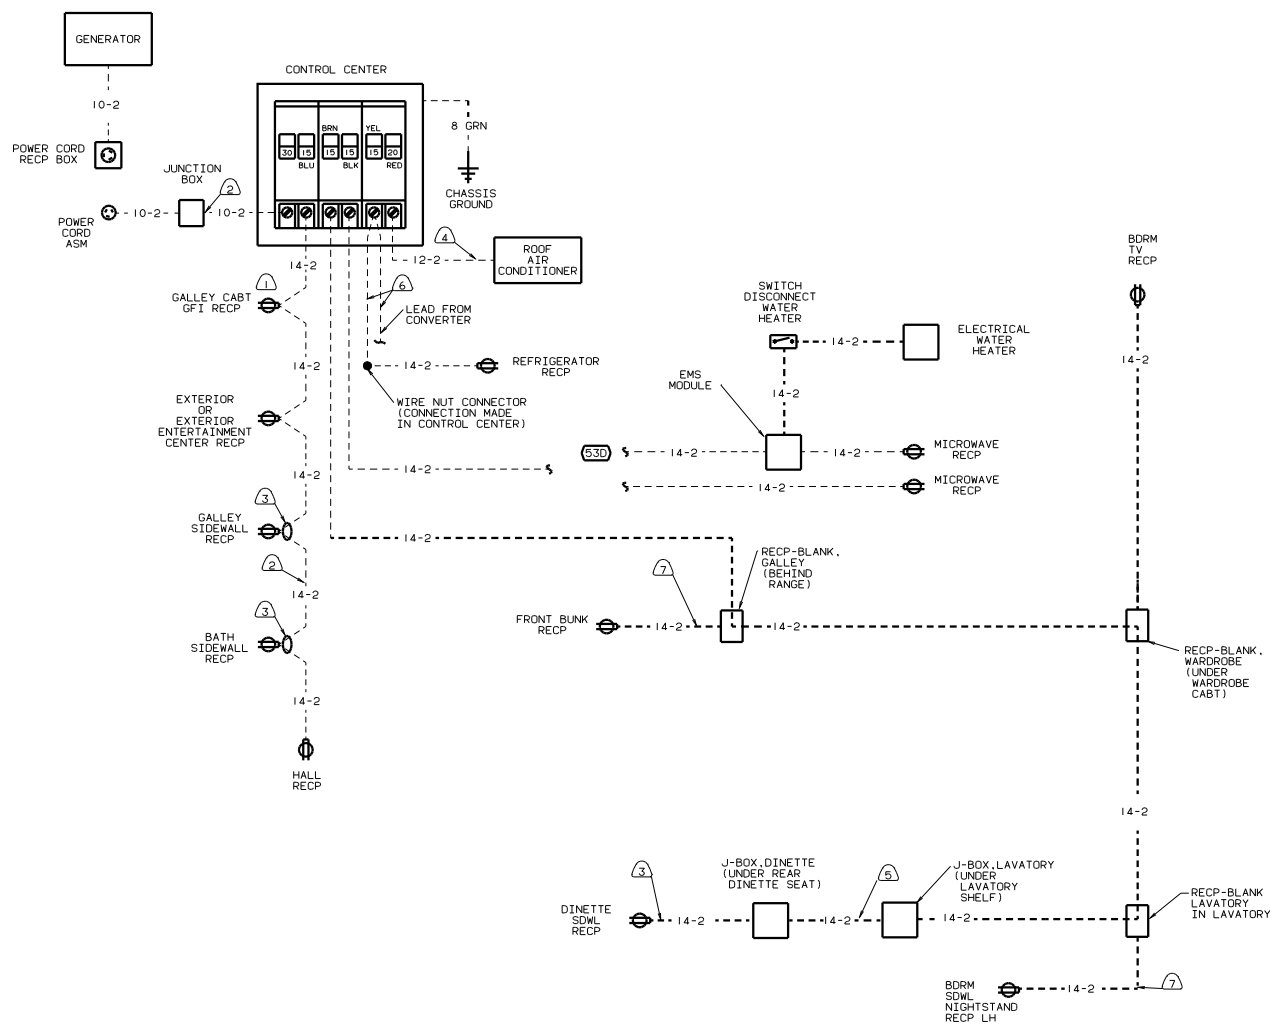

- NOTES:
- ⑦ WIRE ROUTED IN SIDEWALL
 - ⑥ LEAD SUPPLIED WITH CONVERTER.
 - ⑤ FLEXIBLE CORD FOR SLIDEOUT.
 - ④ WIRE ROUTED THRU ROOF.
 - ③ WIRE ROUTED THRU SIDEWALL.
 - ② WIRE ROUTED THRU FLOOR.
 - ① ALL OUTLETS DOWN STREAM AND INCLUDING THIS OUTLET ARE GROUND FAULT INTERRUPT PROTECTED.

- ⑦8A TV-13" W/VCP-12V
- ⑤3D WTR HTR-6GAL/ELE/LP/MOTORAID
- ④2D TV-25" W/VIDEO SELECTION SYS
- ①H3 TV-25"/VIDEO SEL/SGL BUNK
- ②6S CODES/STANDARDS-CSA/CMVSS
- ①2D ELECTRICAL SYSTEM 30 AMP
- ①B1 CODES/STANDARDS USA

01 431C			
OF 10	DATE	UNSPECIFIED TOLERANCES ARE:	MATERIAL
CHP	DATE	HALF DIM (X)	
D/E	DATE	ONE-PLACE (X,XX)	
D/E	DATE	TWO-PLACE (X,XX)	
D/E	DATE	ANGLE	
CDR	DATE	INDIC. W/ANGLE	
		PROJECTION	
LAYOUT: _____ TITLE: WIRING DIAGRAM-BODY 110V		SHEET 1 OF 1	
REV #	SCALE	NOTE	FIG. NO.
		DO NOT SCALE DIMENSIONS	135356
ALL DIMENSIONS ARE IN MILLIMETERS		SHEET 1 OF 1	