




DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.




CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

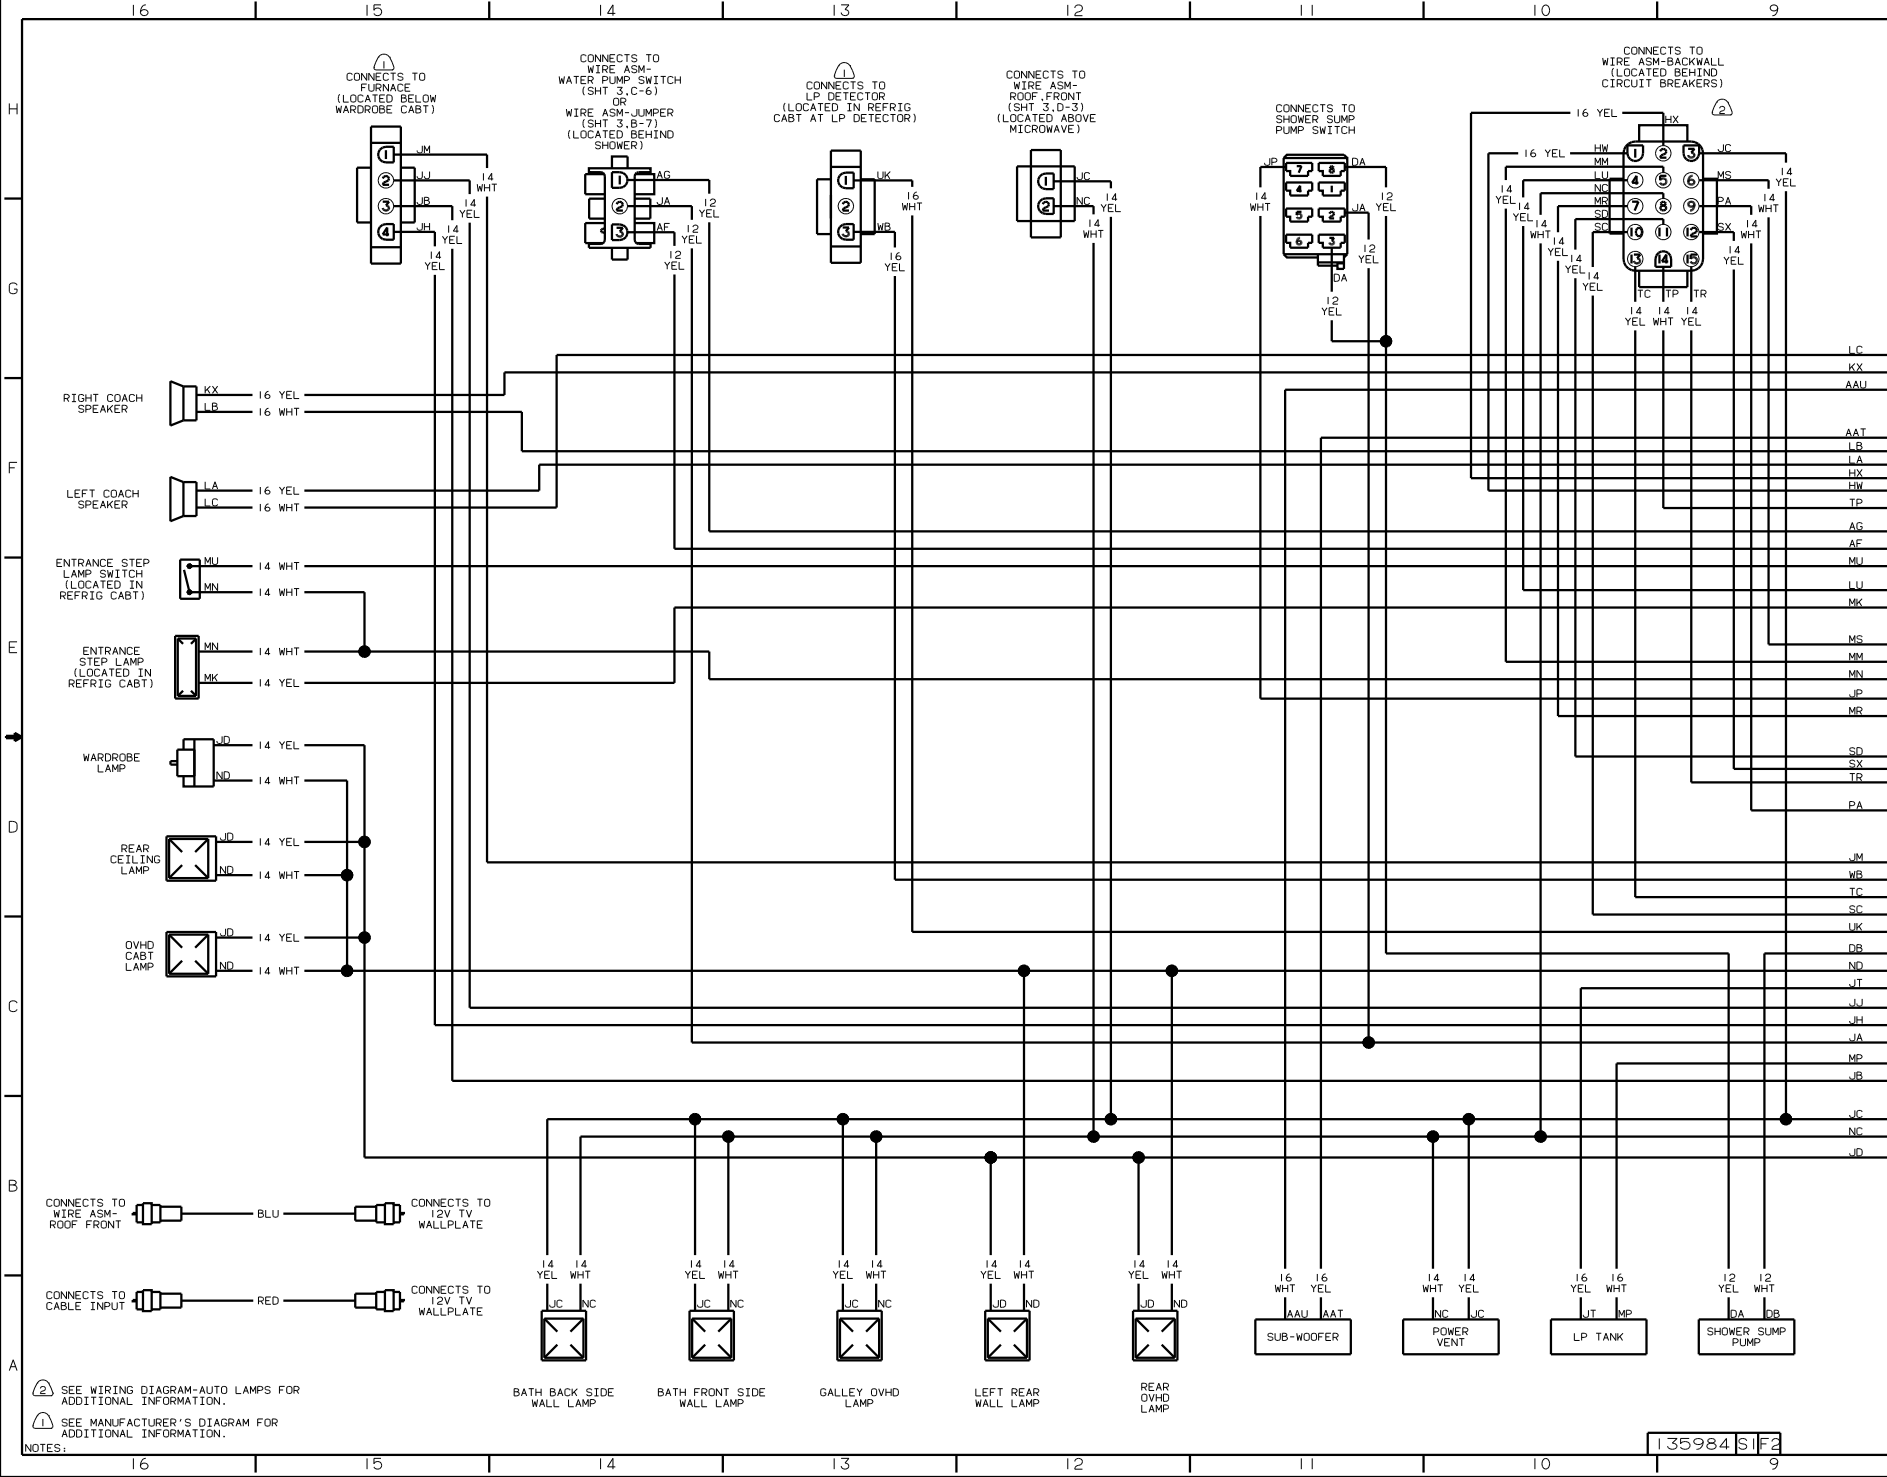

(2) SEE WIRING DIAGRAM-AUTO LAMPS FOR ADDITIONAL INFORMATION.
 (1) SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.

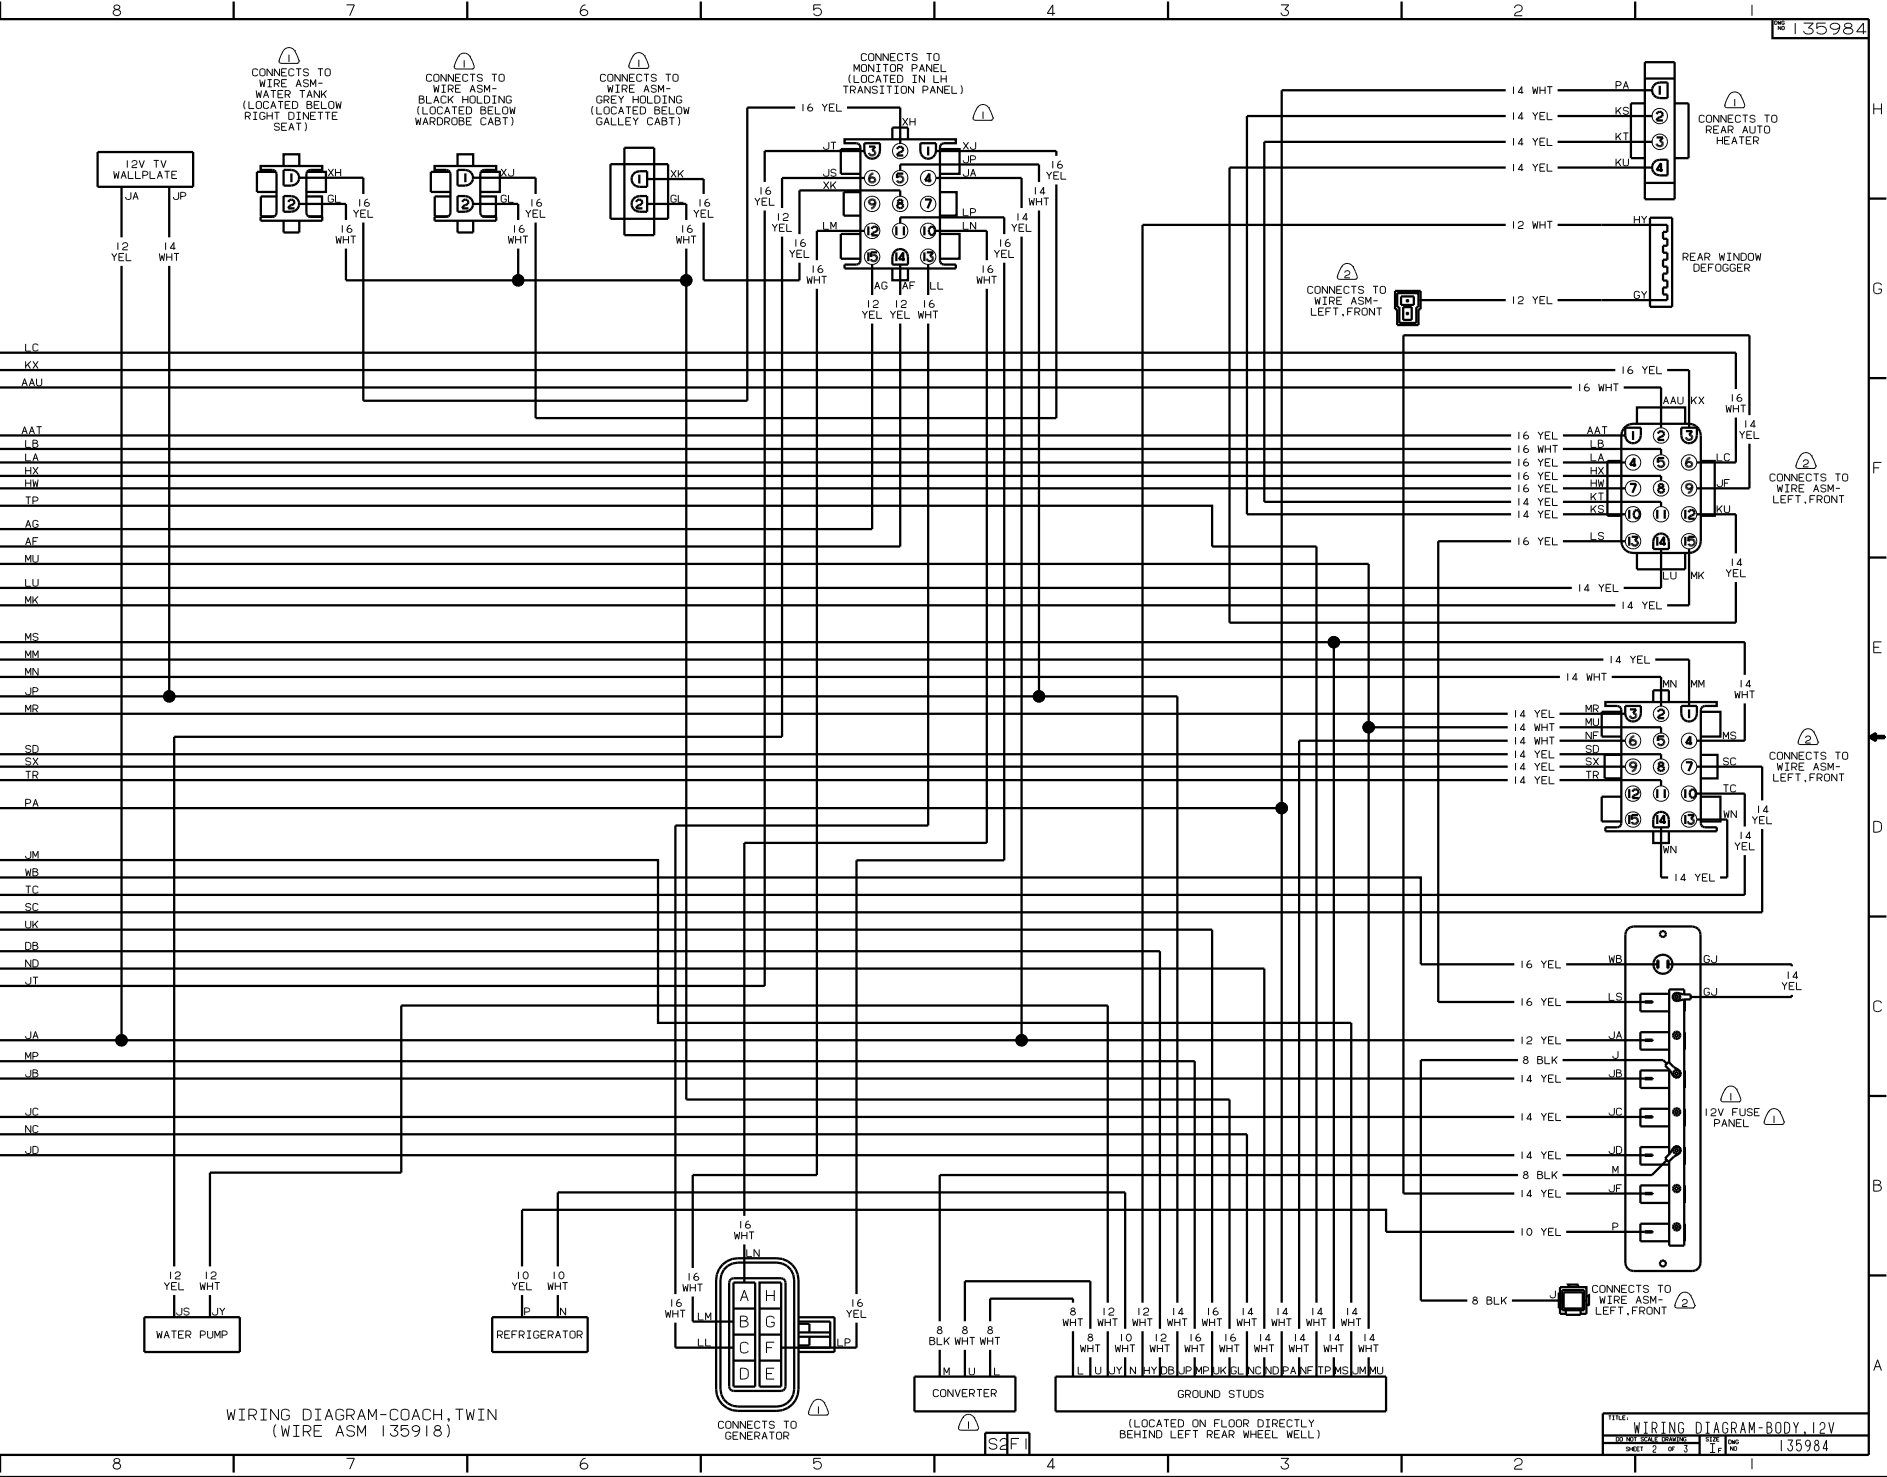

CONNECTS TO WIRE ASM- WATER TANK (LOCATED BELOW RIGHT DINETTE SEAT)

CONNECTS TO WIRE ASM- BLACK HOLDING (LOCATED BELOW WARDROBE CABT)

CONNECTS TO WIRE ASM- GREY HOLDING (LOCATED BELOW GALLEY CABT)

CONNECTS TO MONITOR PANEL (LOCATED IN LH TRANSITION PANEL)

CONNECTS TO WIRE ASM- LEFT, FRONT

CONNECTS TO REAR AUTO HEATER

CONNECTS TO WIRE ASM- LEFT, FRONT

CONNECTS TO WIRE ASM- LEFT, FRONT


CONNECTS TO WIRE ASM- LEFT, FRONT

WIRING DIAGRAM-COACH TWIN (WIRE ASM 135918)


CONNECTS TO GENERATOR

CONVERTER (LOCATED ON FLOOR DIRECTLY BEHIND LEFT REAR WHEEL WELL)


WIRING DIAGRAM-BODY 12V

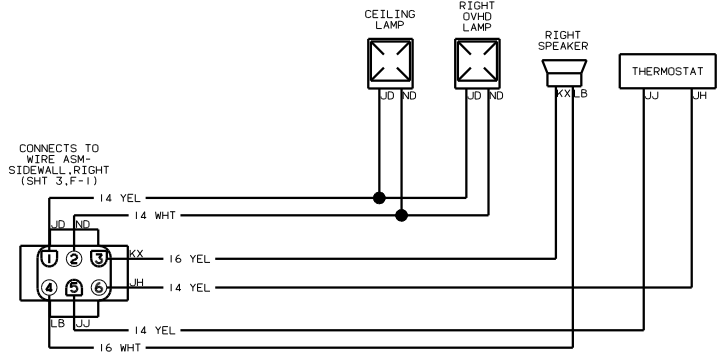

WIRING DIAGRAM-OVHD (WIRE ASM 119701)

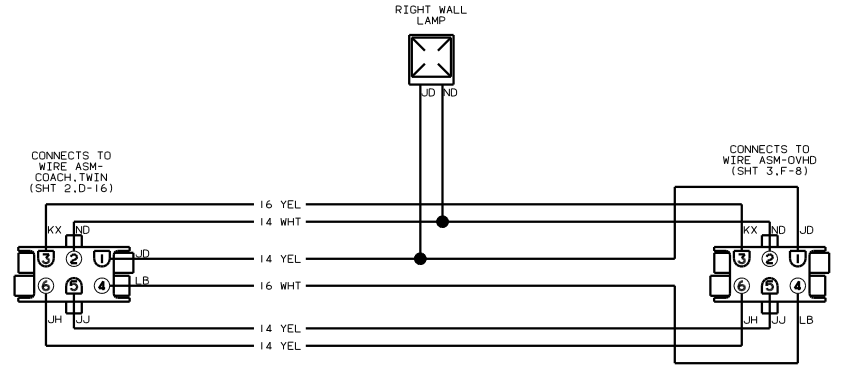



WIRING DIAGRAM-SIDEWALL, RIGHT (WIRE ASM 119702)

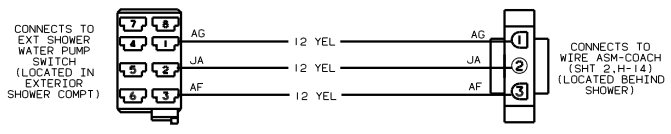

WIRING DIAGRAM WATER PUMP, SWITCH (WIRE ASM 103494-04) (WITH EXTERIOR SHOWER)



  WIRING DIAGRAM-ROOF, FRONT (WIRE ASM 133878)



WIRING DIAGRAM-JUMPER (WIRE ASM 103493) (WITHOUT EXTERIOR SHOWER)