




DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

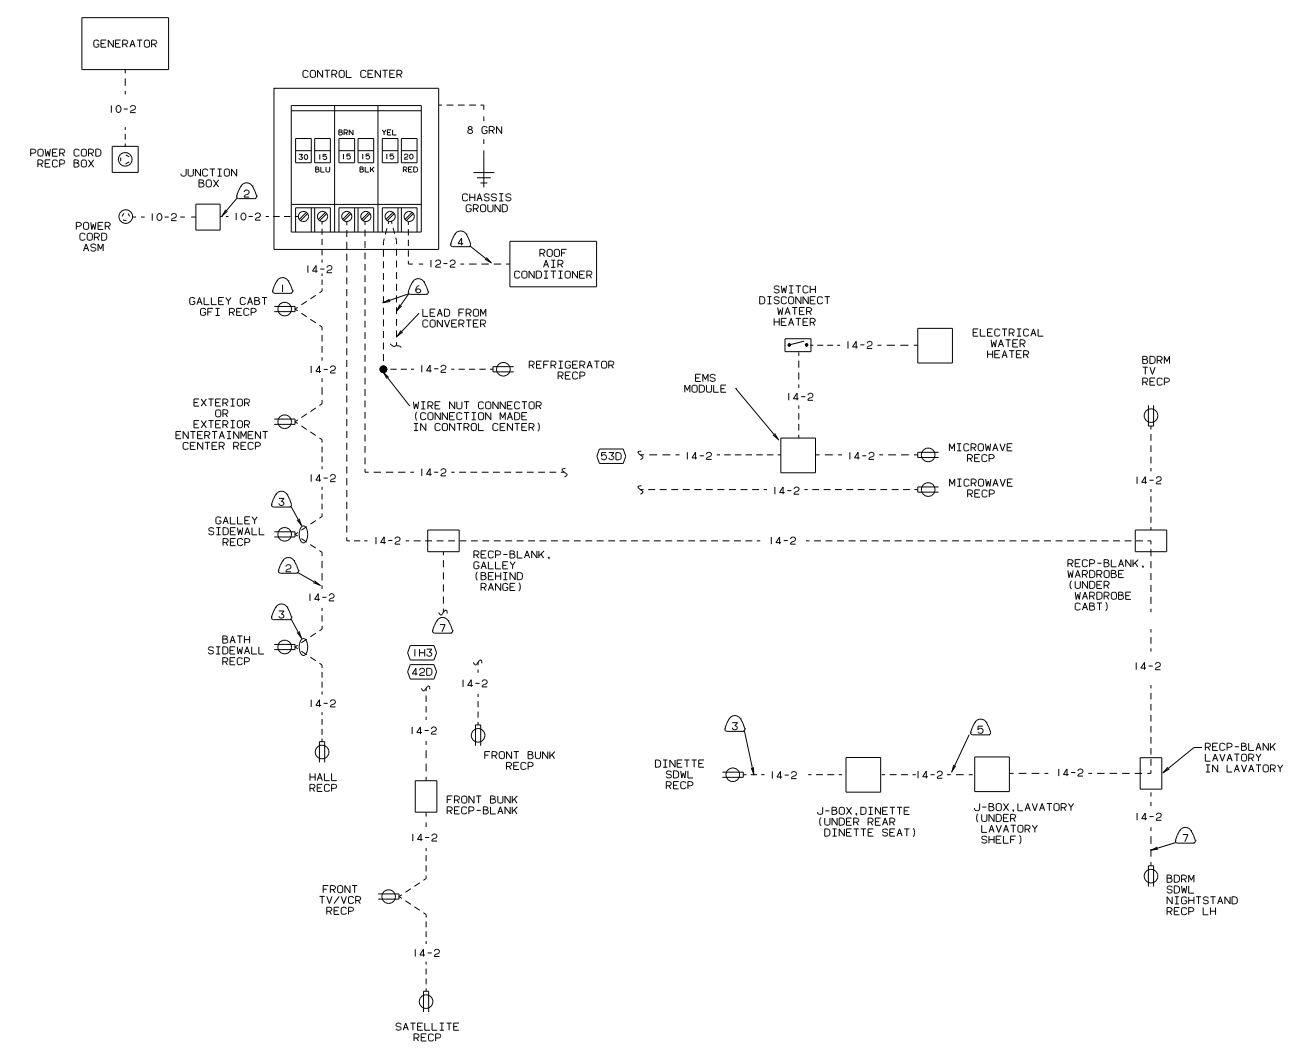

- NOTES:
- ① ALL OUTLETS DOWN STREAM AND INCLUDING THIS OUTLET ARE GROUND FAULT INTERRUPT PROTECTED.
 - ② WIRE ROUTED THRU FLOOR.
 - ③ WIRE ROUTED THRU SIDEWALL.
 - ④ WIRE ROUTED THRU ROOF.
 - ⑤ FLEXIBLE CORD FOR SLIDEOUT.
 - ⑥ LEAD SUPPLIED WITH CONVERTER.
 - ⑦ WIRE ROUTED IN SIDEWALL

- (530) WTR HTR-66AL/ELE/LP/MOTORAID
- (42D) TV-25" W/VIDEO SELECTION SYS
- (1H3) TV-25" W/VIDEO SEL/SGL BUNK
- (265) CODES/STANDARDS-CSA/CMVSS
- (12D) ELECTRICAL SYSTEM 30 AMP
- (1B1) CODES/STANDARDS USA

(1B1) (12D) (265)

WINNEBAGO 02 431C

| | | | |
|------|------|-----------------------------|----------|
| DATE | DATE | UNSPECIFIED TOLERANCES ARE: | MATERIAL |
| DATE | DATE | MAKE DIM. 1/16" | |
| DATE | DATE | ONE-PLACE 1/16" | |
| DATE | DATE | TWO-PLACE 1/16" | |
| DATE | DATE | THREE PLACE 1/16" | |
| DATE | DATE | PROF. ANGLE | |
| DATE | DATE | INDUCTOR | |

WIRING DIAGRAM-BODY 110V
 SHEET 1 OF 1 I.E. NO. 13921A