



DANGER

 
Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.




CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

LEFT MIRROR
 (IN LEFT SIDEWALL)




RIGHT MIRROR
 (IN RIGHT SIDEWALL)

 

MG NS NR NN PN MG NS PN PP PR

 
DOME LAMP



D7-MN 14 WHT
 D8-CCU 16 YEL

CONNECTS TO WH IP CONVENIENCE CENTER

WIRING DIAGRAM-MAIN, WH
 (WIRE ASM 138093)

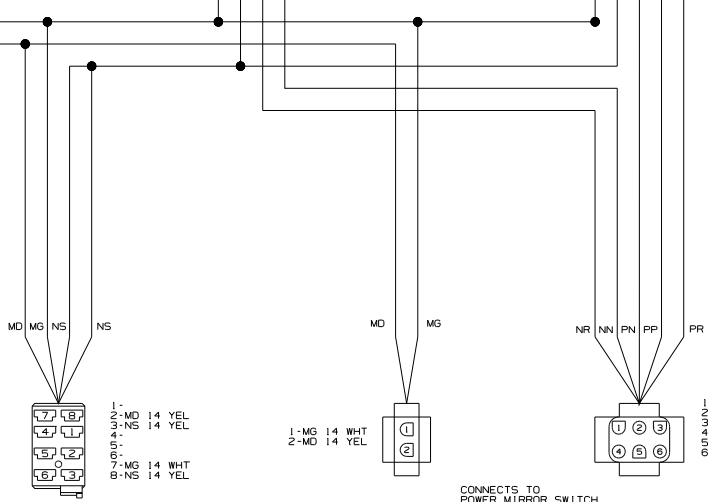

CONNECTS TO MIRROR HEATER SWITCH (IN DRIVER'S CONSOLE)

CONNECTS TO POWER MIRROR SWITCH (IN DRIVER'S CONSOLE)

WINNEBAGO

DTR DATE 12/06/00
 CHR ALL DIMENSIONS ARE IN MILLIMETERS
 P.E.
 M.E. FIRST USED
 DSWR 02 D-SERIES


UNSPECIFIED TOLERANCES ARE: MATERIAL:
 BRASS DIM 100 ± .1
 ONE-PIECE 15-.81 ± .05
 TWO-PIECE 15-.801 ± .05
 ANGLE ± .5


THIRD ANGLE PROJECTION

DO NOT SCALE DRAWING


TITLE: WIRING DIAGRAM-AUTO
 SHEET 1 OF 3 PART NO 137861

REF: 1 PAGE 1

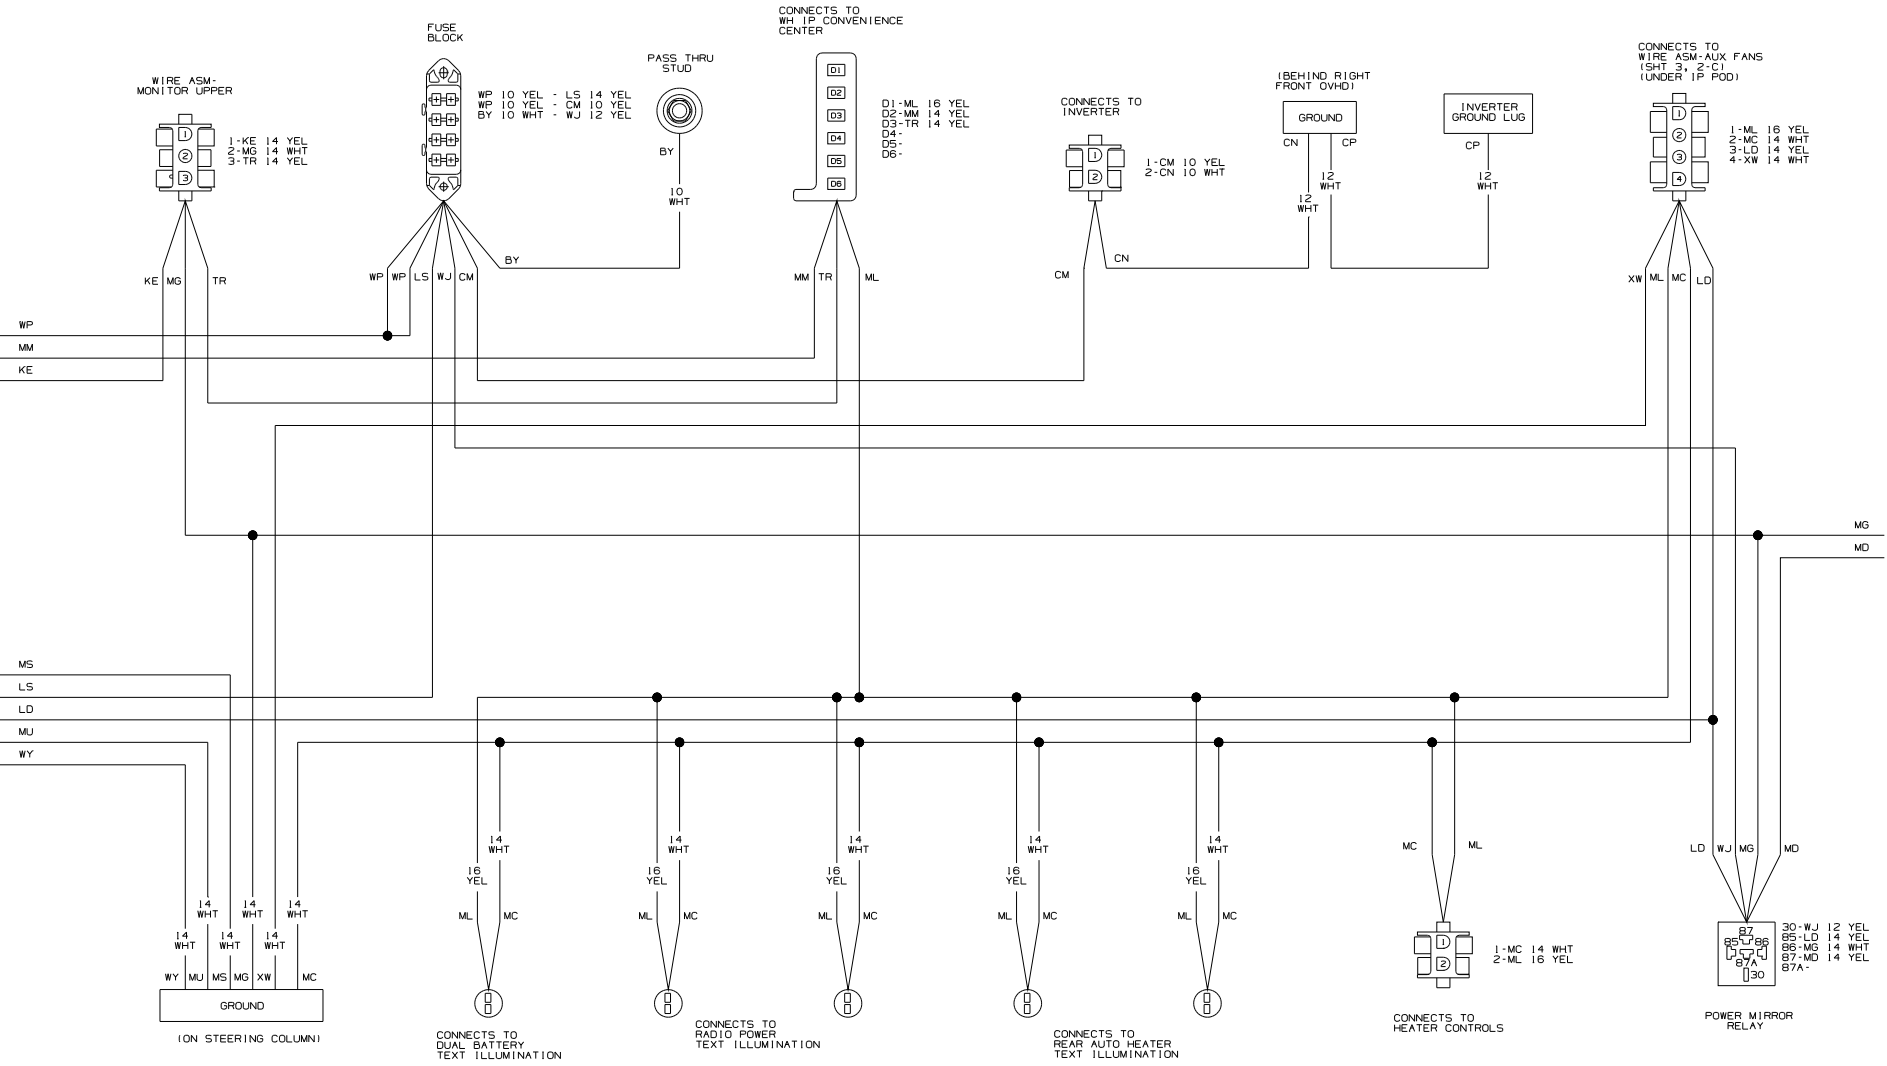

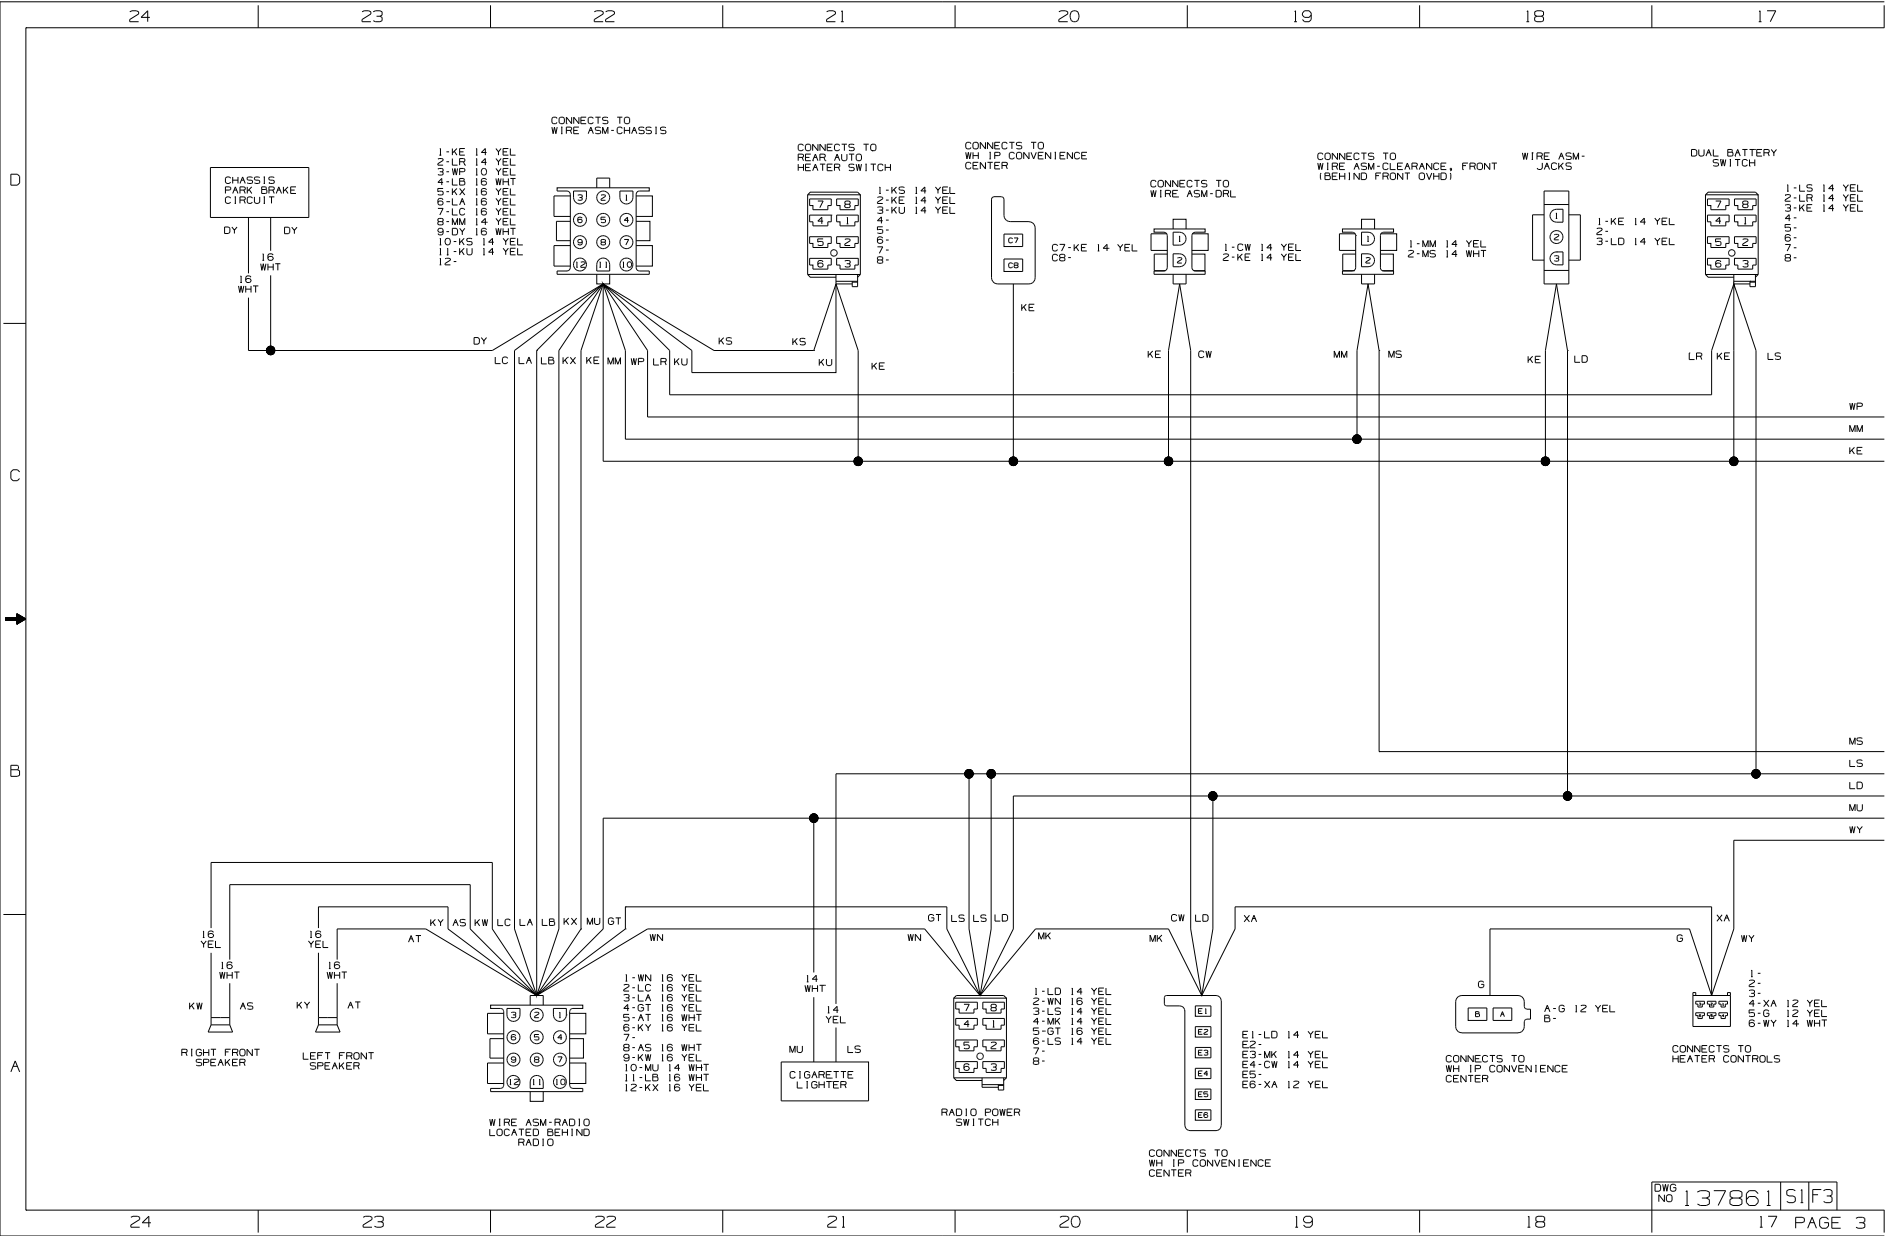

 CONNECTS TO
WIRE ASM-AUX FANS
(SHT 3, 2-C)
(UNDER IP POD)



- 1-ML 16 YEL
- 2-MC 14 WHT
- 3-LD 14 YEL
- 4-XW 14 WHT

XW ML MC LD

CONNECTS TO
LEFT MIRROR
(IN LEFT SIDEWALL)



- 1- 2-MG 14 WHT
- 2- 3-NS 14 YEL
- 3- 4-NN 16 YEL
- 4- 5-PN 16 WHT
- 5- 6-NR 16 YEL

MS NS NR NN PN

CONNECTS TO
RIGHT MIRROR
(IN RIGHT SIDEWALL)

 


- 1- 2-MG 14 WHT
- 2- 3-NS 14 YEL
- 3- 4-PP 16 YEL
- 4- 5-PN 16 WHT
- 5- 6-PR 16 YEL

MG NS PN PP PR

XW
WJ
MG
ML
LD
MC


LD WJ MG MD



POWER MIRROR RELAY

- 30-WJ 12 YEL
- 85-LD 14 YEL
- 86-MG 14 WHT
- 87-MD 14 YEL
- 87A- 14 YEL

 MD MG NS NS



CONNECTS TO
MIRROR HEAT SWITCH
(IN DRIVER'S CONSOLE)

- 1- 2-MD 14 YEL
- 2- 3-NS 14 YEL
- 3- 4- 14 YEL
- 4- 5- 14 YEL
- 5- 6- 14 YEL
- 6- 7-MG 14 WHT
- 7- 8-NS 14 YEL

 
- 1-MG 14 WHT
- 2-MD 14 YEL



CONNECTS TO
POWER MIRROR SWITCH
(IN DRIVER'S CONSOLE)

MD MG


NR NN PN PP PR





- 1- 2-PP 16 YEL
- 2- 3-PR 16 YEL
- 3- 4-NN 16 WHT
- 4- 5-NS 16 YEL
- 5- 6-NR 16 YEL

WIRING DIAGRAM-MAIN,FD
(WIRE ASM 138131)


FIRST USED	02 D-SERIES
TITLE	DO NOT SCALE DRAWING
TITLE	WIRING DIAGRAM-AUTO
SHEET	2
PART NO	137861

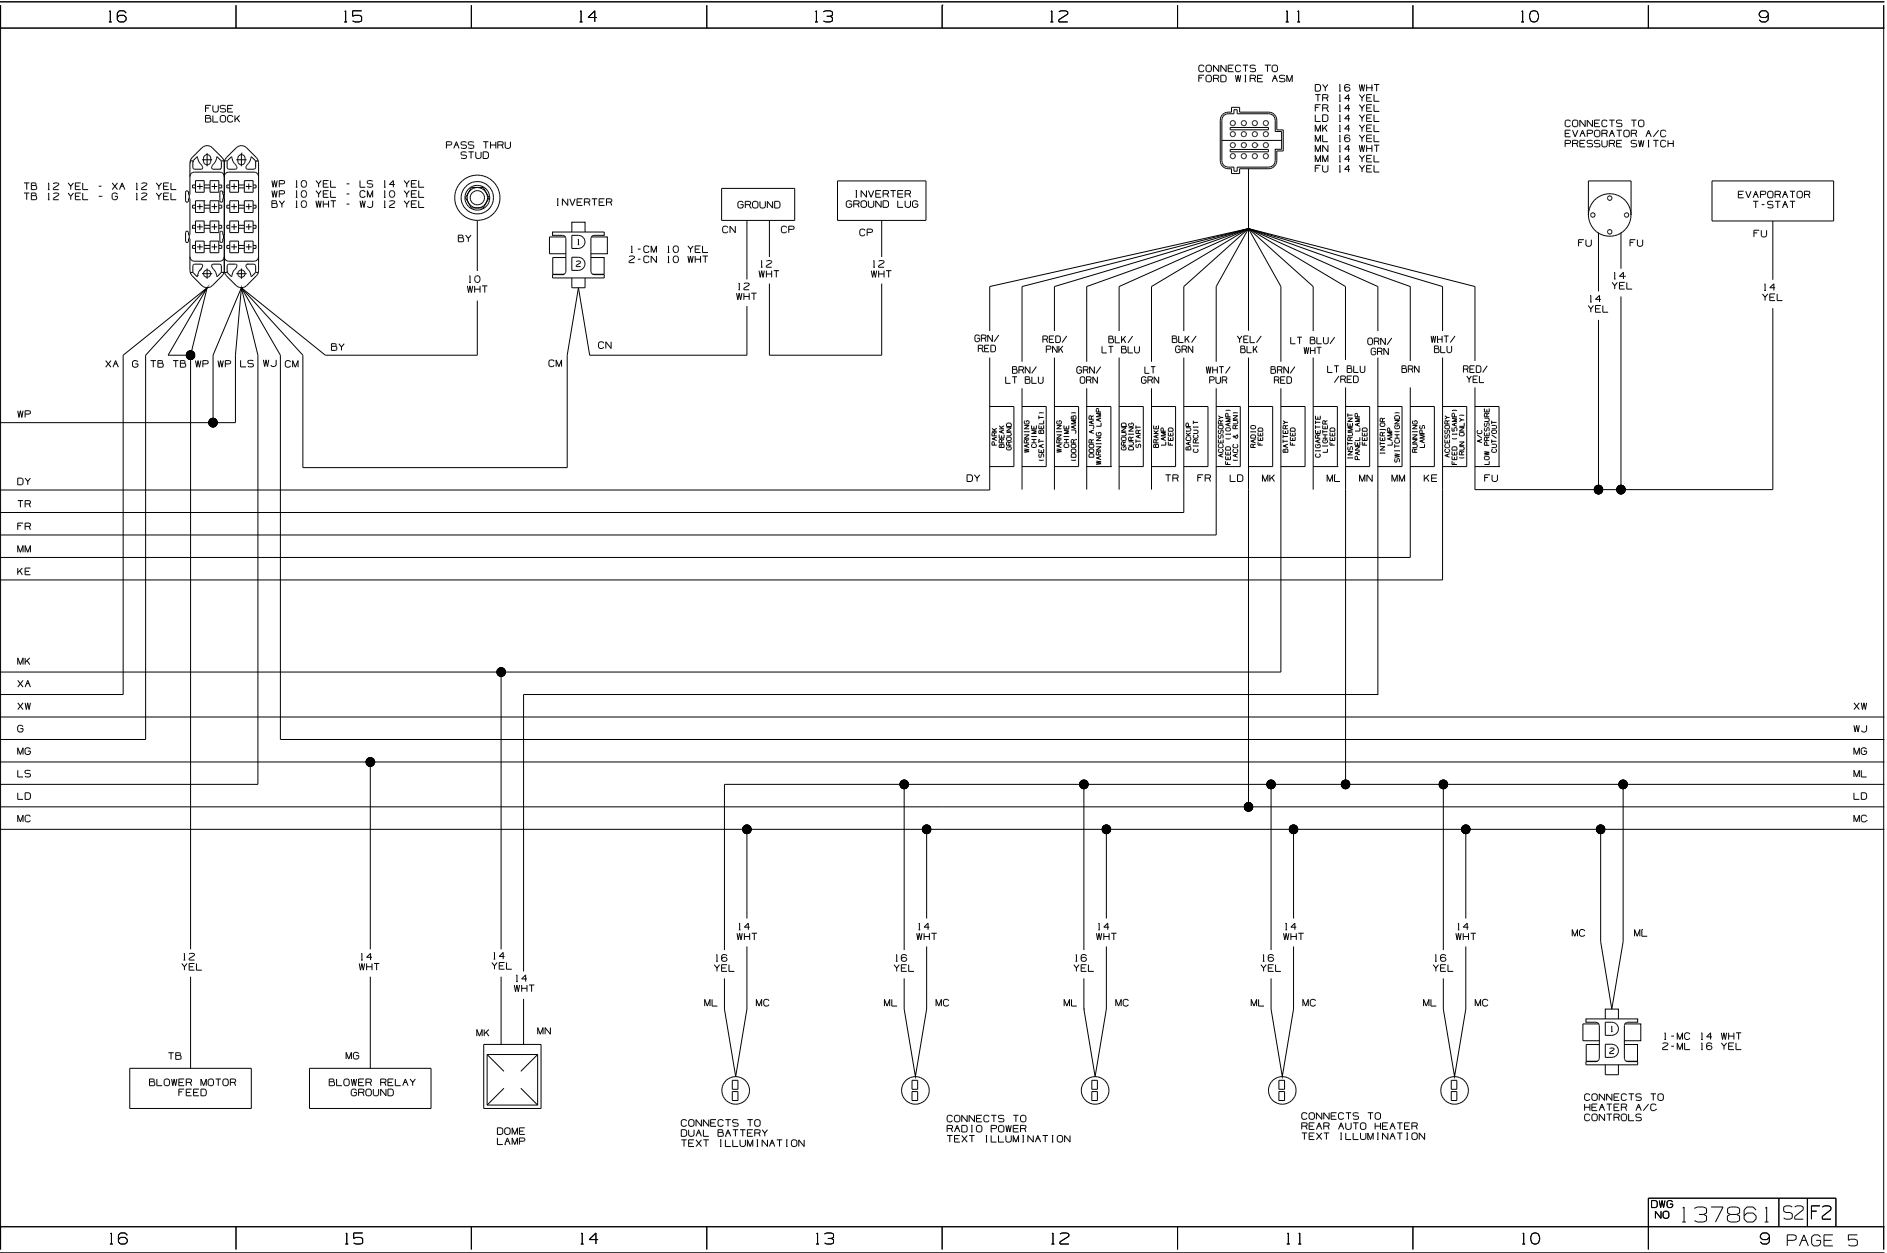

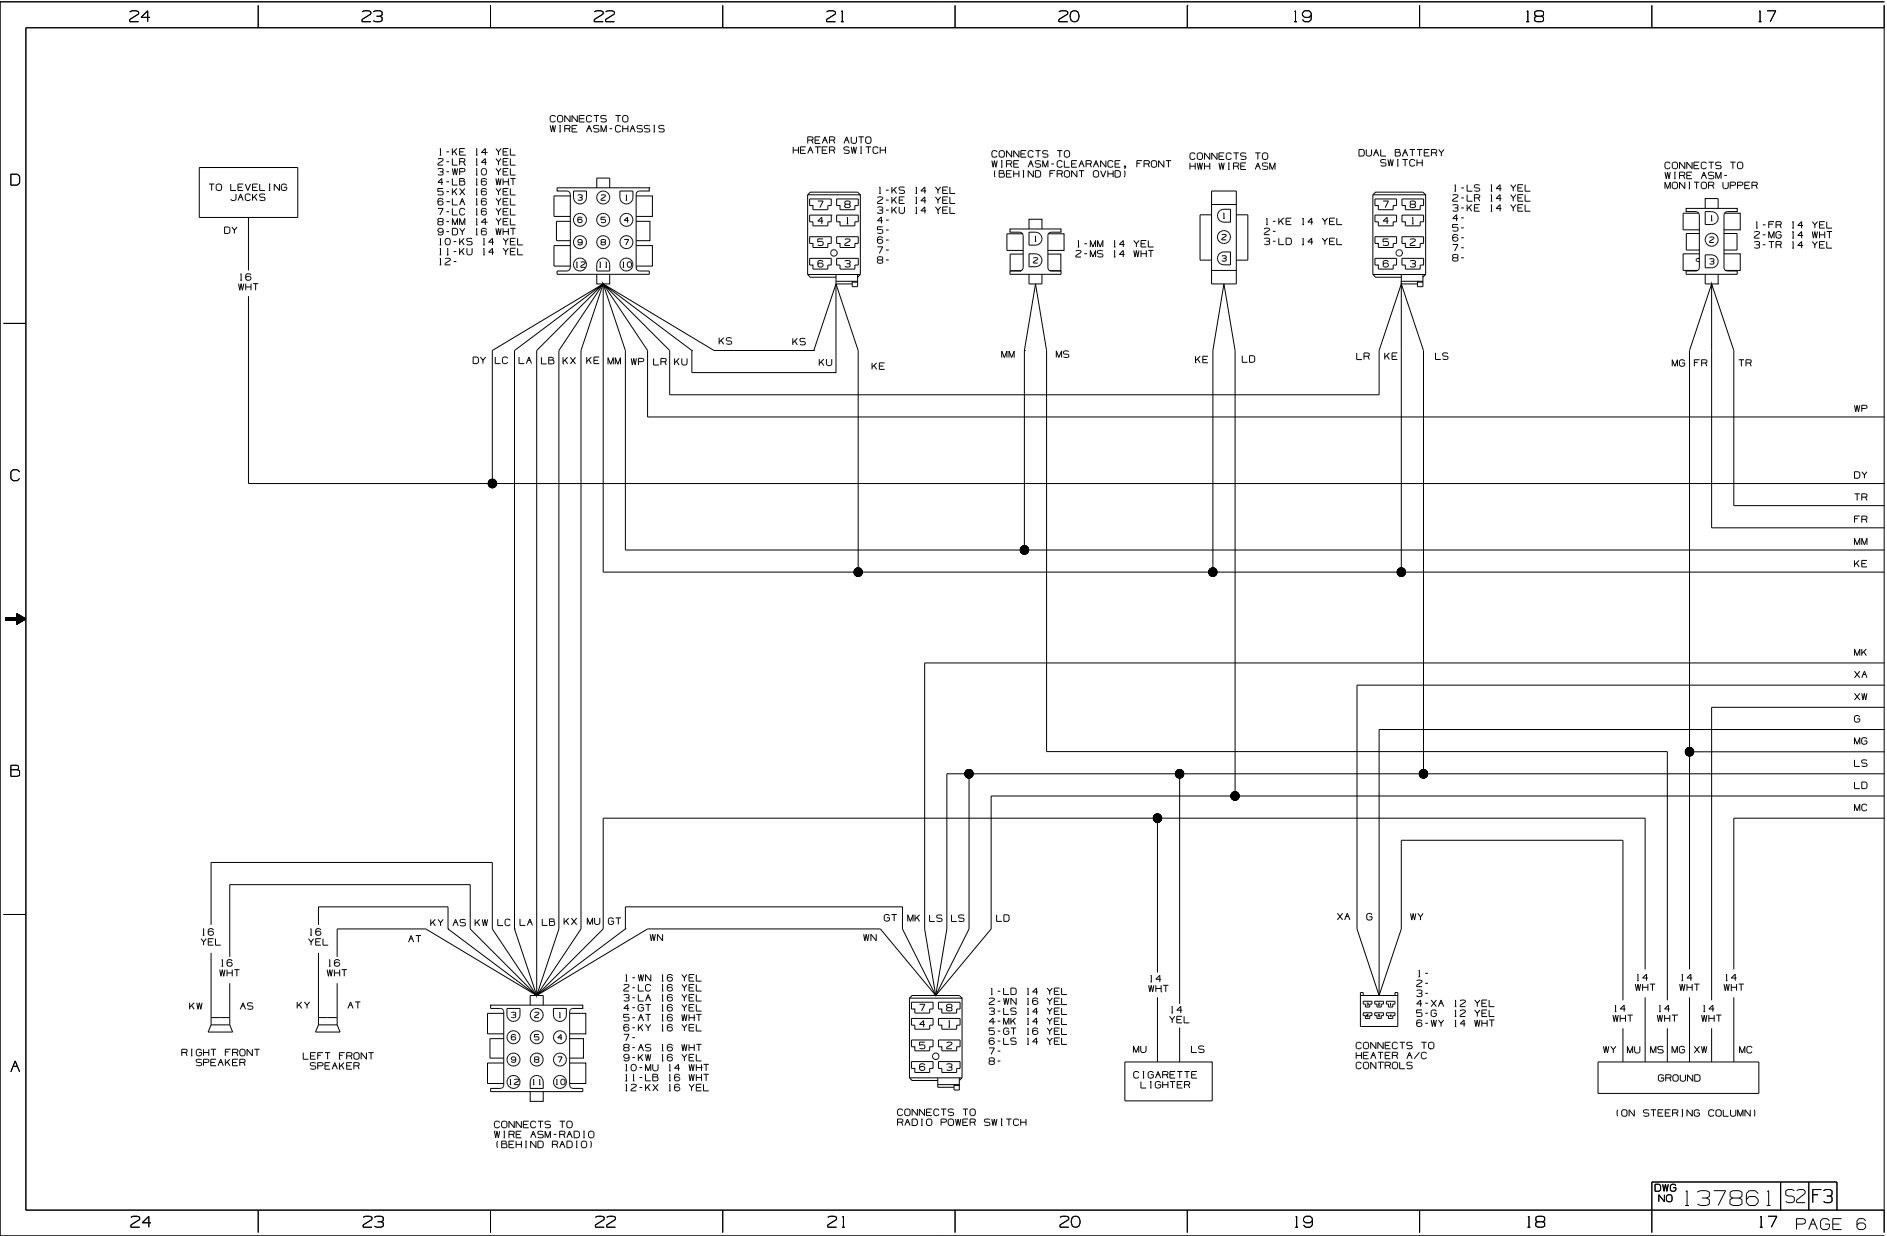


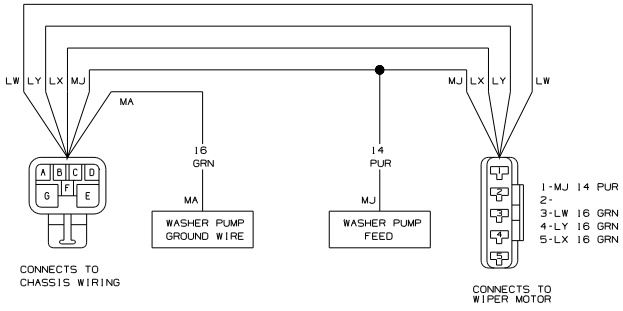

WIRING DIAGRAM-WIPER/WASHER
(WIRE ASM 113134)

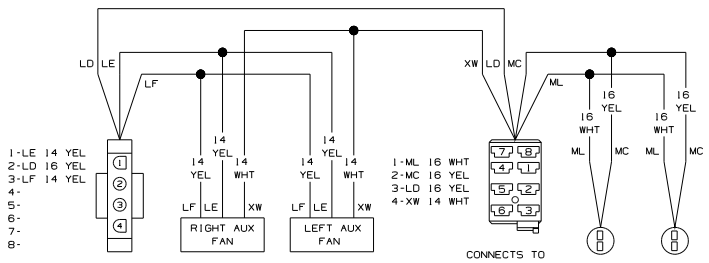

WIRING DIAGRAM-AUX FANS
(WIRE ASM 138235)

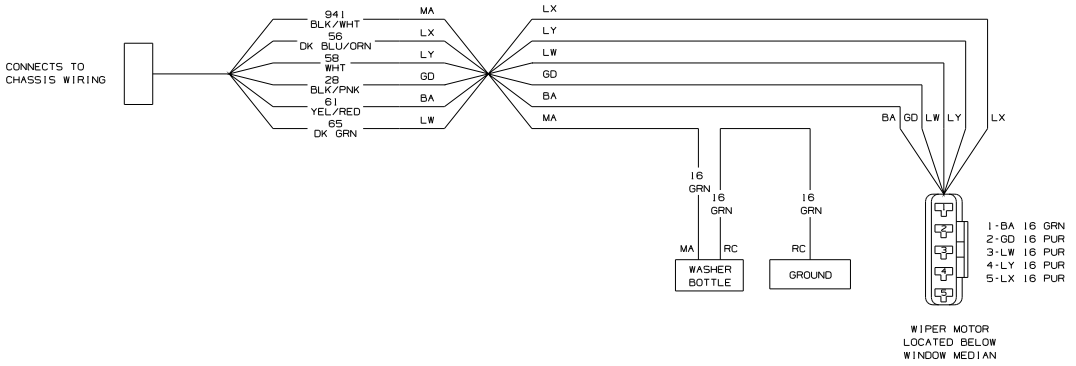

WIRING DIAGRAM-WIPER/WASHER
(WIRE ASM 111096)

FIRST USED	02 D-SERIES	
TITLE	DO NOT SCALE DRAWING	
	WIRING DIAGRAM-AUTO	
SHEET	3	PART NO 137861