




DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

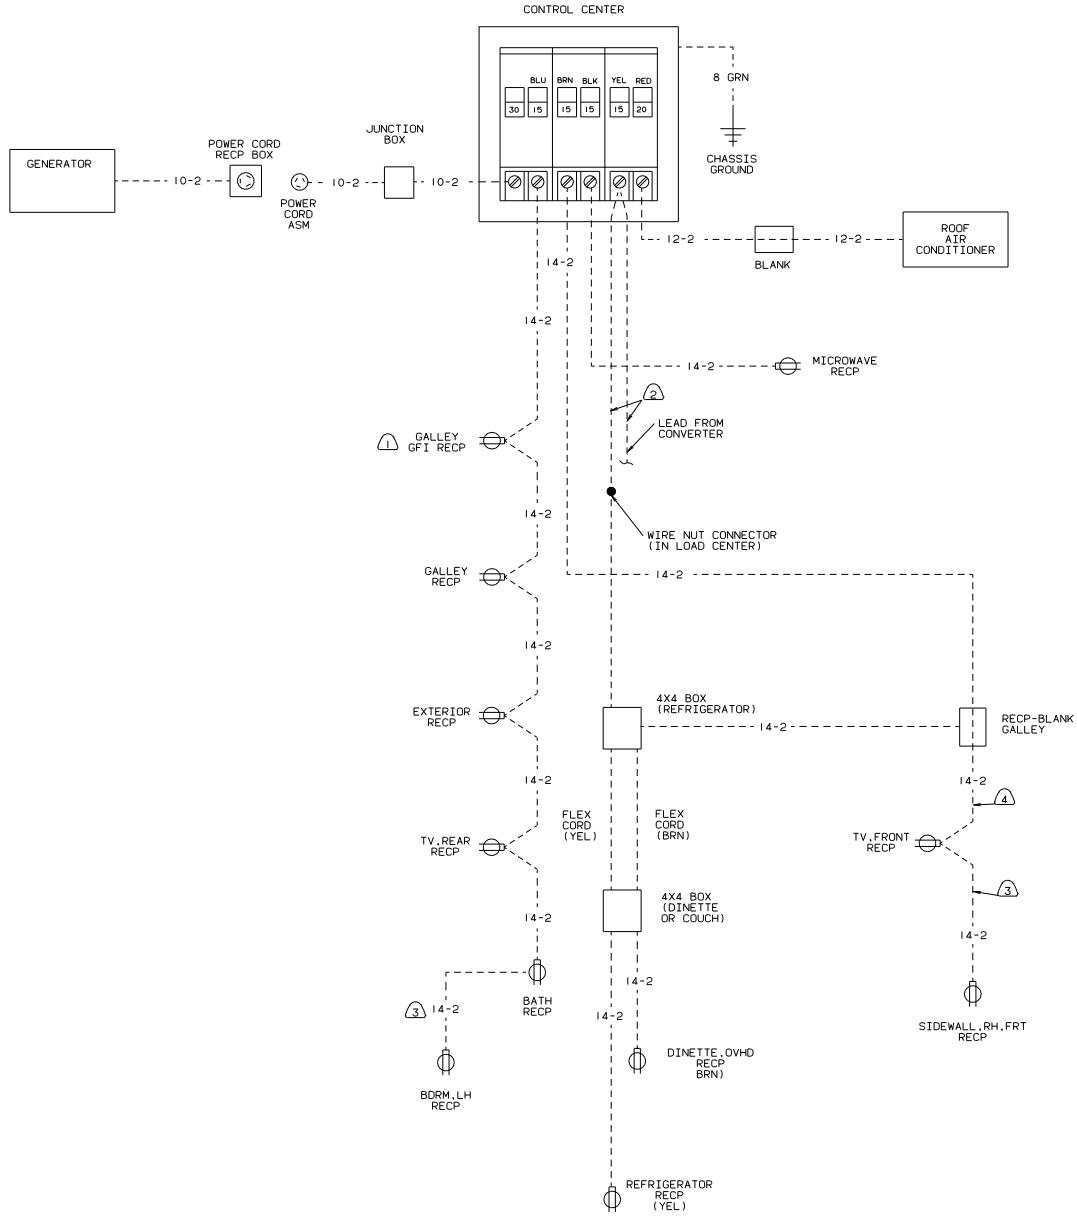

- ④ WIRE IN SIDEWALL.
- ③ WIRE IN ROOF.
- ② LEAD SUPPLIED WITH CONVERTER.
- ① ALL OUTLETS DOWN STREAM AND INCLUDING THIS OUTLET ARE GROUND FAULT INTERRUPT PROTECTED.

(265) CODES/STANDARDS-CSA/CMVSS
 (12D) ELECTRICAL SYSTEM 30 AMP
 (1B1) CODES/STANDARDS USA

(1B1)(12D)(265)

WIRING DIAGRAM-BODY, L110V 02 D27C

DATE	DATE	UNSPECIFIED TOLERANCES ARE:	MATERIAL
DATE	DATE	MAKE DIM. 1/16"	
DATE	DATE	2ND-PLACE 1/32"	
DATE	DATE	3RD-PLACE 1/64"	
DATE	DATE	THIRD ANGLE PROJECTION	
DATE	DATE		

LABOR NO. _____ TITLE _____
 DRA # _____ SCALE: NONE DO NOT SCALE DRAWING SIZE: 11" x 17" NO. _____
 ALL DIMENSIONS ARE IN MILLIMETERS SHEET 1 OF 2 I.E. NO. 137860