




DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.




CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

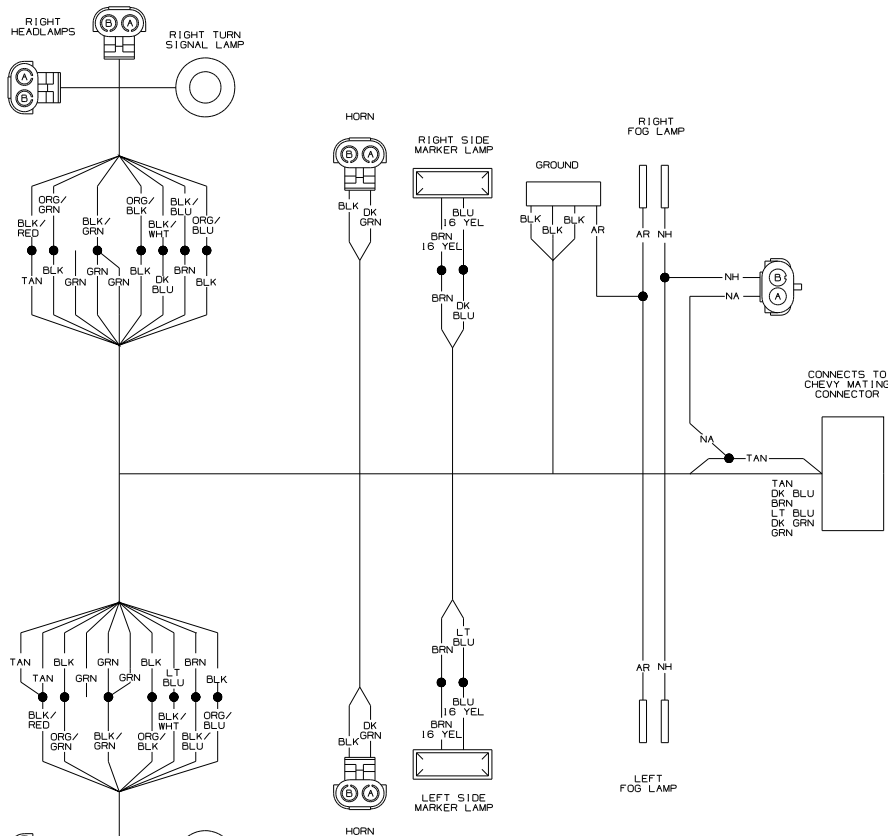

WIRING DIAGRAM-HEADLAMP
(WIRE_ASM 140540-02)
(1TASCA)

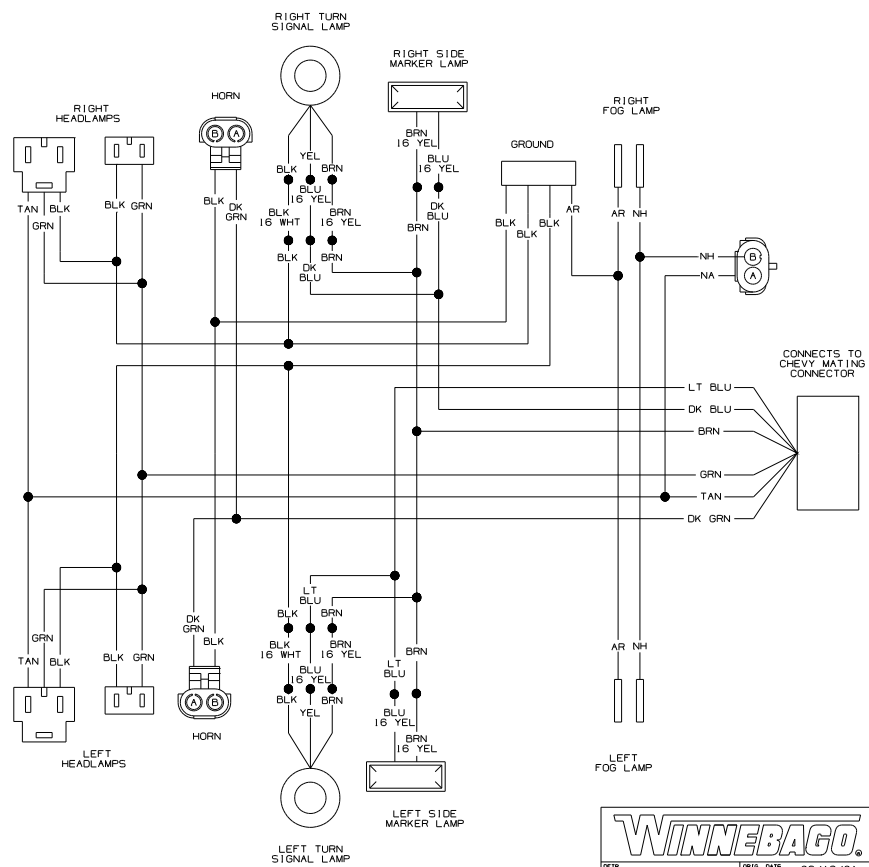

WIRING DIAGRAM-HEADLAMP
(WIRE_ASM 140540-011)
(WINNEBAGO)

- NOTES:
- 2 SEE WIRING DIAGRAM-AUTO FOR ADDITIONAL INFORMATION.
 - 1 SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.


WINNEBAGO

DATE 09/19/01
 DRAWN
 P.E.
 W.E.
 DRAWN
 UNDESIGNED TOLERANCES ARE:
 FRACTIONAL DIMENSIONS: .005
 DECIMAL DIMENSIONS: .005
 HOLE DIMENSIONS: .005
 THIRD ANGLE PROJECTION


MATERIAL:
 ALL DIMENSIONS ARE IN MILLIMETERS
 FIRST USED
 02 L-SERIES

DO NOT SCALE DRAWING

TITLE:
 WIRING DIAGRAM-AUTO LAMPS
 SHEET 1 of 2 PART NO 139171

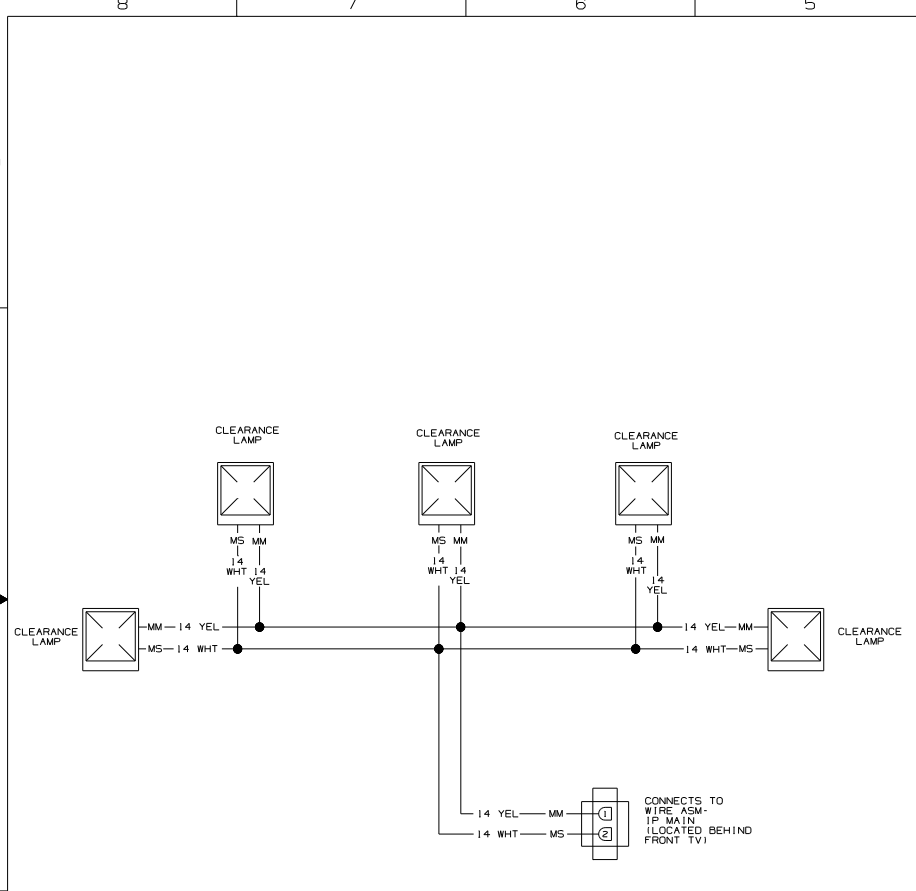

WIRING DIAGRAM-CLEARANCE LAMPS
(WIRE ASM 126486-04)

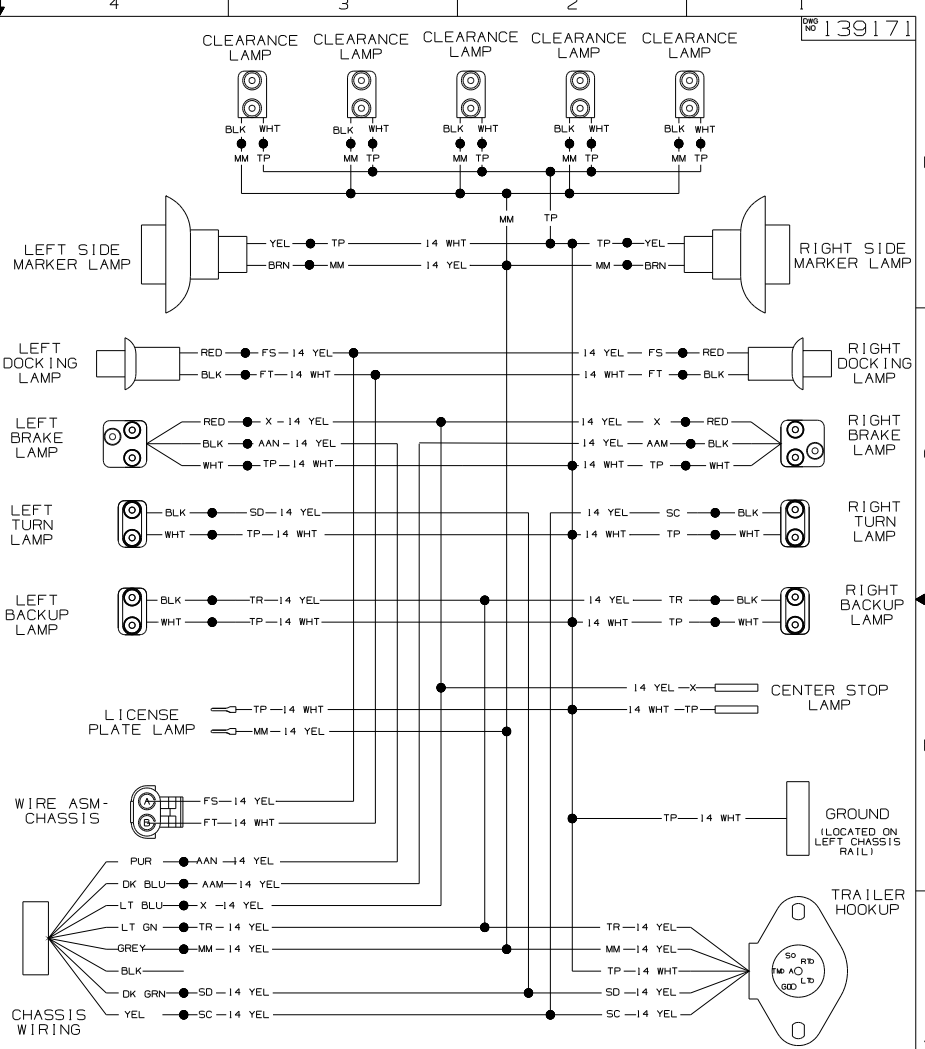

WIRING DIAGRAM-BACKWALL
(WIRE ASM 139509)

2 SEE WIRING DIAGRAM-AUTO FOR ADDITIONAL INFORMATION.
 1 SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.

NOTES:

FIRST USED	02 L-SERIES
TITLE:	DO NOT SCALE DRAWING
WIRING DIAGRAM-AUTO LAMPS	
SHEET 2	PART NO 139171