




DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.





CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

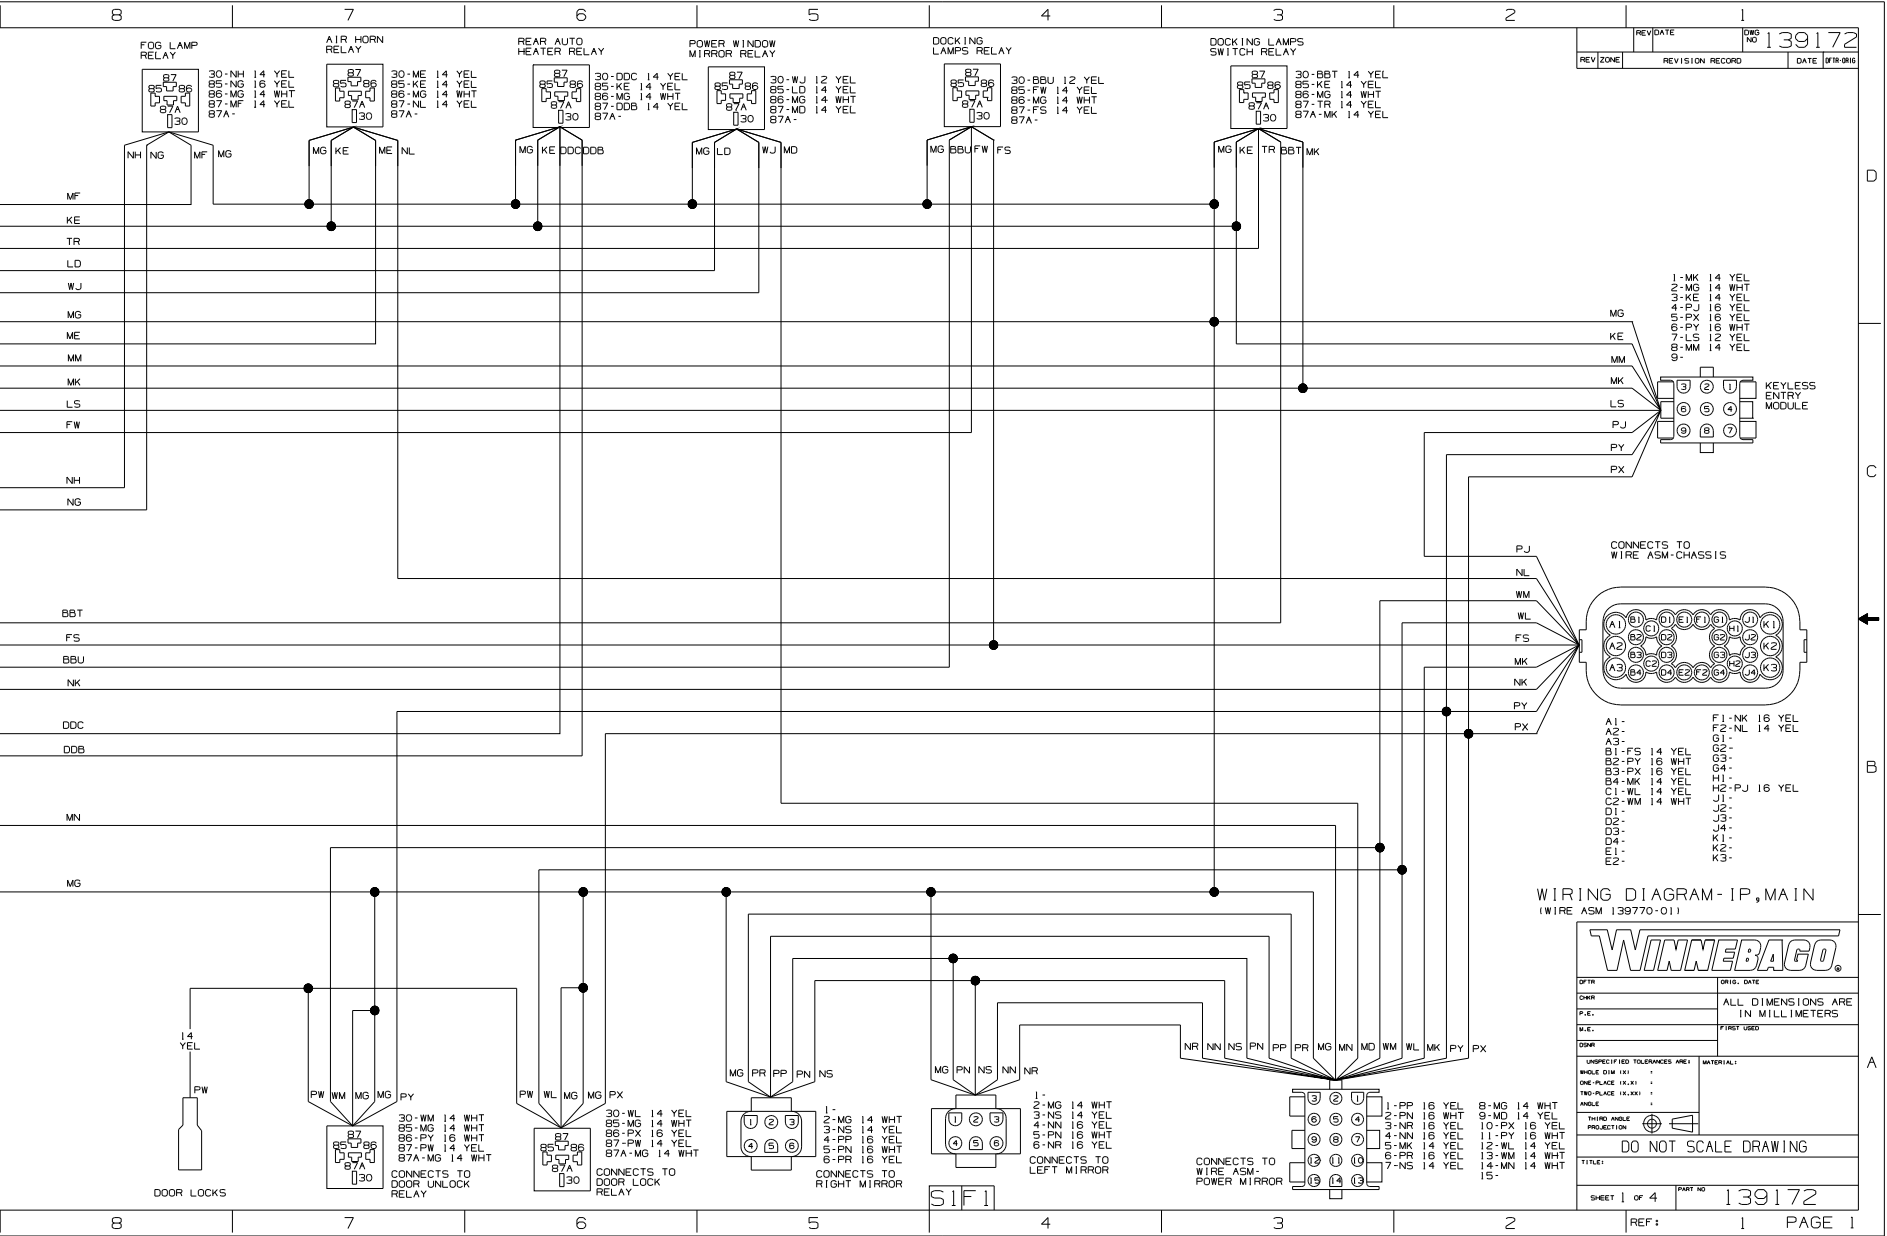

 - 1-MK 14 YEL
- 2-MG 14 WHT
- 3-KE 14 YEL
- 4-PJ 16 YEL
- 5-PX 16 YEL
- 6-PN 16 WHT
- 7-LS 16 WHT
- 8-MM 14 YEL
- 9-

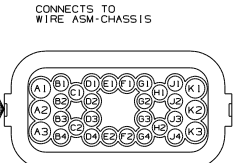


- A1- F1-NK 16 YEL
- A2- F2-NL 14 YEL
- A3- G2
- B1-FS 14 YEL
- B2-PY 16 WHT
- B3-PX 16 YEL
- B4-NK 14 YEL
- C1-WL 14 YEL
- C2-MM 14 WHT
- D1- J2
- D2- J3
- D3- J4
- D4- K1
- E1- K2
- E2- K3

WIRING DIAGRAM-IP, MAIN
 (WIRE ASM 139770-01)


WINNEBAGO

DTR: _____ GRID: DATE _____
 DWR: _____ ALL DIMENSIONS ARE IN MILLIMETERS
 P.E.: _____ FIRST USED _____
 M.E.: _____
 DSR: _____
 UNSPECIFIED TOLERANCES ARE: MATERIAL:
 UNLESS OTHERWISE SPECIFIED:
 ONE-PLACE (X.X) ±
 TWO-PLACE (X.XX) ±
 ANGLE: _____
 THIRD ANGLE PROJECTION
DO NOT SCALE DRAWING
 TITLE: _____
 SHEET 1 OF 4 PART NO 139172
 REF: 1 PAGE 1


CONNECTS TO COMPASS DISPLAY UNIT

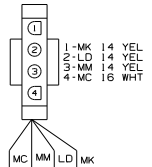


WH I/P CONVENIENCE CENTER

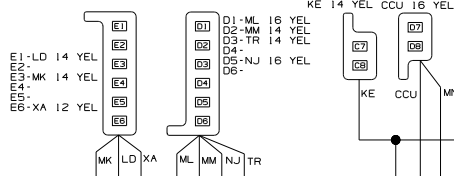


CONNECTS TO HEATER CONTROLS

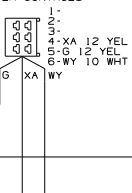






CONNECTS TO WIRE ASM- REAR MONITOR

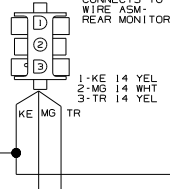





CIGARETTE LIGHTER

 



ANTENNA WARNING MODULE

   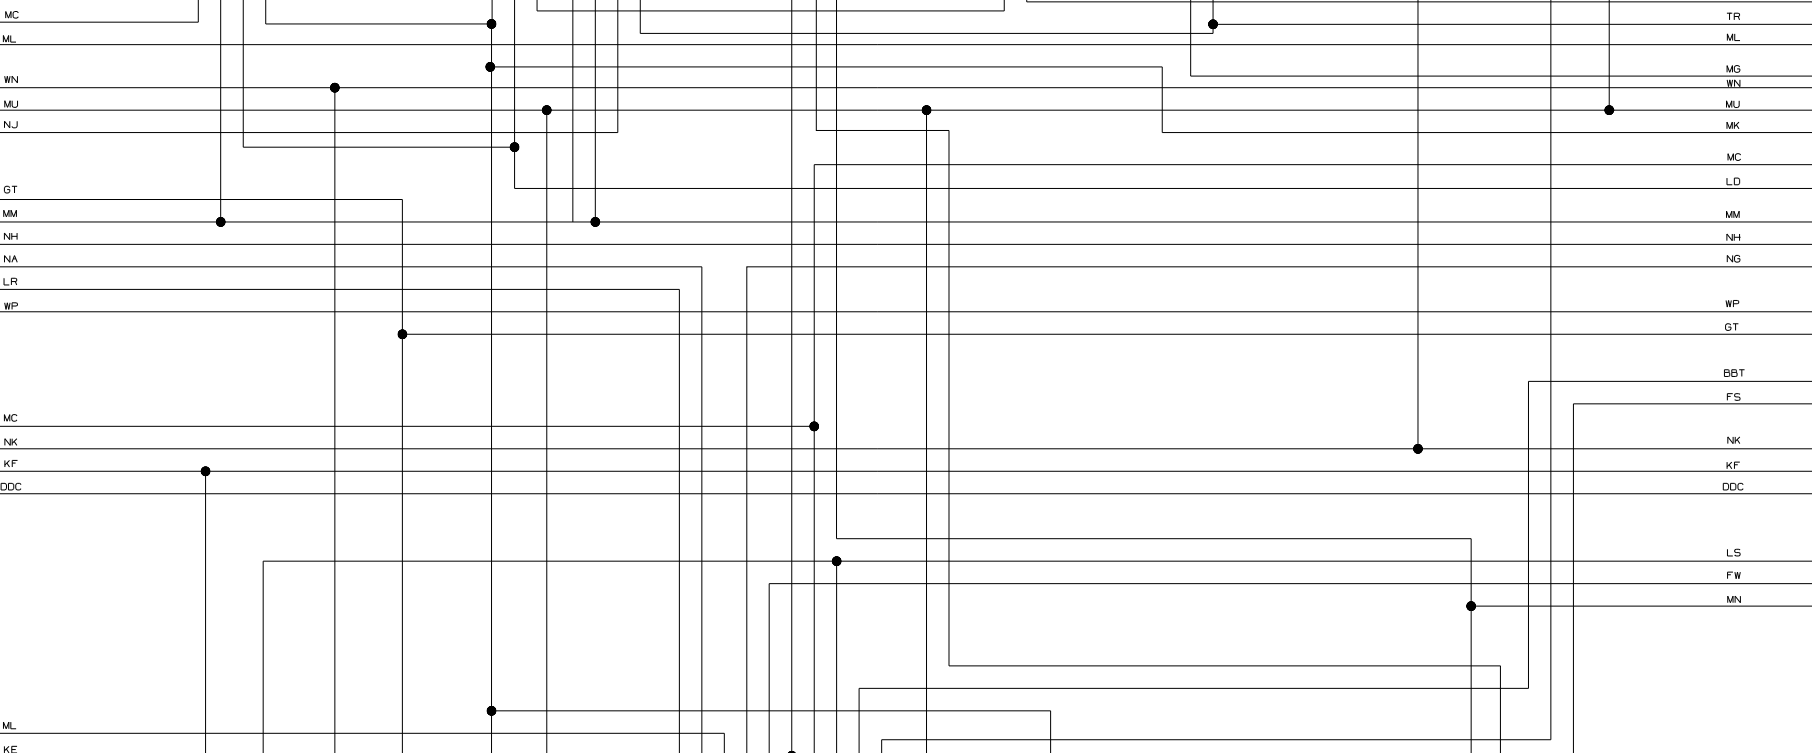 

CONNECTS TO WIRE ASM- I/P LEFT

  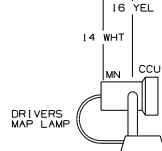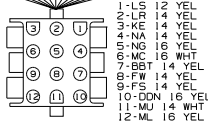


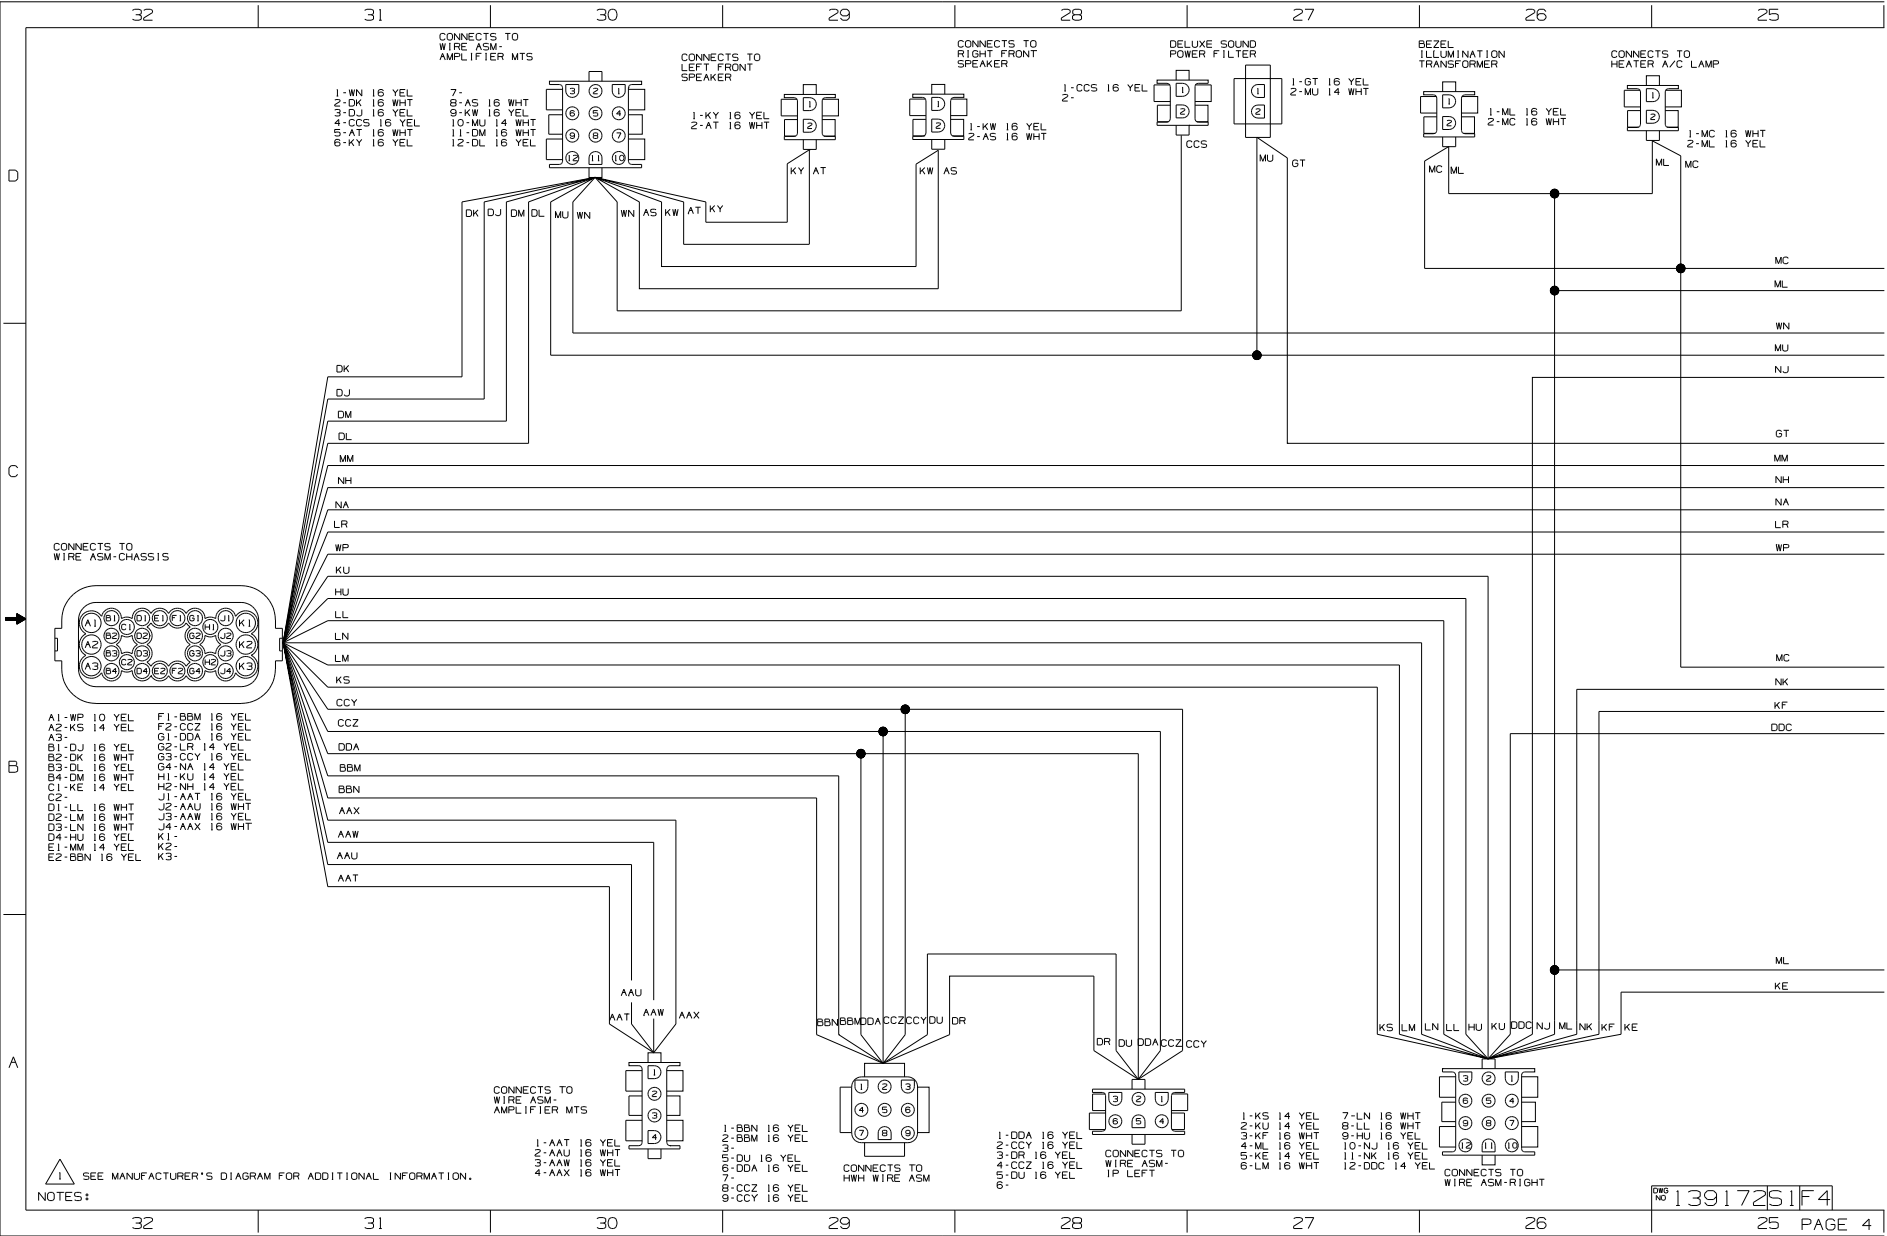

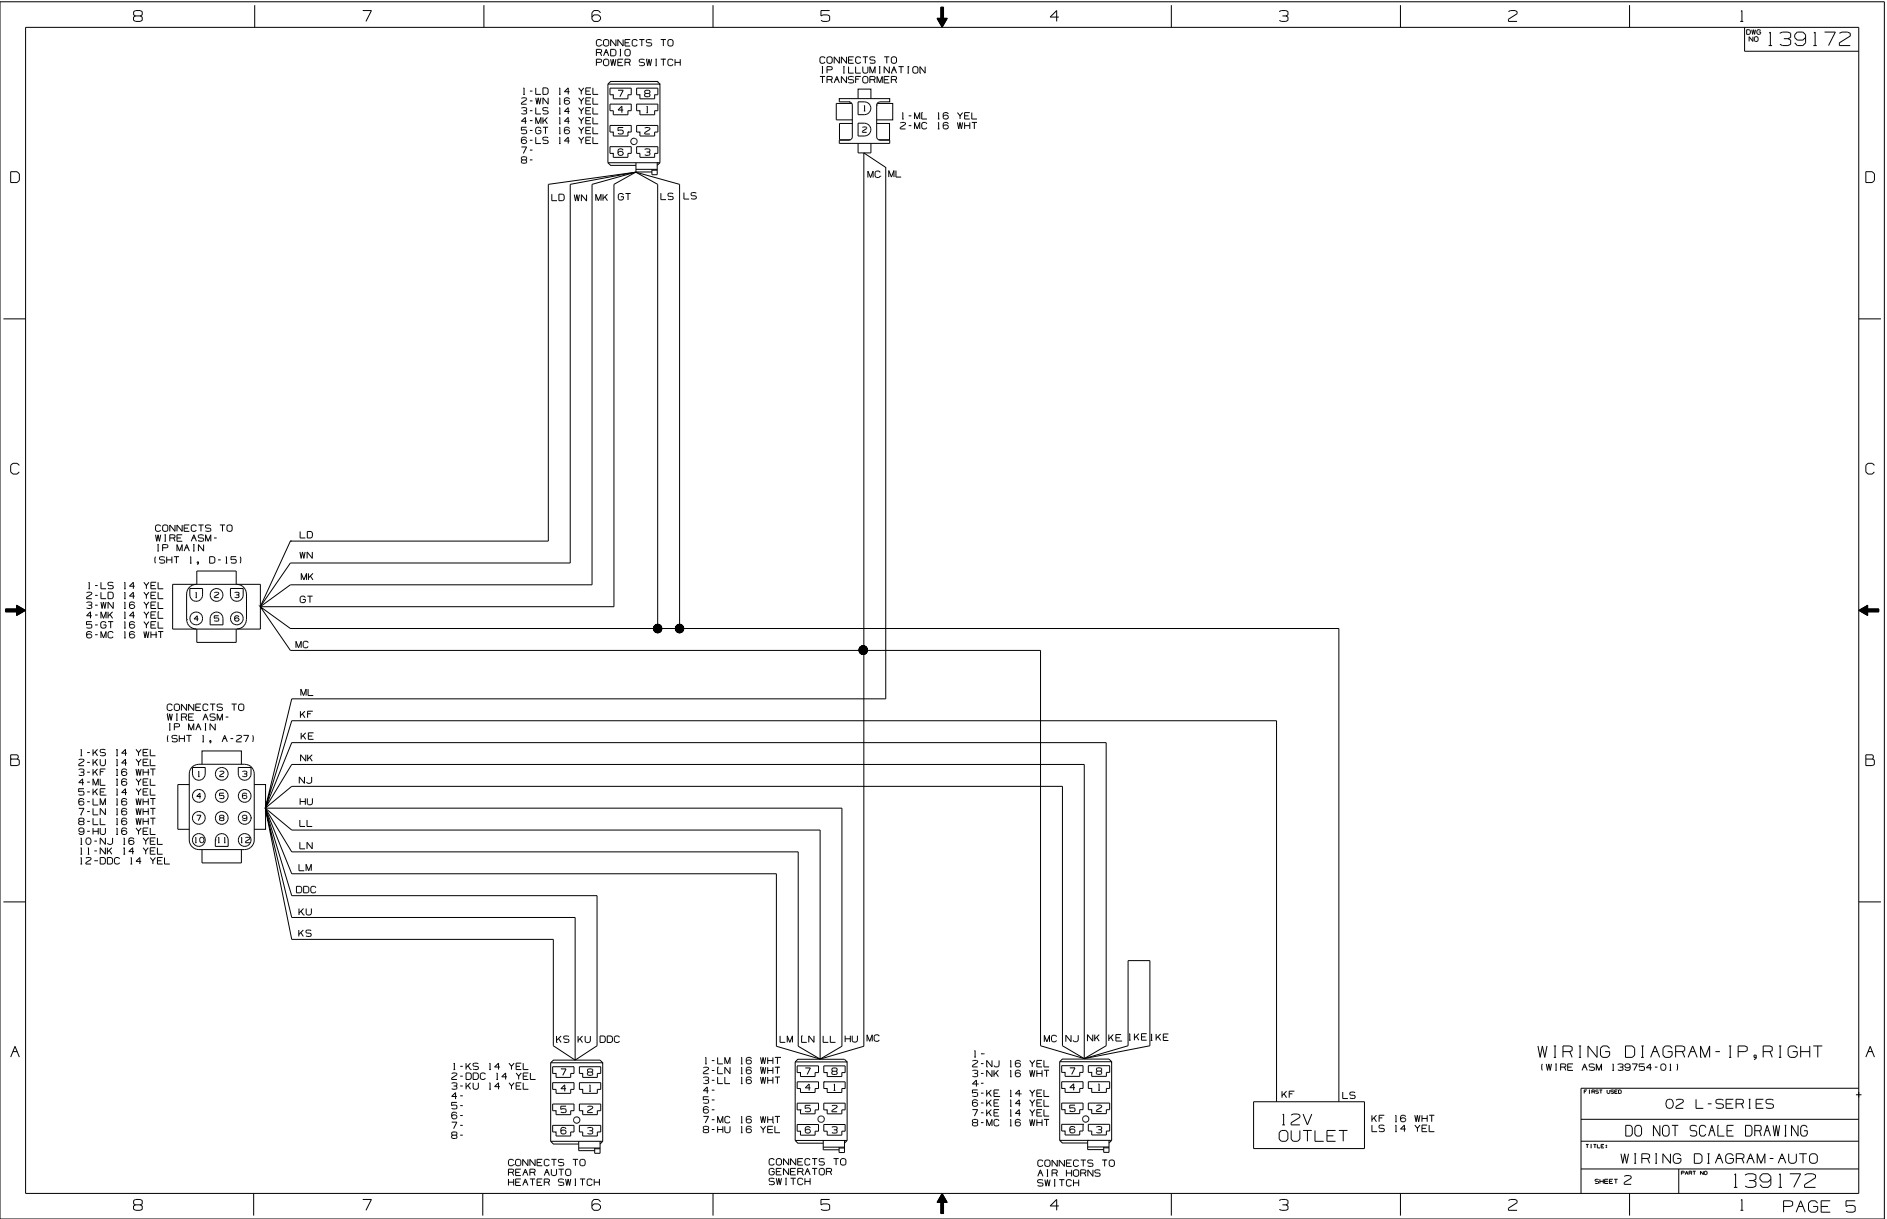


WIRING DIAGRAM-IP,RIGHT
(WIRE ASM 139754-01)

FIRST USED		02 L-SERIES	
DO NOT SCALE DRAWING			
TITLE: WIRING DIAGRAM-AUTO			
SHEET 2	PART NO		139172

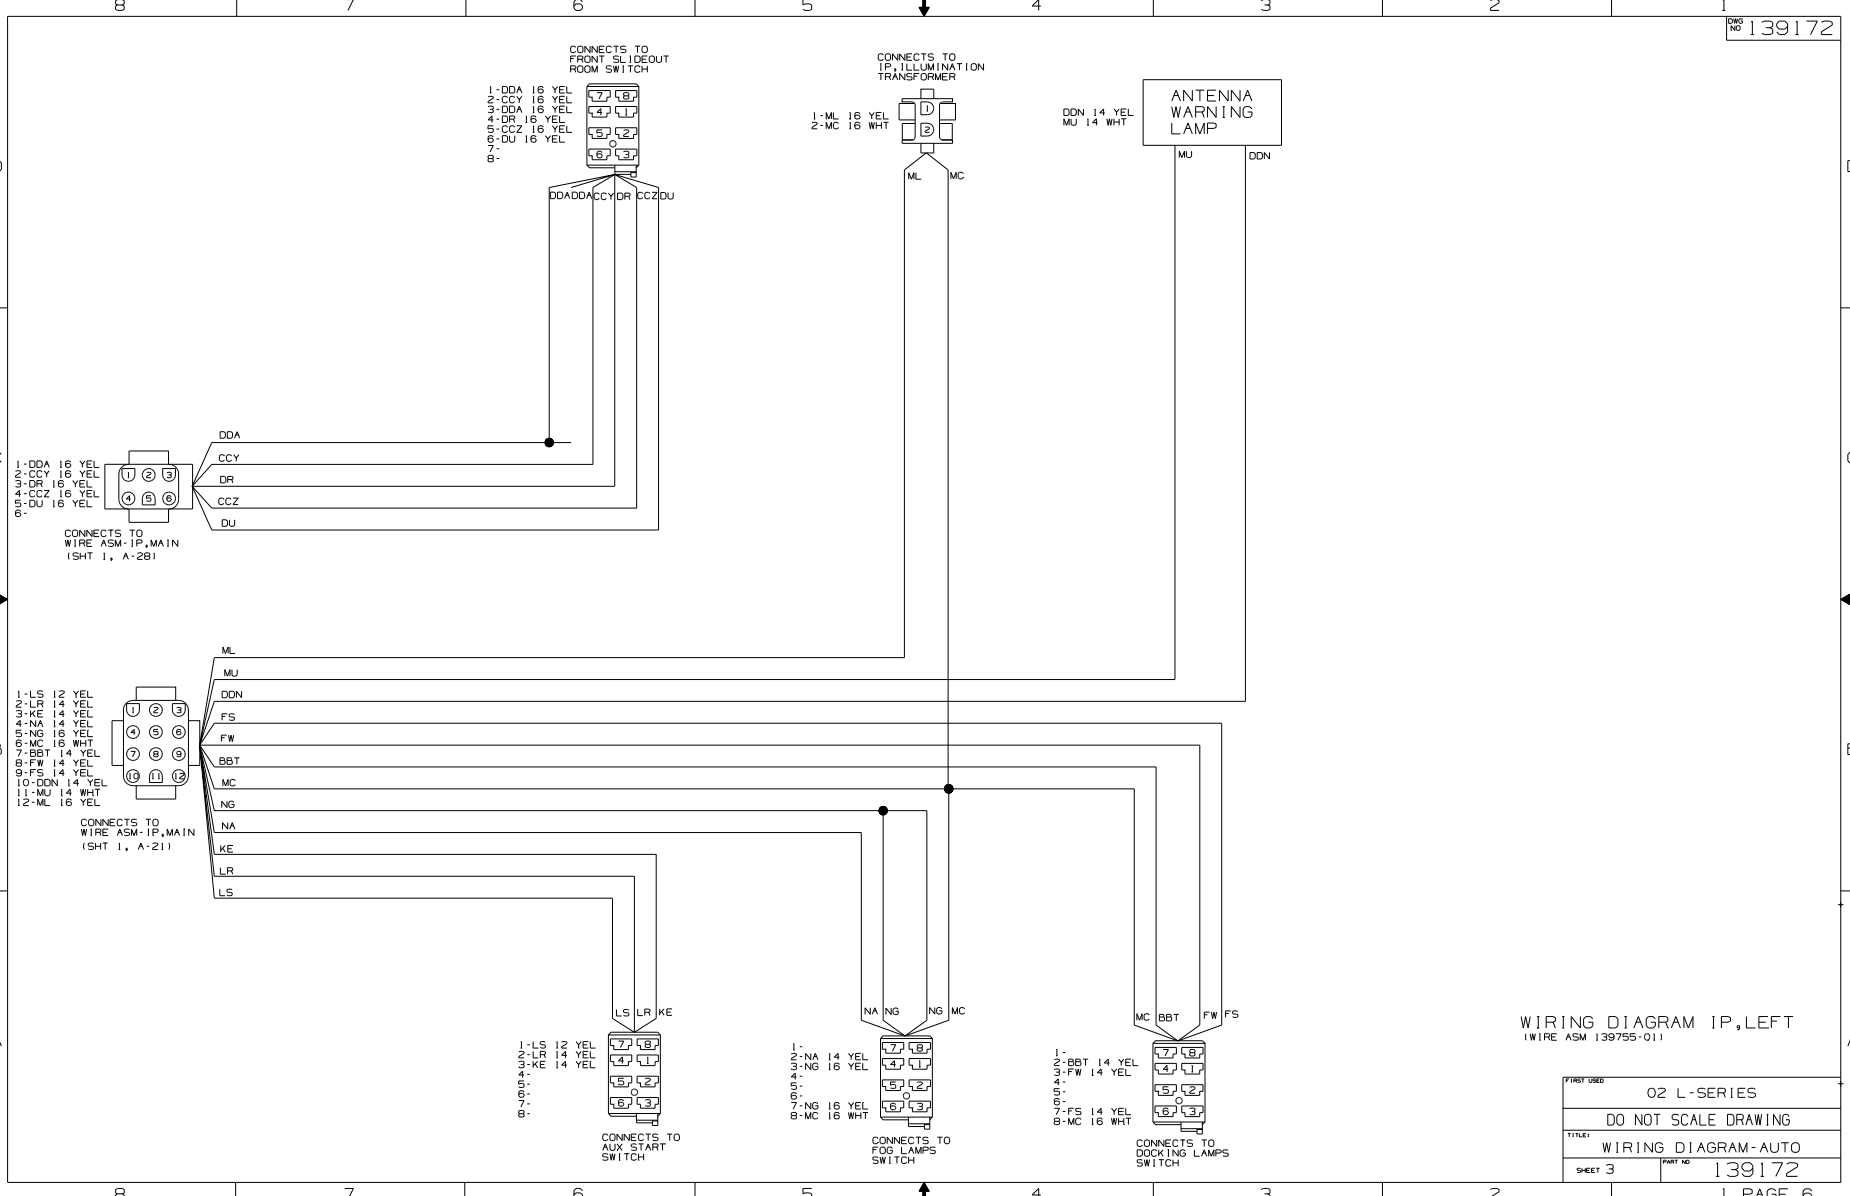


WIRING DIAGRAM IP, LEFT
(WIRE ASM 139755-01)


FIRST USED	02 L-SERIES	
TITLE:	DO NOT SCALE DRAWING	
	WIRING DIAGRAM-AUTO	
SHEET 3	PART NO	139172

 


WIRING DIAGRAM POWER DRIVER SEAT
(WIRE ASM 108029-01)

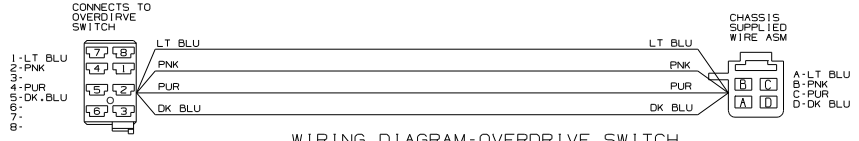

 WIRING DIAGRAM-OVERDRIVE SWITCH
(WIRE ASM 137626-02)



WIRING DIAGRAM POWER PASS. SEAT
(WIRE ASM 108029-03)

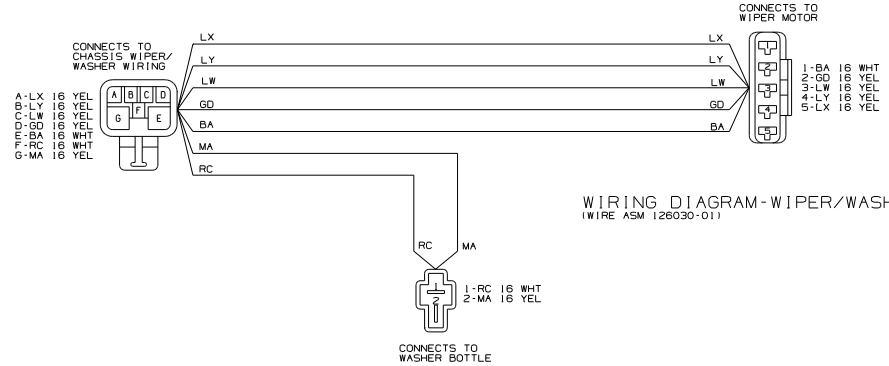

WIRING DIAGRAM-WIPER/WASHER
(WIRE ASM 126030-01)

FIRST USED	02 L-SERIES
DO NOT SCALE DRAWING	
TITLE:	WIRING DIAGRAM-AUTO
SHEET 4	PART NO 139172