



DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

8

7

6

5

4


3

2

1


CONNECTS TO WIRE ASM-SIDEWALL (LF) (SHT 3, A-7) (LOCATED IN LOWER GALLEY CABT.)

- 1-JC 14 YEL
- 2-NC 14 WHT
- 3-LA 16 YEL
- 4-HX 16 YEL
- 5-MS 14 WHT
- 6-LC 16 WHT

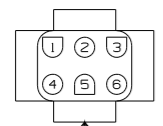

JC NC MS LC LA HX

CONNECTS TO TRAILER HITCH PLUG

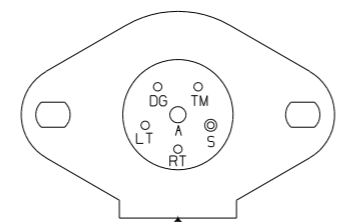


- DG-MS 14 WHT
- TM-HW 16 YEL
- S-X 16 YEL
- RT-SC 16 YEL
- LT-SD 16 YEL
- A-TR 16 YEL

MS HW TR X SD SC


CONNECTS TO WIRE ASM-BACKWALL (LOCATED BELOW LAVATORY CABT)

 - 1-SC 16 YEL
- 2-X 16 YEL
- 3-SD 16 YEL



SC SD X

 
CONNECTS TO WIRE ASM-CHASSIS (SHT 2, C-4) (LOCATED BEHIND LOAD CENTER)



- 1-TR 16 YEL
- 2-MM 16 YEL
- 3-MS 14 WHT

MS TR

CONNECTS TO WIRE ASM-CHASSIS (SHT 2, C-4) (LOCATED BEHIND LOAD CENTER)

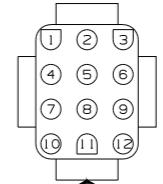


- 1-HX 16 YEL
- 2-SC 16 YEL
- 3-SD 16 YEL
- 4-HW 16 YEL
- 5-LS 12 YEL
- 6-X 16 YEL
- 7-MM 16 YEL
- 8-KX 16 YEL
- 9-LB 16 YEL
- 10-TR 16 YEL
- 11-LA 16 YEL
- 12-LC 16 WHT

MM MM SC SD X TR HW HX LA LC KX LB LS

JC
KX
LB
LS
MS
NC


JA
JX
JP
JS
JT
XH
XJ
XK
AG
AF

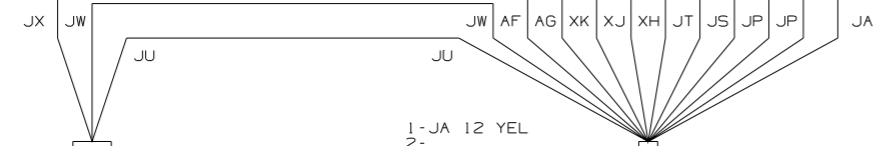



- 1-JW 14 YEL
- 2-JX 14 WHT
- 3-JU 14 YEL

CONNECTS TO WATER HEATER (LOCATED IN LOWER WARDROBE CABT.)

- 1-JA 12 YEL
- 2-
- 3-JP 14 WHT
- 4-XH 16 YEL
- 5-XJ 16 YEL
- 6-XK 16 YEL
- 7-AG 12 YEL
- 8-JS 12 YEL
- 9-AF 12 YEL
- 10-
- 11-JP 14 WHT
- 12-JT 16 YEL
- 13-JW 14 YEL
- 14-
- 15-JU 14 YEL

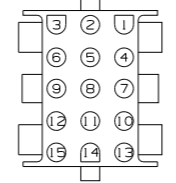


CONNECTS TO MONITOR PANEL

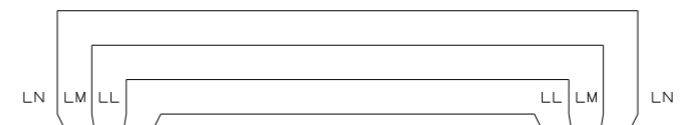 

- 1-LP 16 YEL
- 2-LL 16 WHT
- 3-LM 16 WHT
- 4-LN 16 WHT

CONNECTS TO MONITOR PANEL

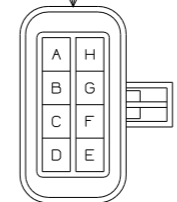

CONNECTS TO GENERATOR (LOCATED IN LEFT REAR CORNER OF GENERATOR)

- A-LN 16 WHT
- B-LM 16 WHT
- C-LL 16 WHT
- D-LP 16 YEL
- H-

WIRING DIAGRAM-COACH (WIRE ASM 139491)

WINNEBAGO		COPYRIGHT 2002 WINNEBAGO INDUSTRIES, INC.	
DFT#	ORIG. DATE	ALL DIMENSIONS ARE IN MILLIMETERS	
CHR#		M.E.	
P.E.		FIRST USED	
DSCR		03 221B	
UNSPECIFIED TOLERANCES ARE:		MATERIAL:	
WHOLE DIM (X)	:		.
ONE-PLACE (X.X)	:		.
TWO-PLACE (X.XX)	:		.
ANGLE	:		.
THIRD ANGLE PROJECTION			
DO NOT SCALE DRAWING			
TITLE: WIRING DIAGRAM-BODY, 12V			
SHEET 1 of 3	PART NO	141838	
REF:	1	02/28/03	

8

7

6

5


4

3

2

1

12V FUSE PANEL

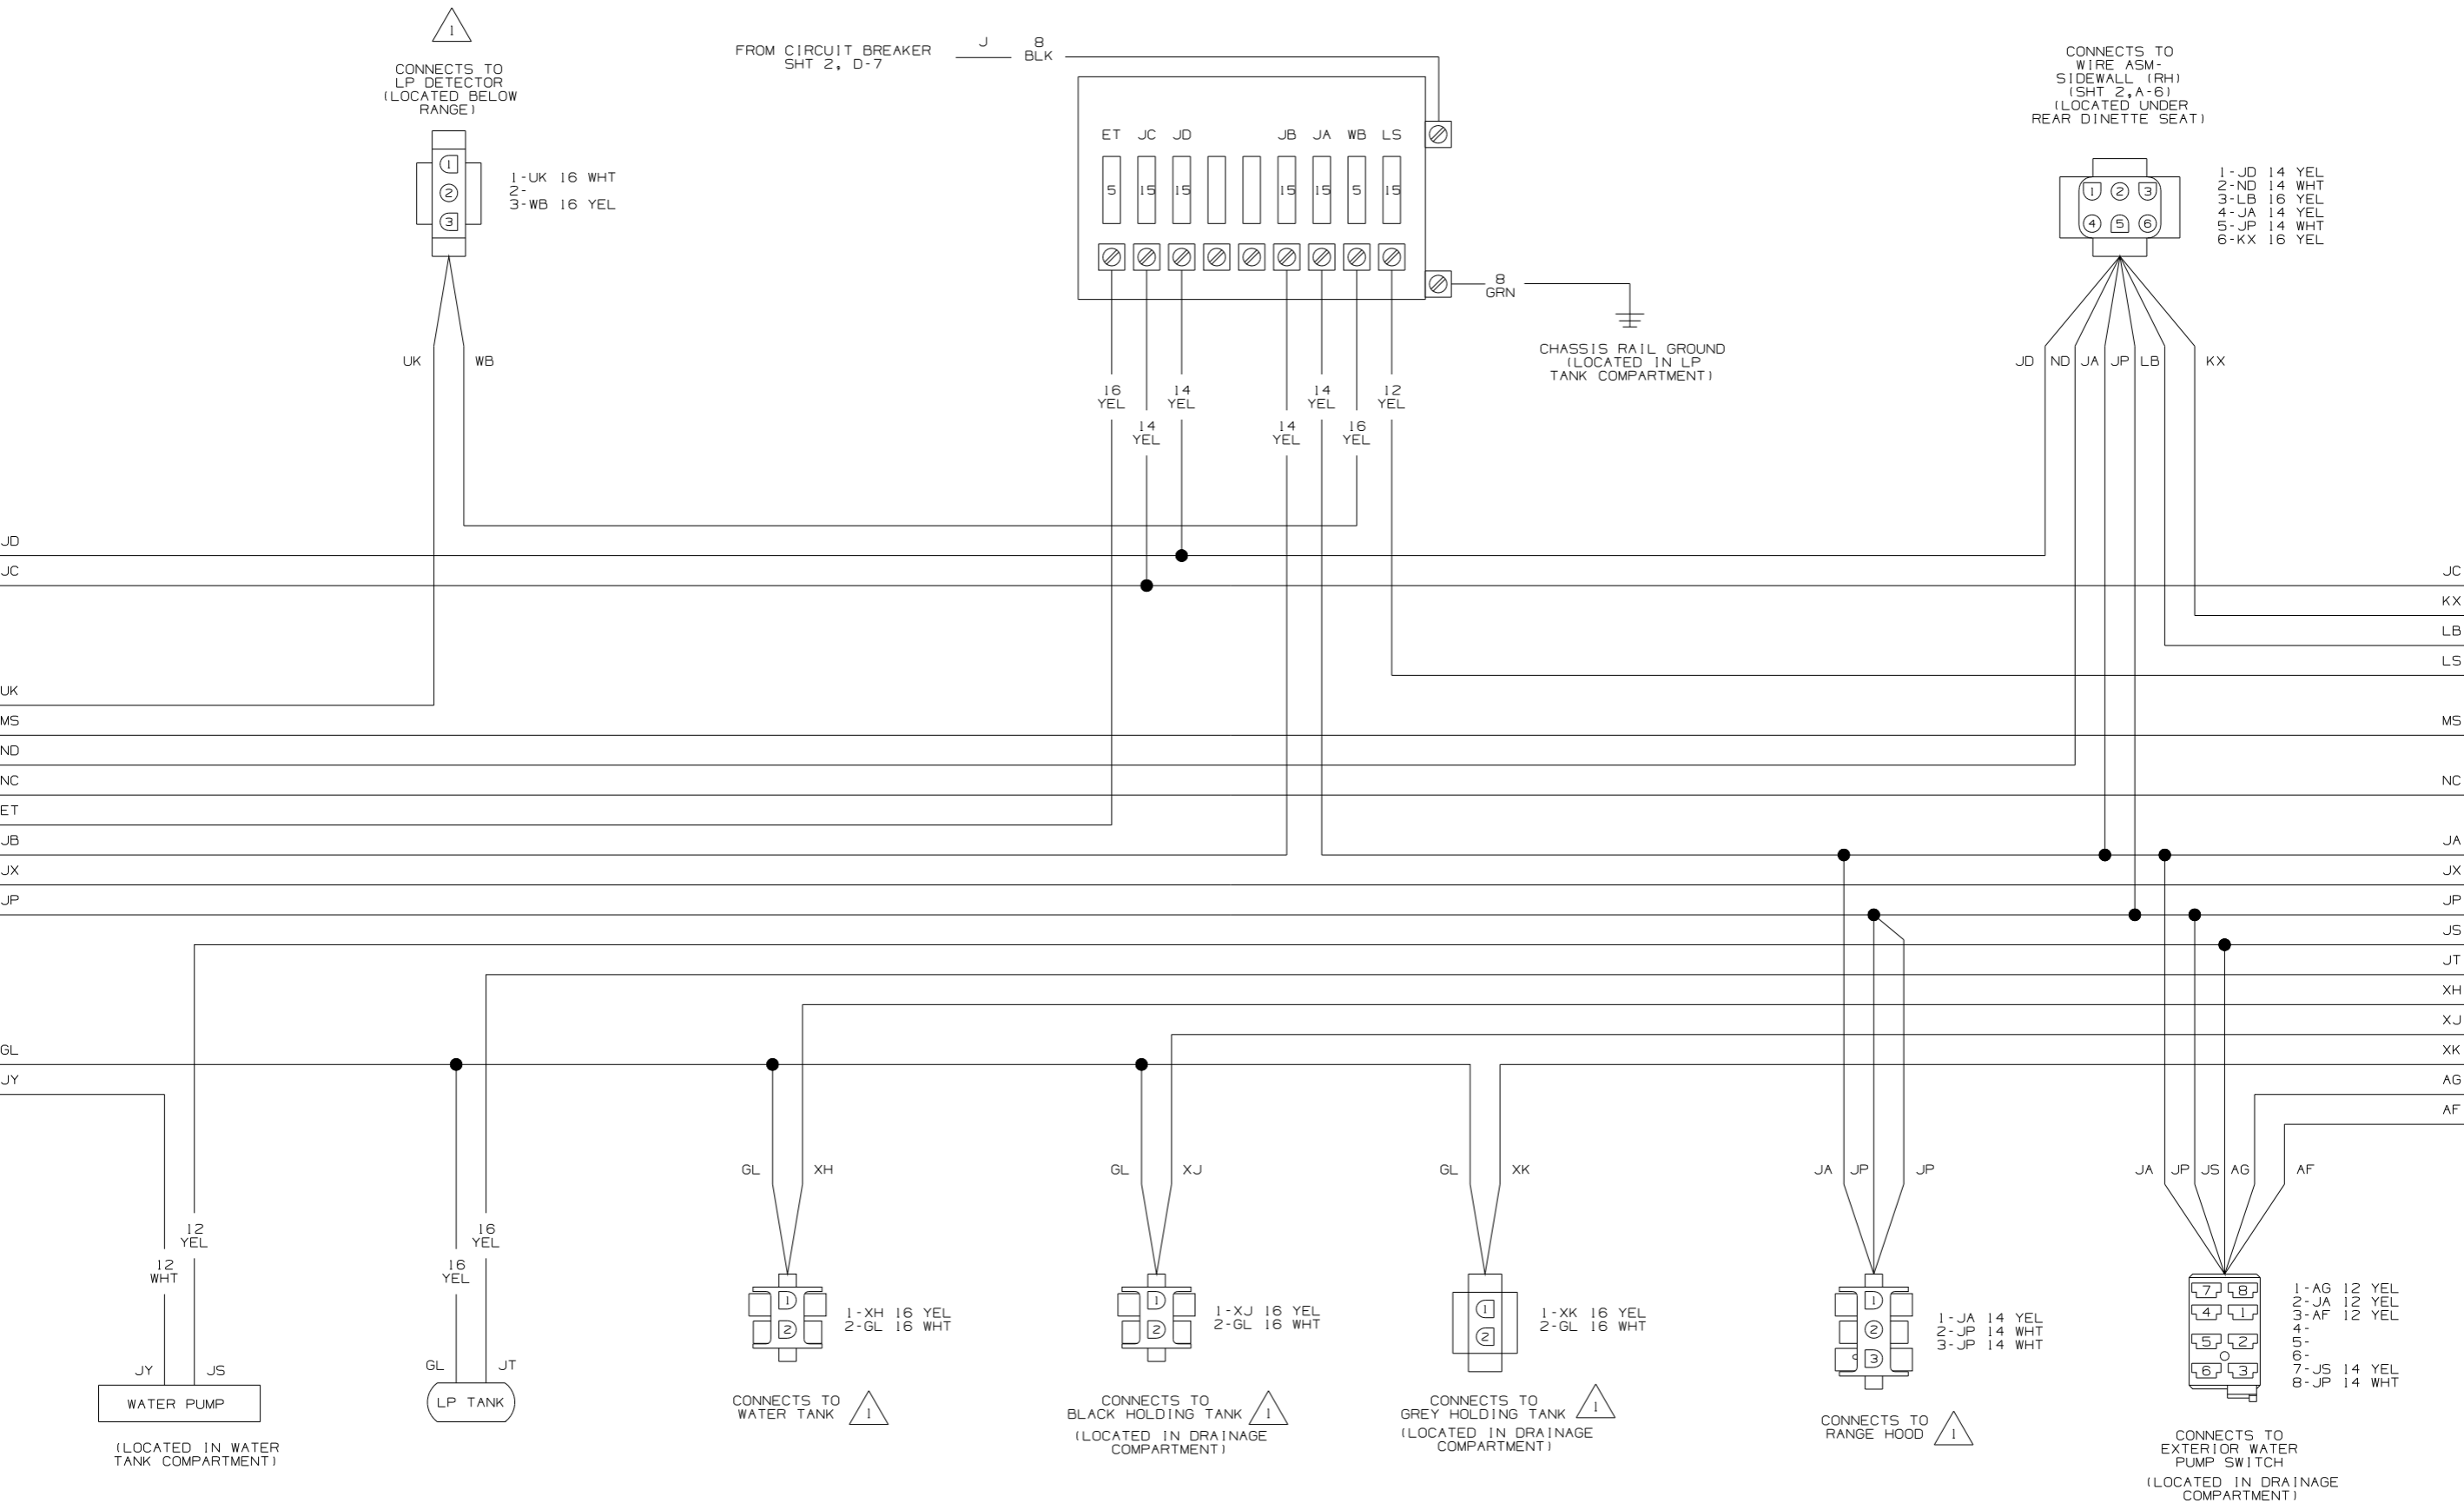

CONNECTS TO LP DETECTOR (LOCATED BELOW RANGE)

- 1-UK 16 WHT
- 2-
- 3-WB 16 YEL


FROM CIRCUIT BREAKER SHT 2, D-7

J 8 BLK

CONNECTS TO WIRE ASM-SIDEWALL (RH) (SHT 2, A-6) (LOCATED UNDER REAR DINETTE SEAT)

- 1-JD 14 YEL
- 2-ND 14 WHT
- 3-LB 16 YEL
- 4-JA 14 YEL
- 5-JP 14 WHT
- 6-KX 16 YEL

8 GRN CHASSIS RAIL GROUND (LOCATED IN LP TANK COMPARTMENT)

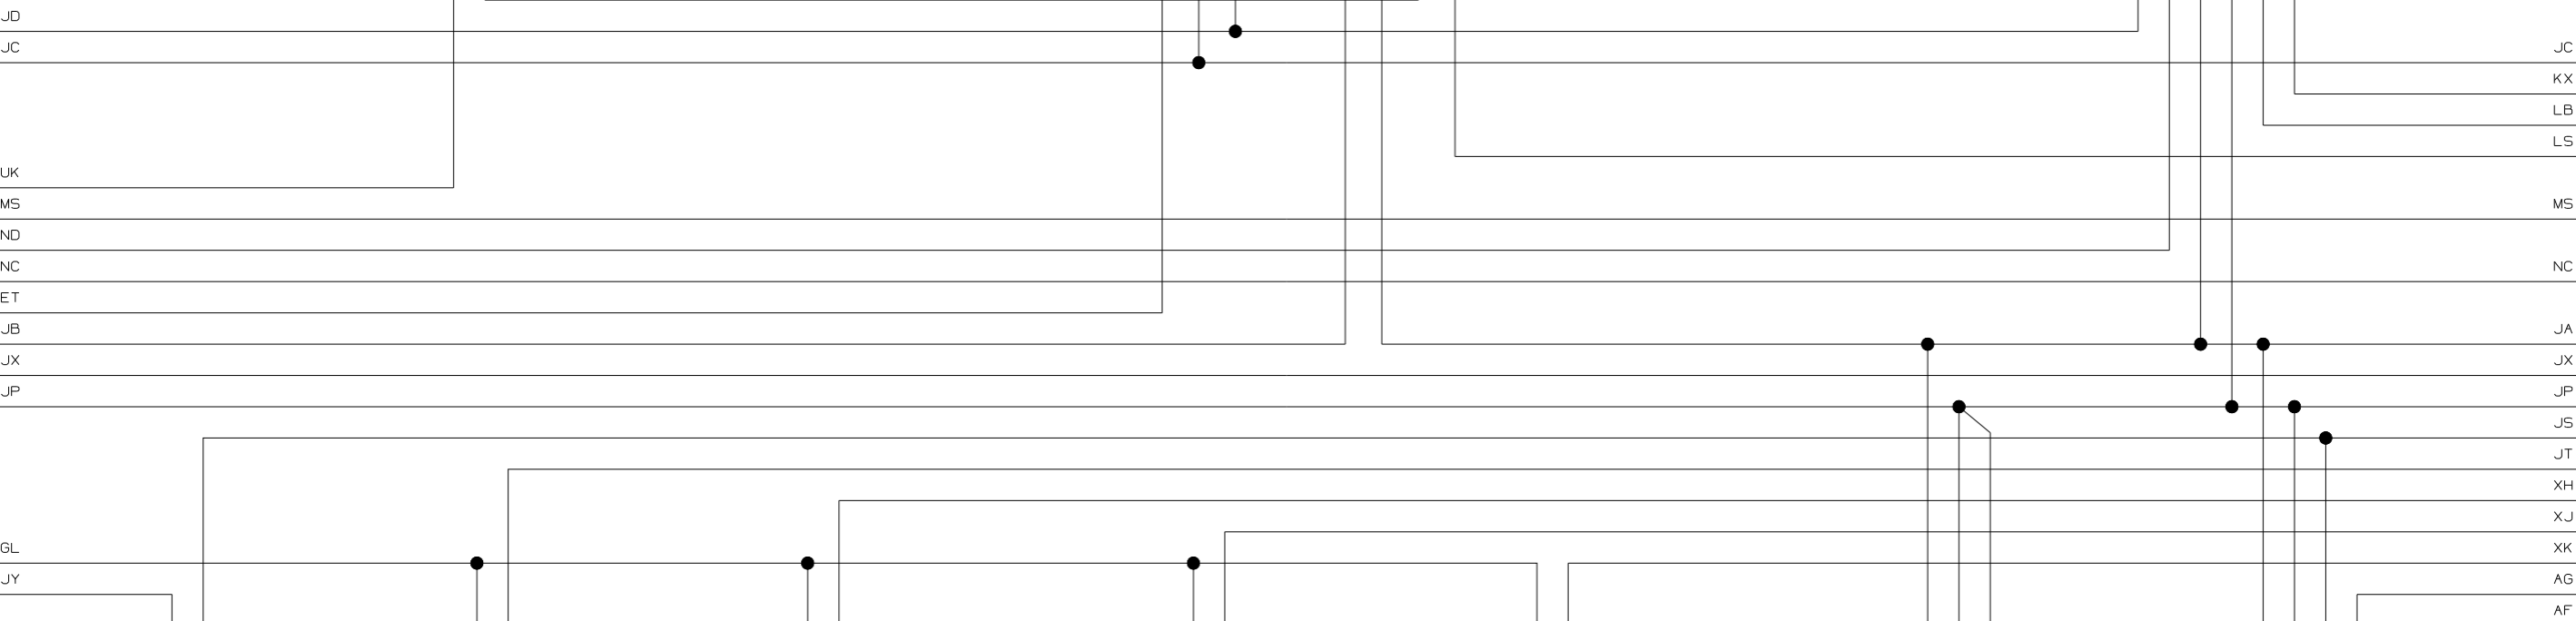

WATER PUMP (LOCATED IN WATER TANK COMPARTMENT)

LP TANK

CONNECTS TO WATER TANK

CONNECTS TO BLACK HOLDING TANK (LOCATED IN DRAINAGE COMPARTMENT)


CONNECTS TO GREY HOLDING TANK (LOCATED IN DRAINAGE COMPARTMENT)

CONNECTS TO RANGE HOOD





CONNECTS TO EXTERIOR WATER PUMP SWITCH (LOCATED IN DRAINAGE COMPARTMENT)

- 1-AG 12 YEL
- 2-JA 12 YEL
- 3-AF 12 YEL
- 4-
- 5-
- 6-
- 7-JS 14 YEL
- 8-JP 14 WHT

D
C
B
A

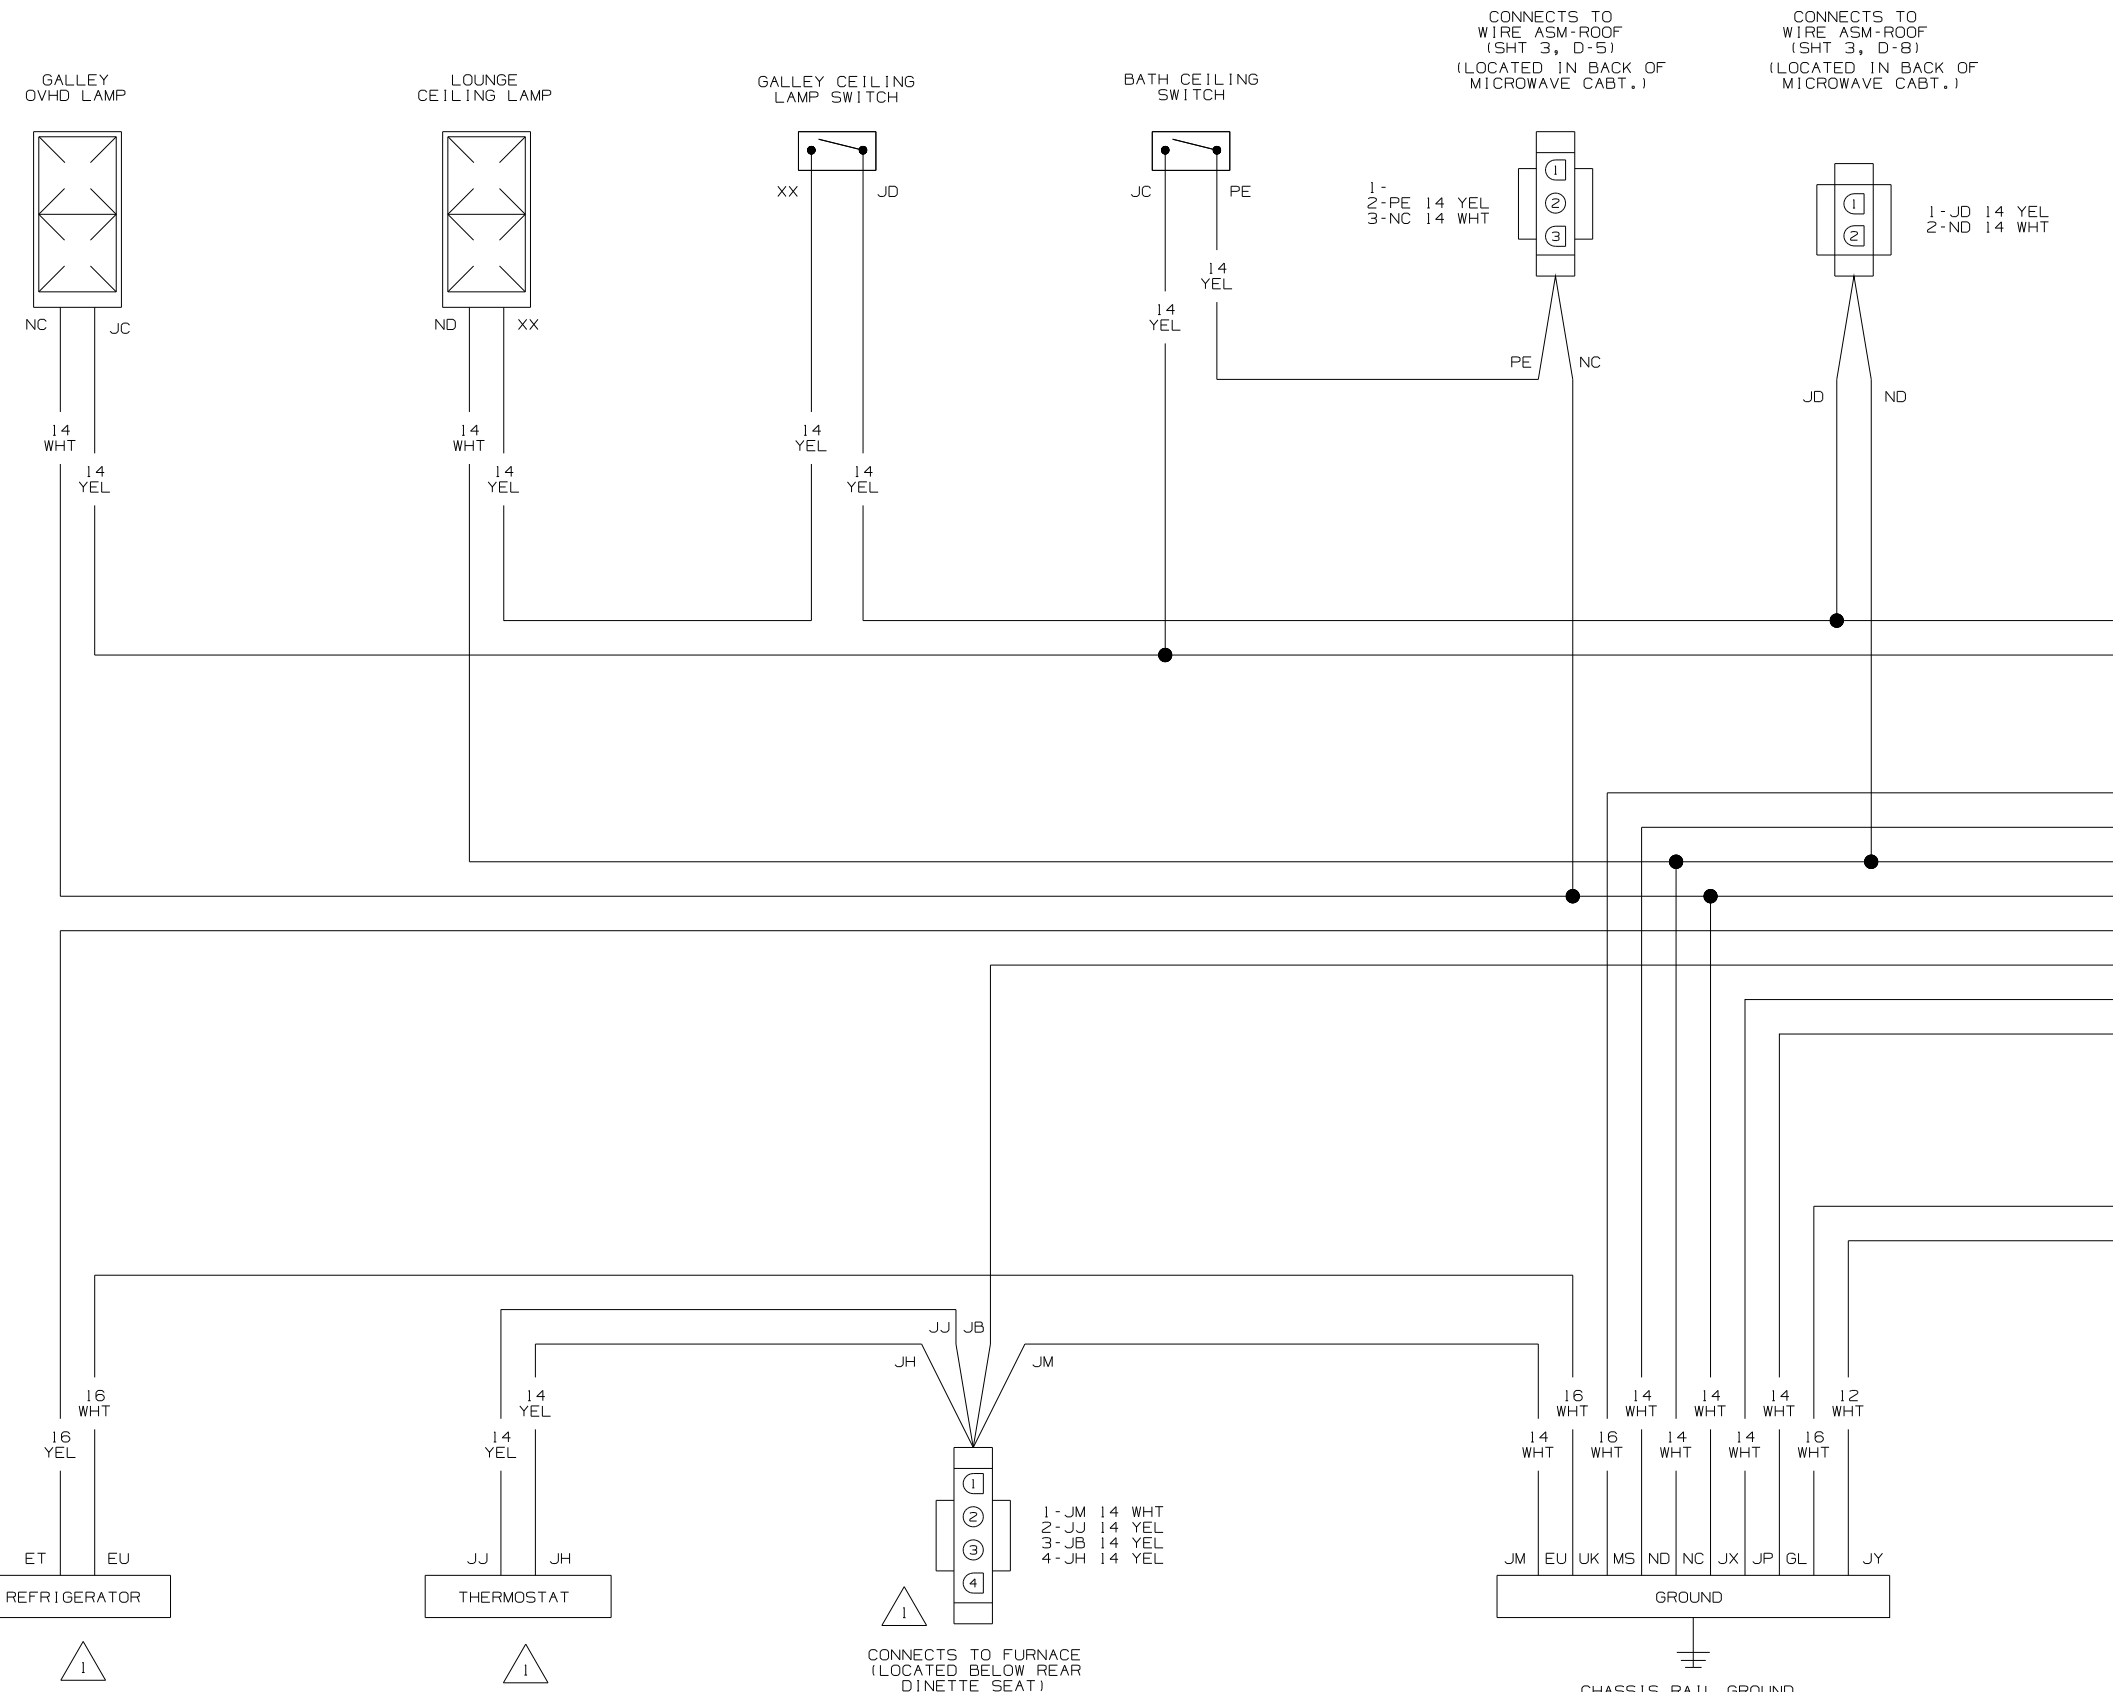

NOTES:
 2 SEE WIRING DIAGRAM-AUTO LAMPS.
 1 SEE MANUFACTURES DIAGRAM.

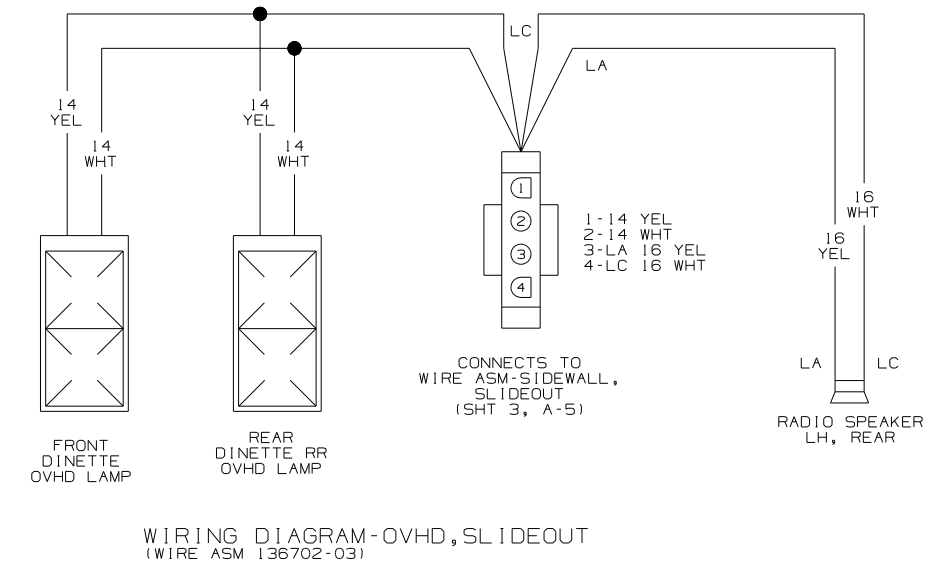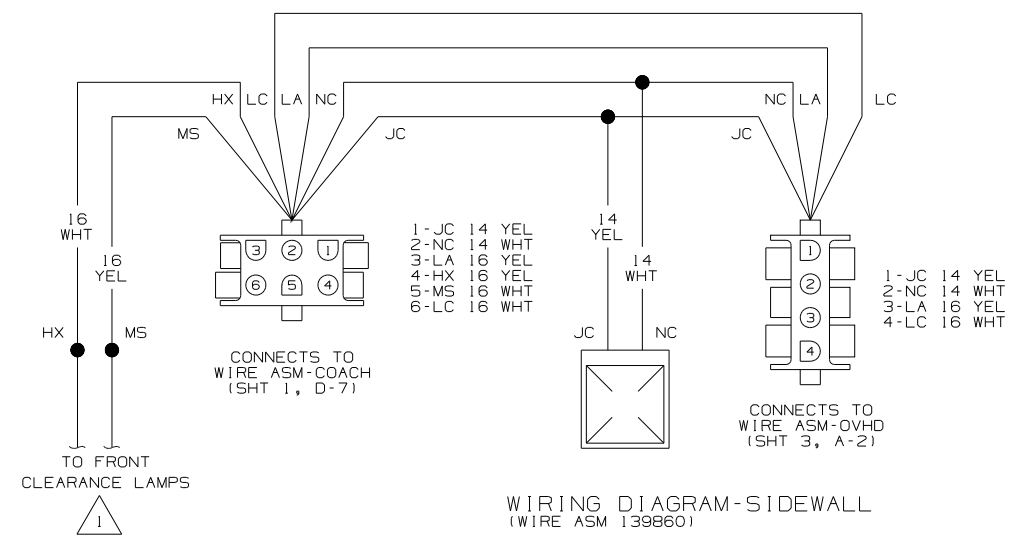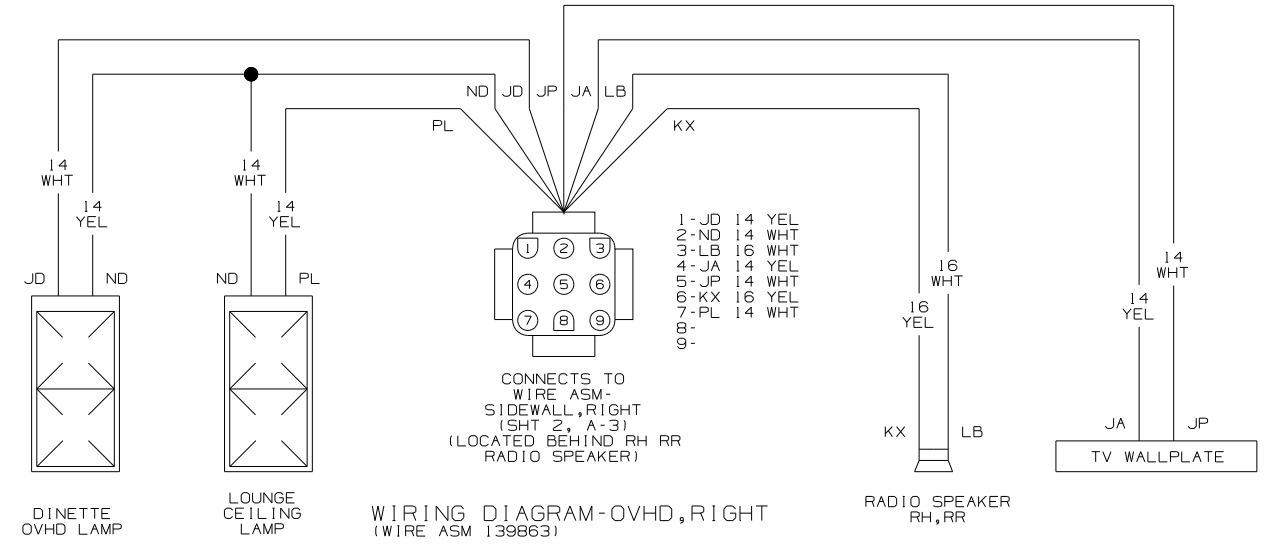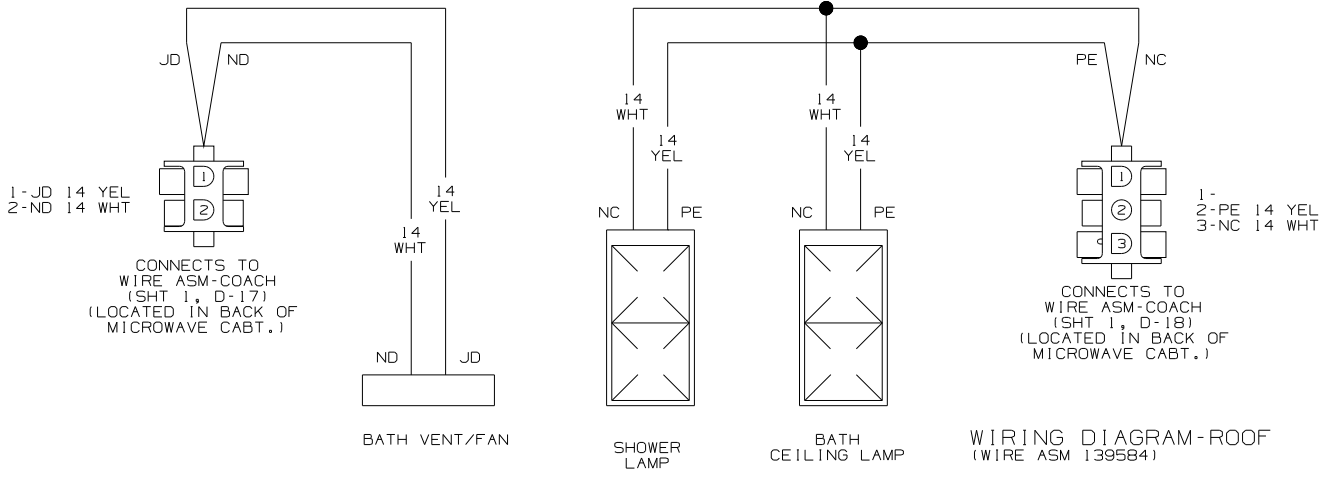

NOTES:
1 SEE WIRING DIAGRAM-AUTO LAMPS

FIRST USED	03 221B	
TITLE	DO NOT SCALE DRAWING	
	WIRING DIAGRAM-BODY, 12V	
SHEET	3	PART NO 141838