




DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

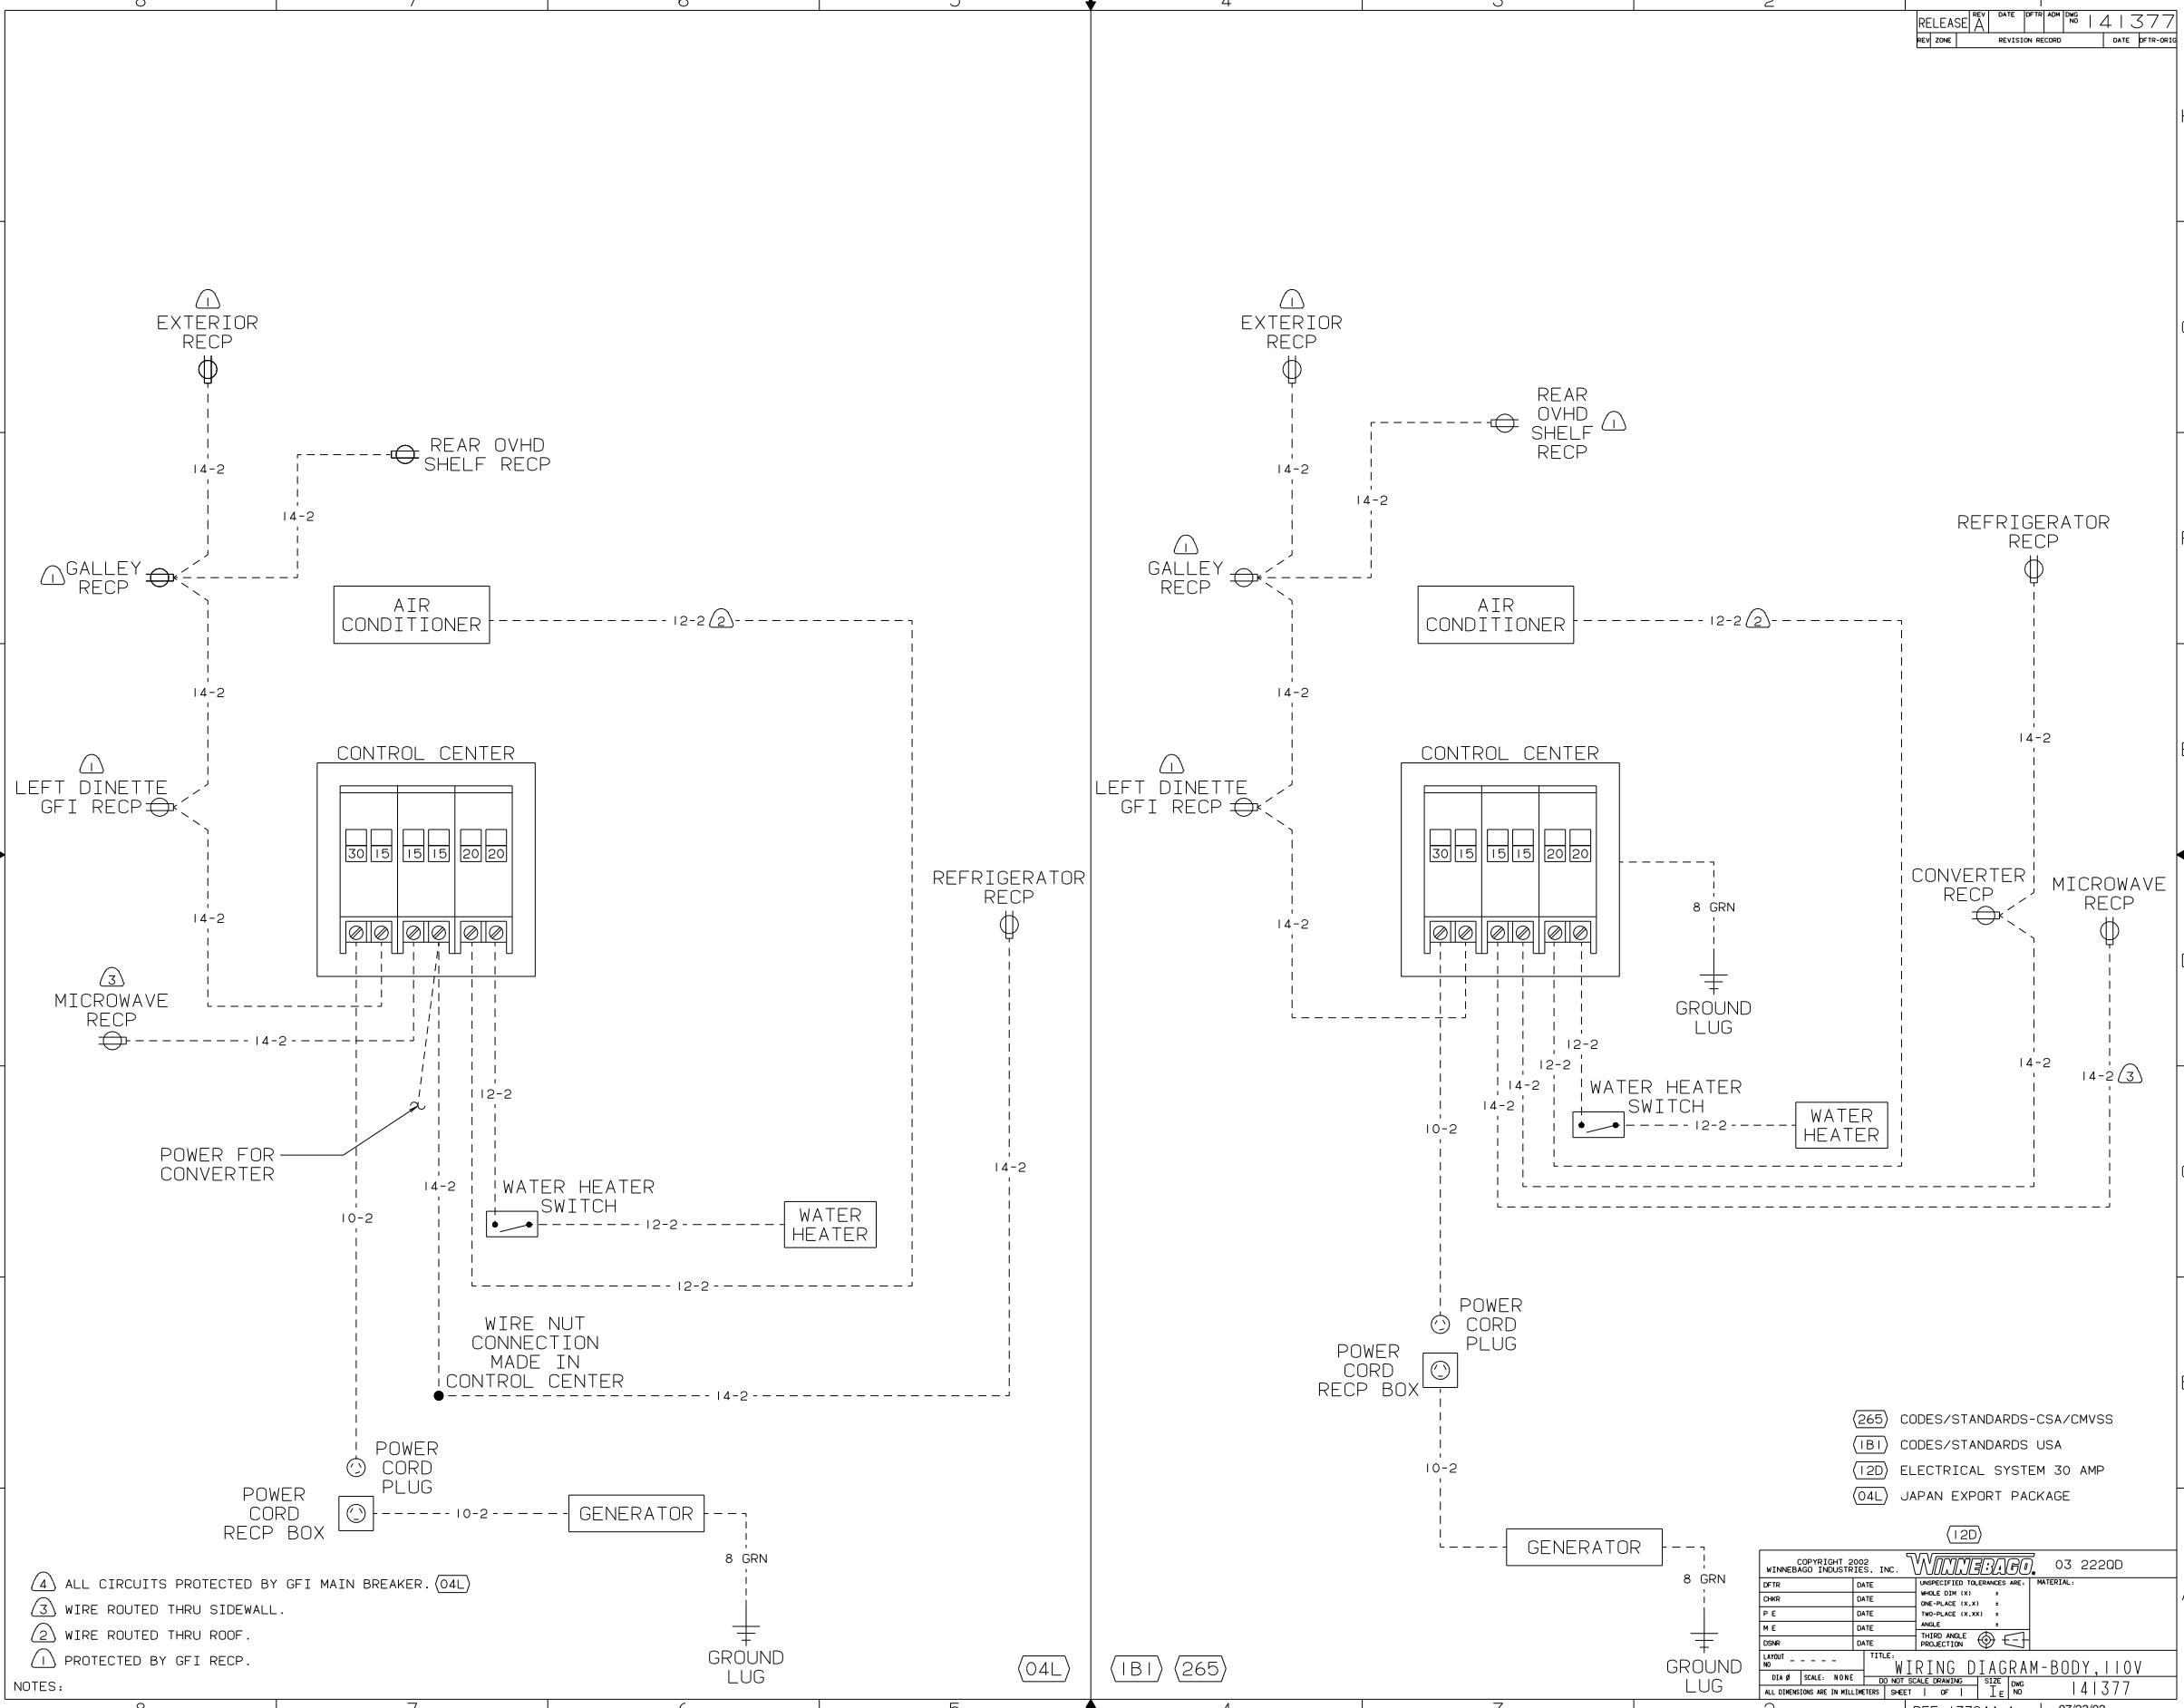

- NOTES:
- ④ ALL CIRCUITS PROTECTED BY GFI MAIN BREAKER. (04L)
 - ③ WIRE ROUTED THRU SIDEWALL.
 - ② WIRE ROUTED THRU ROOF.
 - ① PROTECTED BY GFI RECP.

- (265) CODES/STANDARDS-CSA/CMVSS
- (1B1) CODES/STANDARDS USA
- (12D) ELECTRICAL SYSTEM 30 AMP
- (04L) JAPAN EXPORT PACKAGE

COPYRIGHT 2002 WINNEBAGO INDUSTRIES, INC. **WINNEBAGO** 03 2220D

DATE	UNSPECIFIED TOLERANCES ARE:	MATERIAL:
DATE	WHOLE DIM (XX)	
DATE	ONE-PLACE (X.X)	
DATE	TWO-PLACE (X.XX)	
DATE	ANGLE	
DATE	THIRD ANGLE PROJECTION	
DATE		

LAYOUT NO. TITLE: WIRING DIAGRAM-BODY, 110V
 DIA # SCALE: NONE DO NOT SCALE DIMENSIONS SIZE: LONG NO. 141377
 ALL DIMENSIONS ARE IN MILLIMETERS SHEET OF 1 1E NO.

REF: 137244 A | 07/23/02

(04L) (1B1) (265)