




DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION


If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

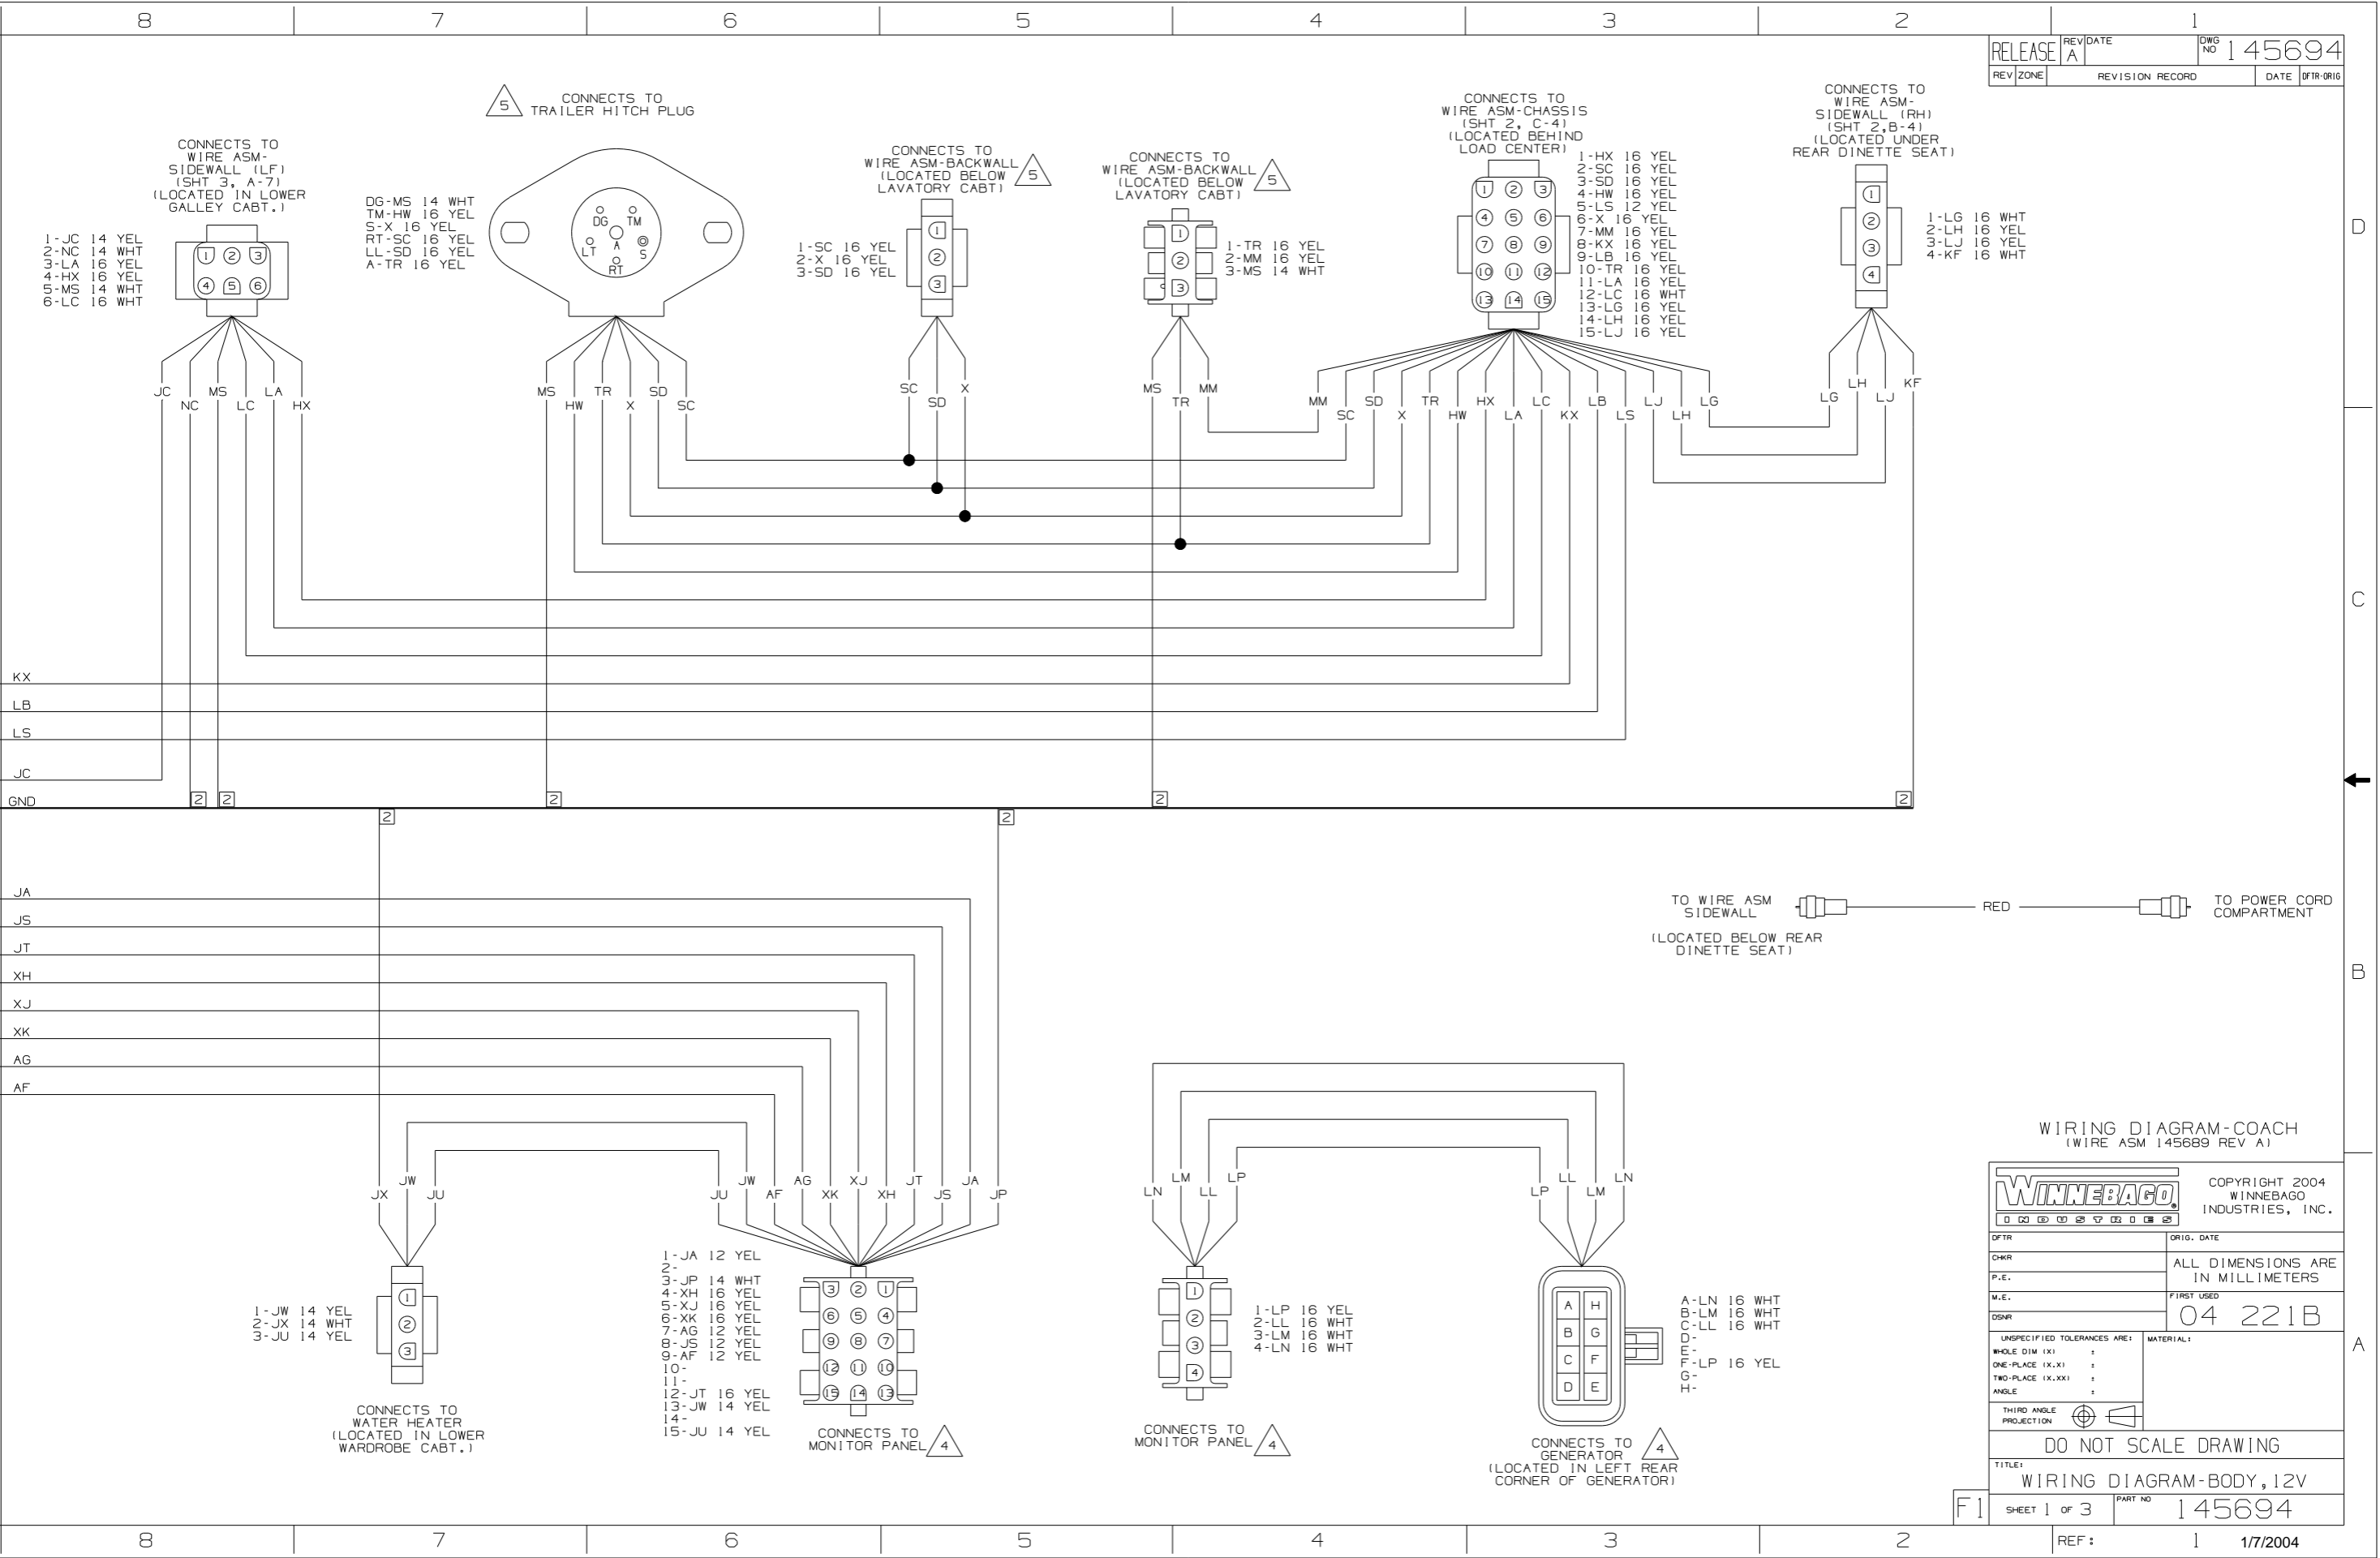

WIRING DIAGRAM-COACH
(WIRE ASM 145689 REV A)

WINNEBAGO		COPYRIGHT 2004 WINNEBAGO INDUSTRIES, INC.	
DFTR	ORIG. DATE	ALL DIMENSIONS ARE IN MILLIMETERS	
CHR		M.E.	
P.E.		FIRST USED	
M.E.		04 221B	
DSNR		UNSPECIFIED TOLERANCES ARE:	
		MATERIAL:	
		WHOLE DIM (X) :	
		ONE-PLACE (X,X) :	
		TWO-PLACE (X,XX) :	
		ANGLE :	
		THIRD ANGLE PROJECTION	
DO NOT SCALE DRAWING			
TITLE: WIRING DIAGRAM-BODY, 12V			
F1	SHEET 1 of 3	PART NO	145694
REF :	1	1/7/2004	

 CONNECTS TO LP DETECTOR (LOCATED BELOW RANGE)




- 1-UK 16 WHT
- 2-WB 16 YEL
- 3-WB 16 YEL



FROM CIRCUIT BREAKER SHT 2, D-7

J 8 BLK

12V FUSE PANEL

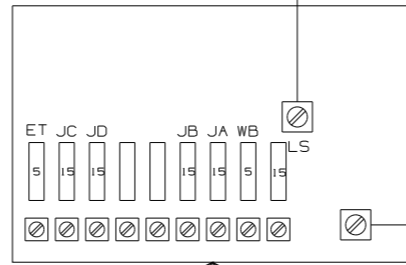


- ET 16 YEL
- JC 14 YEL
- JD 14 YEL
- JB 14 YEL
- JA 14 YEL
- WB 16 YEL
- LS 12 YEL









8 GRN

CHASSIS RAIL GROUND (LOCATED IN LP TANK COMPARTMENT)

CONNECTS TO WIRE ASM-SIDEWALL (RH) (SHT 2, A-6) (LOCATED UNDER REAR DINETTE SEAT)

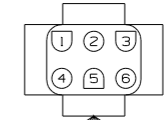


     - 1-JD 14 YEL
- 2-ND 14 WHT
- 3-LB 16 YEL
- 4-JA 14 YEL
- 5-JP 14 WHT
- 6-KX 16 YEL

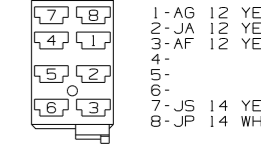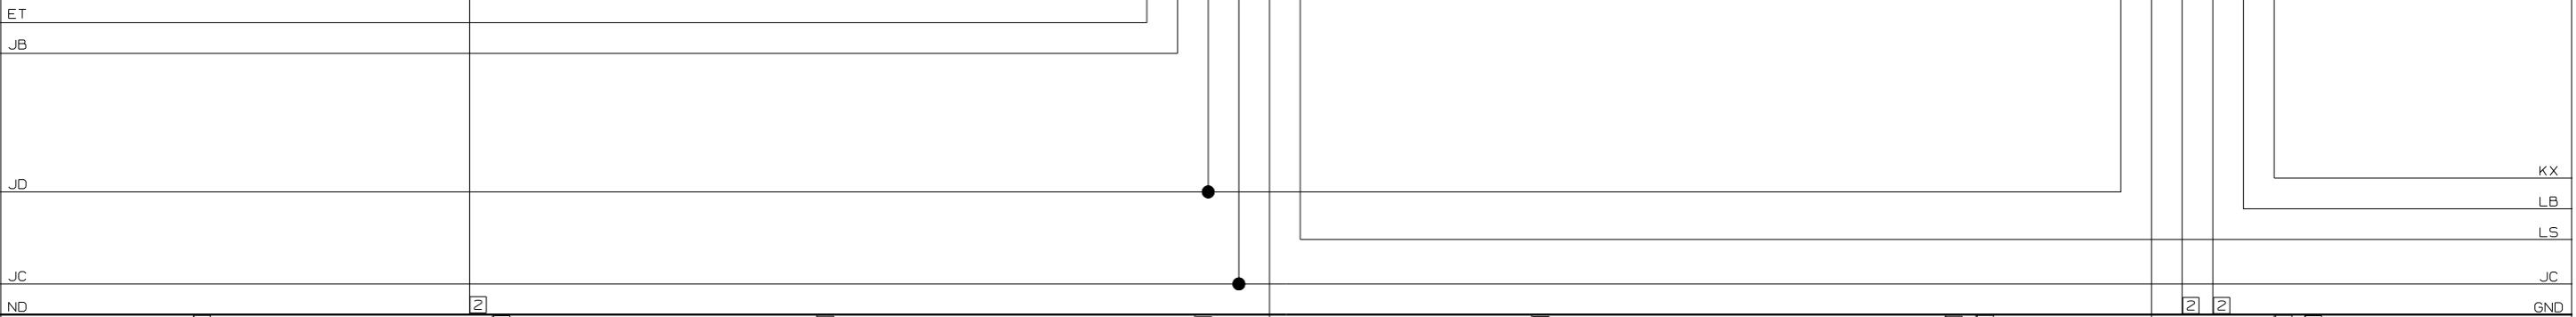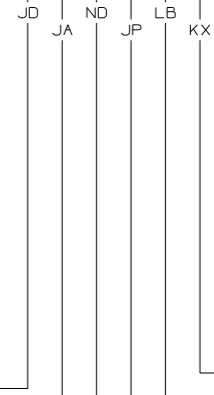



CONNECTS TO EXTERIOR WATER PUMP SWITCH (LOCATED IN DRAINAGE COMPARTMENT)

D
C
B
A

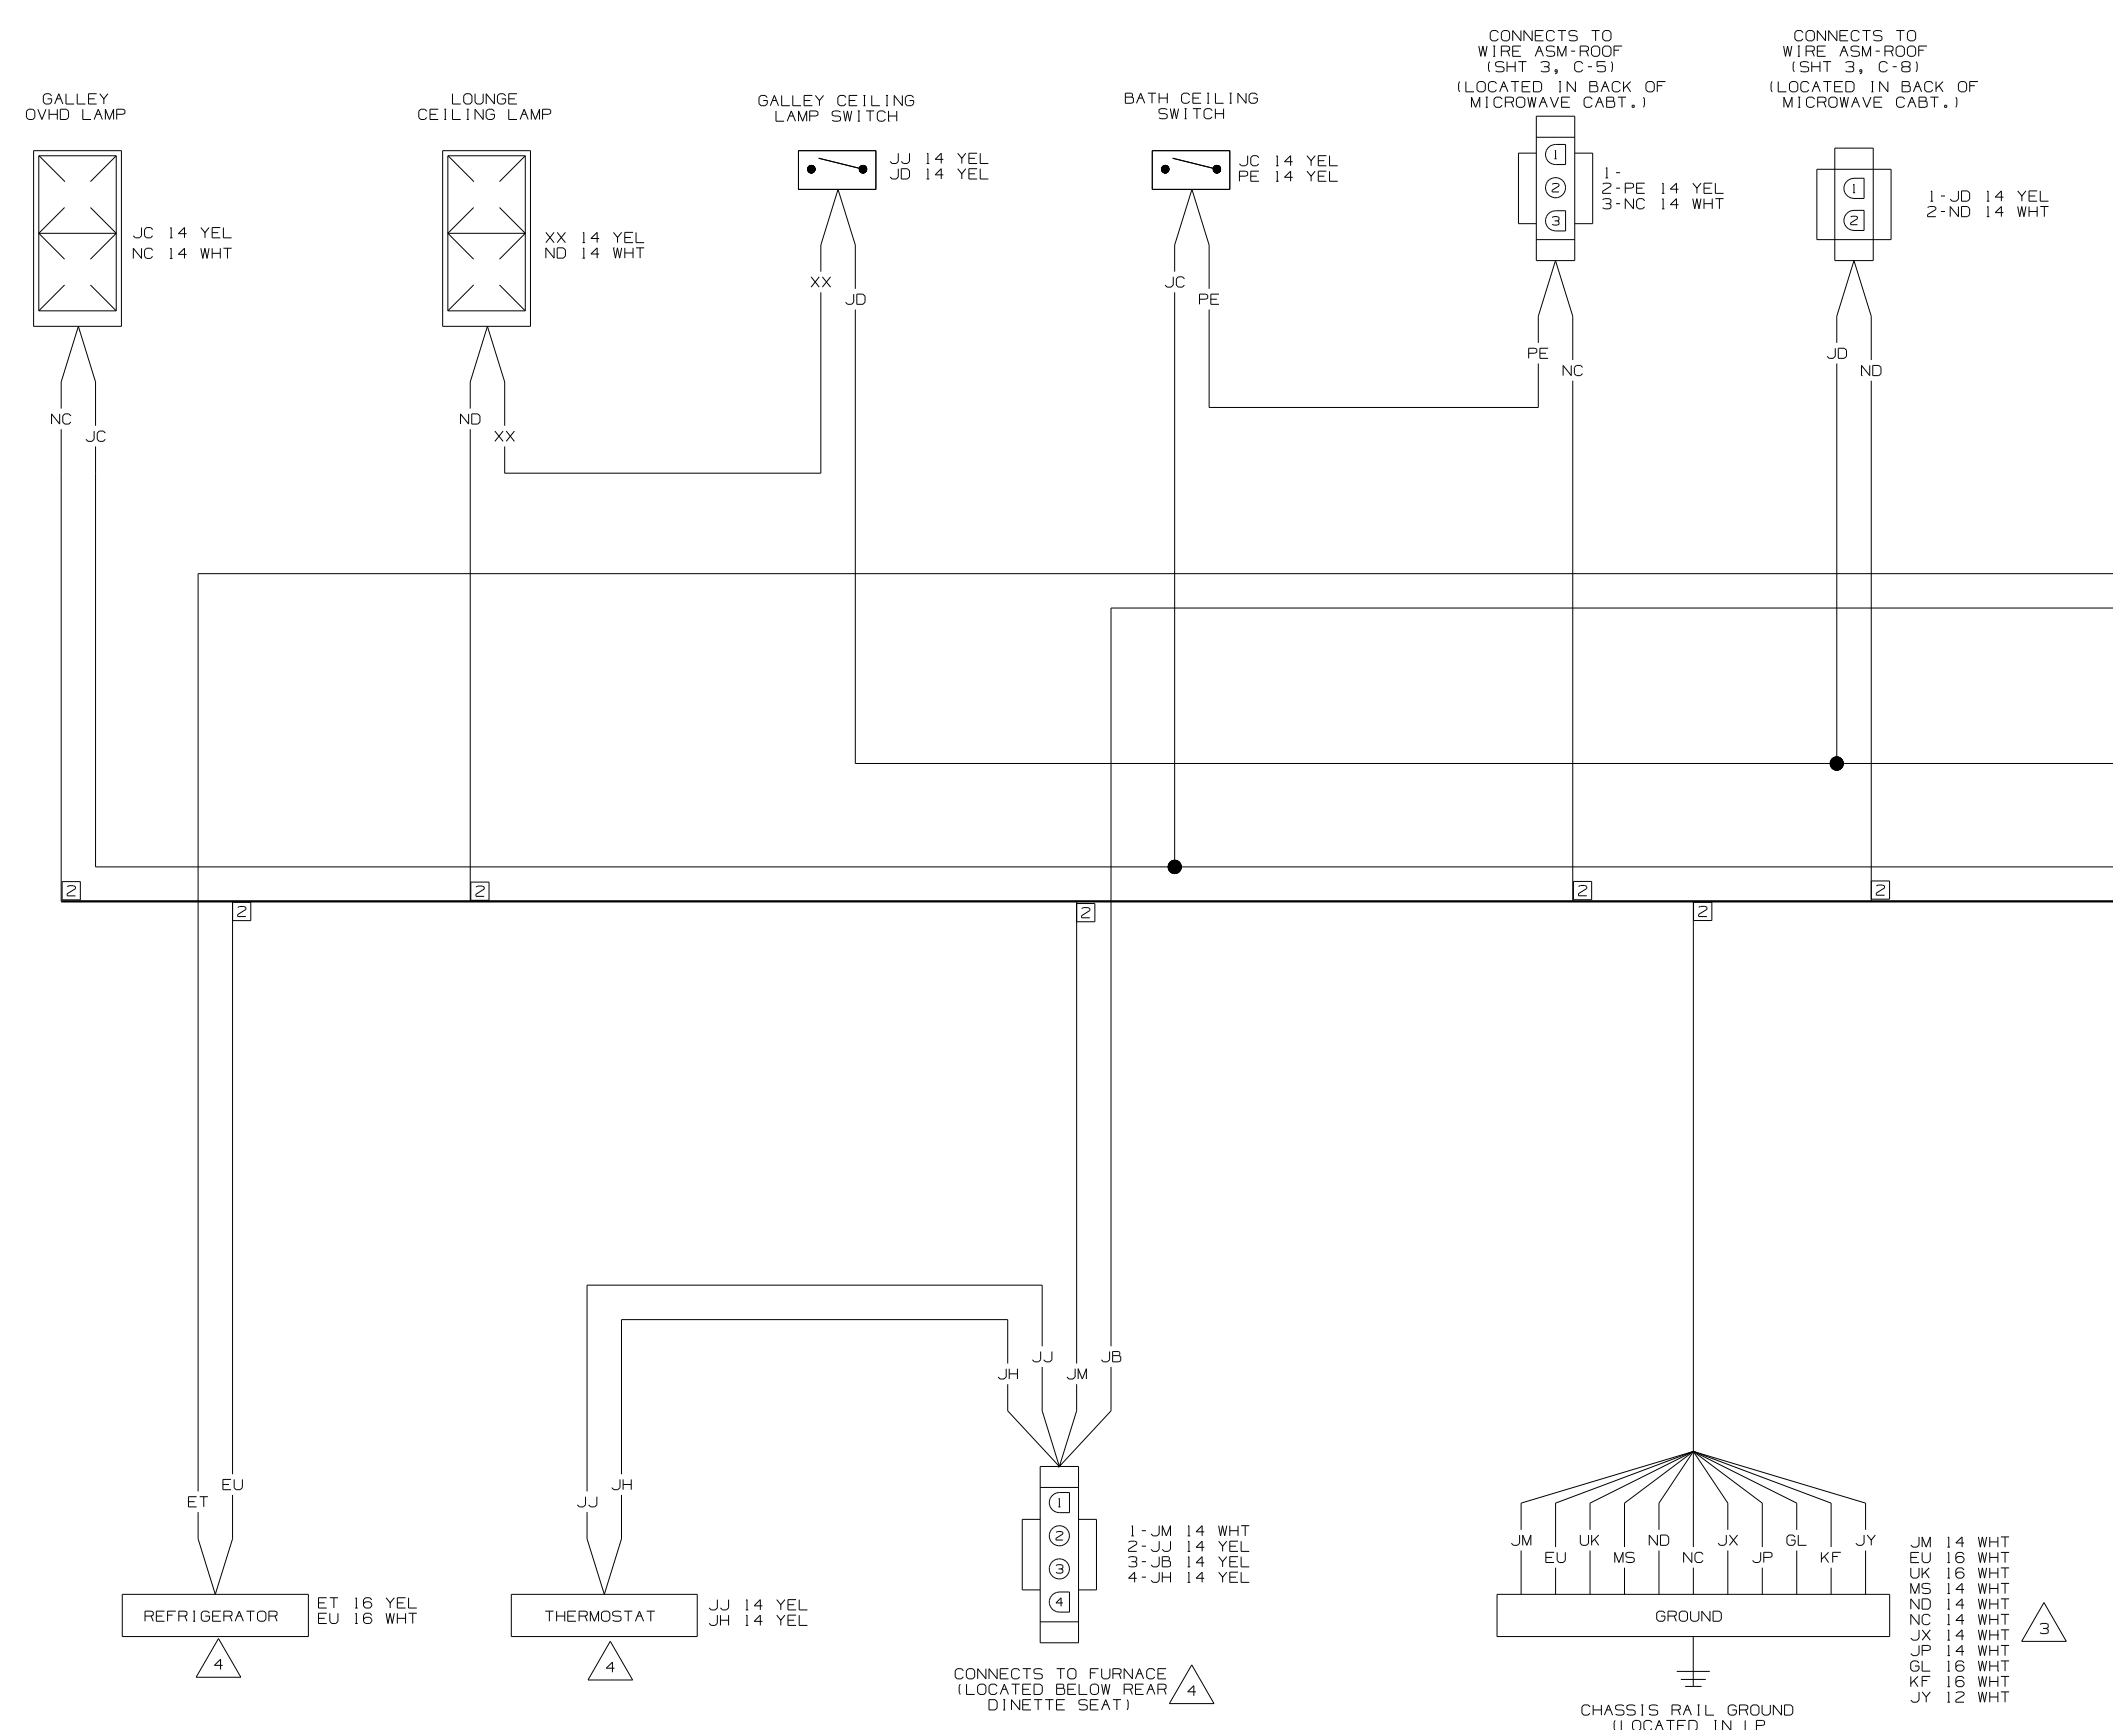

- 5 SEE WIRING DIAGRAM-AUTO FOR ADDITIONAL INFORMATION.
 - 4 SEE MANUFACTURERS DIAGRAM FOR ADDITIONAL INFORMATION.
 - 3 GROUNDS ARE SHOWN AS A SINGLE LINE FOR EASE IN TRACING. EACH GROUND CIRCUIT IS SEPERATE IN THE HARNESS.
 - 2 NOT A SPLICE POINT. INDICATES ENTRY INTO WIRING HARNESS.
1. SPLICES ARE THEORETICAL AND MAY DIFFER IN THE HARNESS.

NOTES:

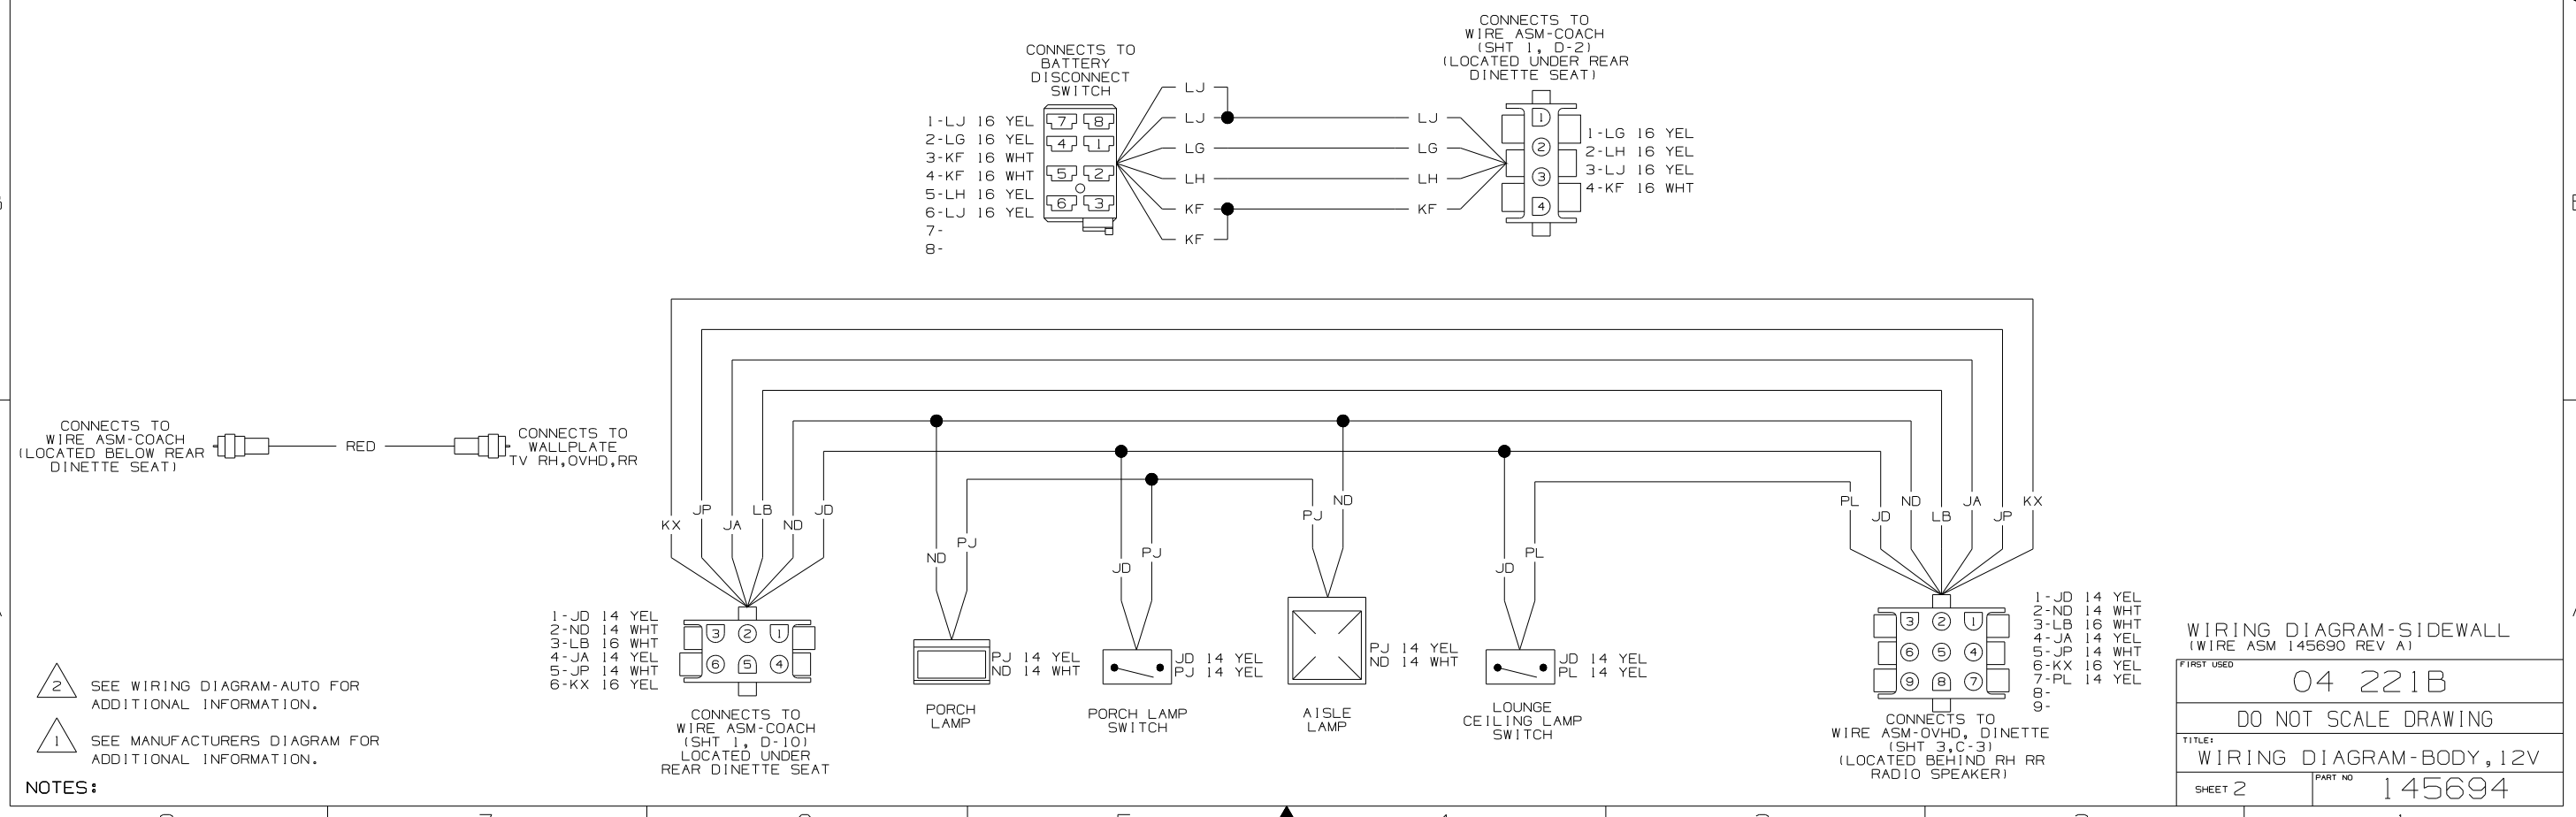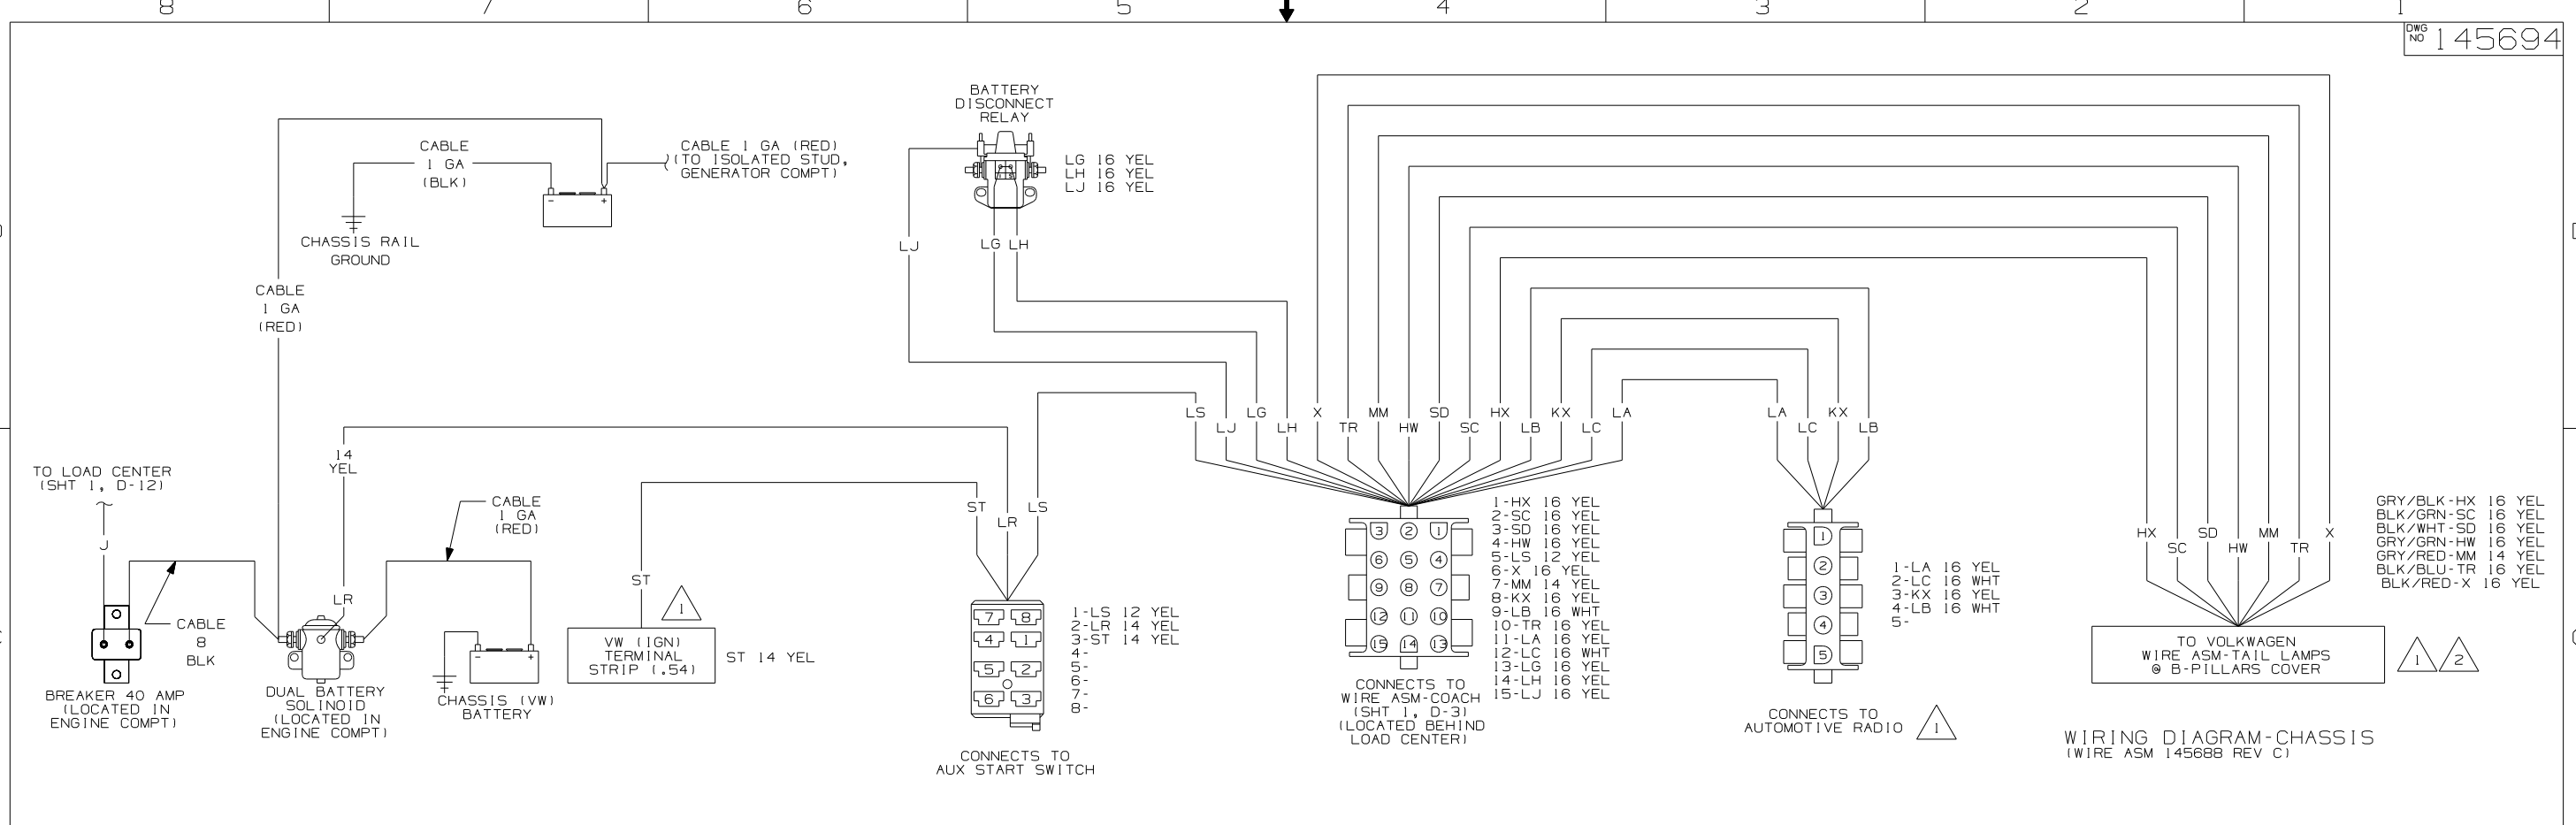


NOTES:


2 SEE WIRING DIAGRAM-AUTO FOR ADDITIONAL INFORMATION.

1 SEE MANUFACTURERS DIAGRAM FOR ADDITIONAL INFORMATION.


FIRST USED		04 221B	
DO NOT SCALE DRAWING			
TITLE: WIRING DIAGRAM-BODY, 12V			
SHEET 2	PART NO	145694	

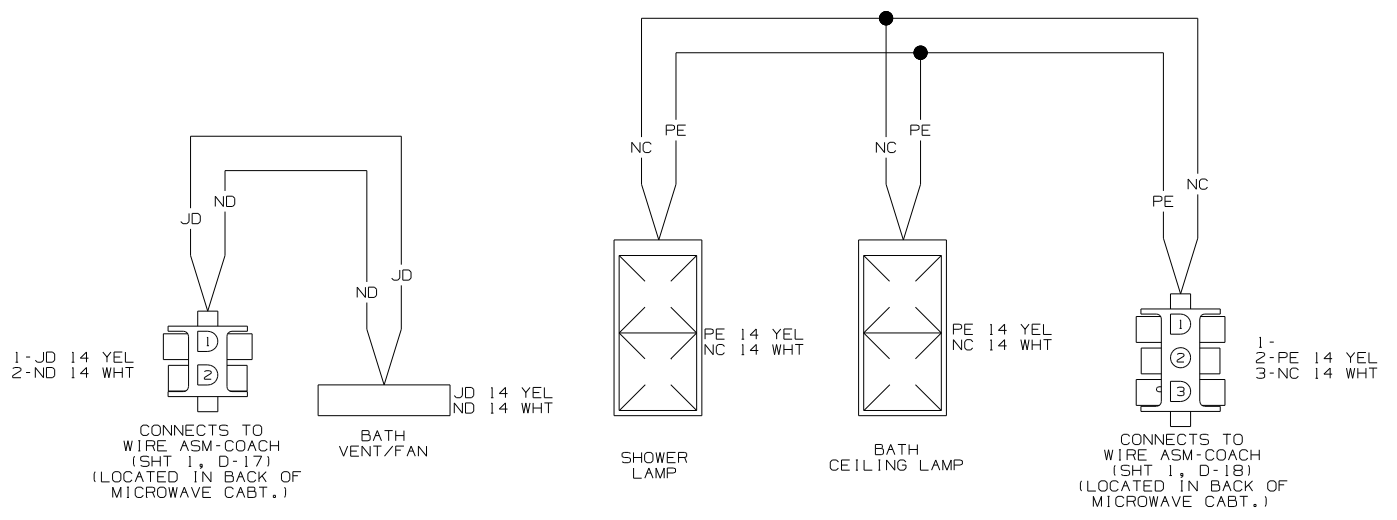


WIRING DIAGRAM-ROOF
(WIRE ASM 139584 REV B)

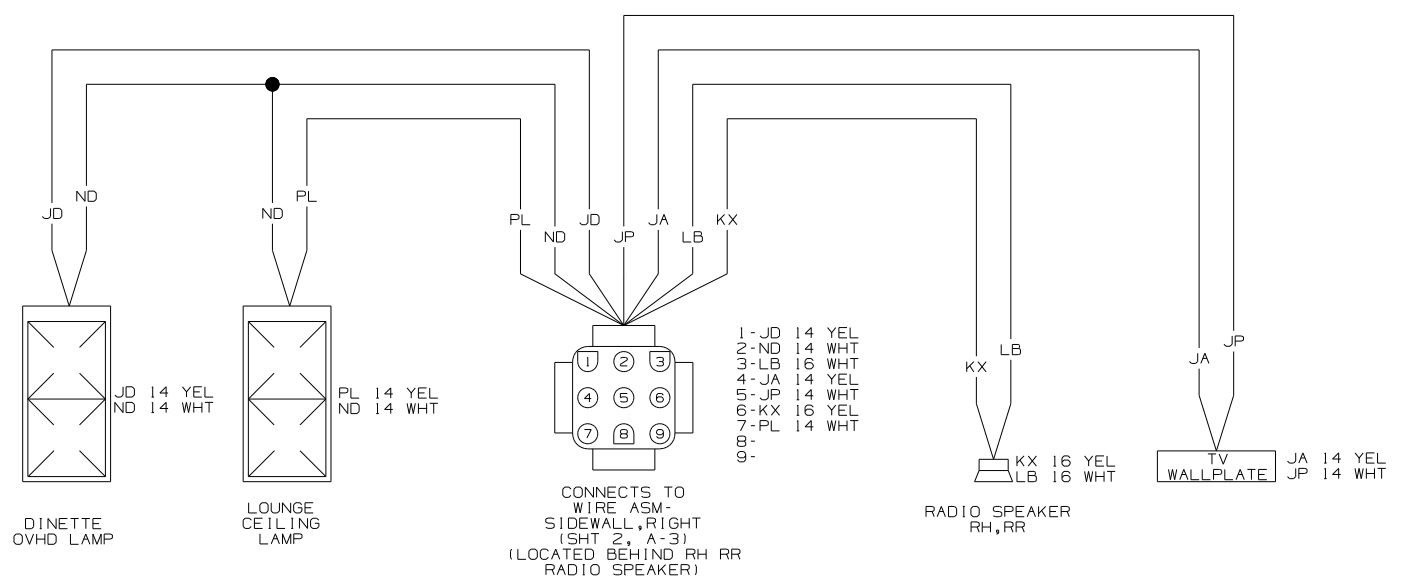

WIRING DIAGRAM-OVHD, RIGHT
(WIRE ASM 139863 REV B)

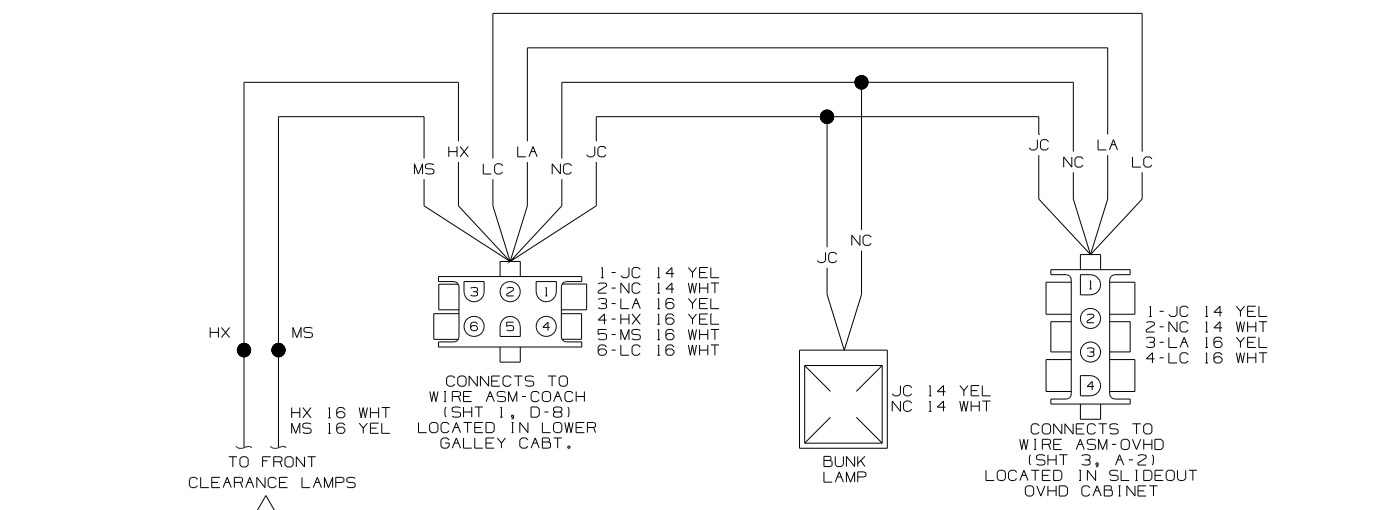

WIRING DIAGRAM-SIDEWALL
(WIRE ASM 139860 REV C)

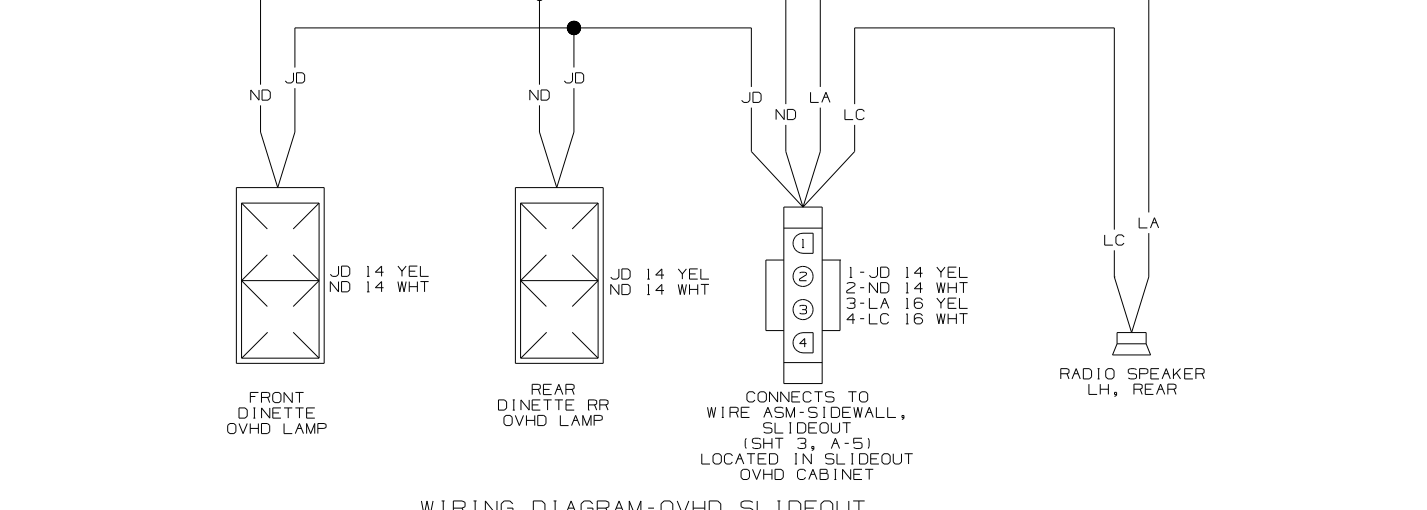

WIRING DIAGRAM-OVHD, SLIDEOUT
(WIRE ASM 136702-03 REV E)

NOTES:
1 SEE WIRING DIAGRAM-AUTO LAMPS

FIRST USED	04 221B
TITLE	DO NOT SCALE DRAWING
TITLE	WIRING DIAGRAM-BODY, 12V
SHEET 3	PART NO 145694