



DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.




CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

CENTRAL AIR UNIT
(LOCATED IN RIGHT REAR
COMPARTMENT BELOW FLOOR)

LOAD CENTER

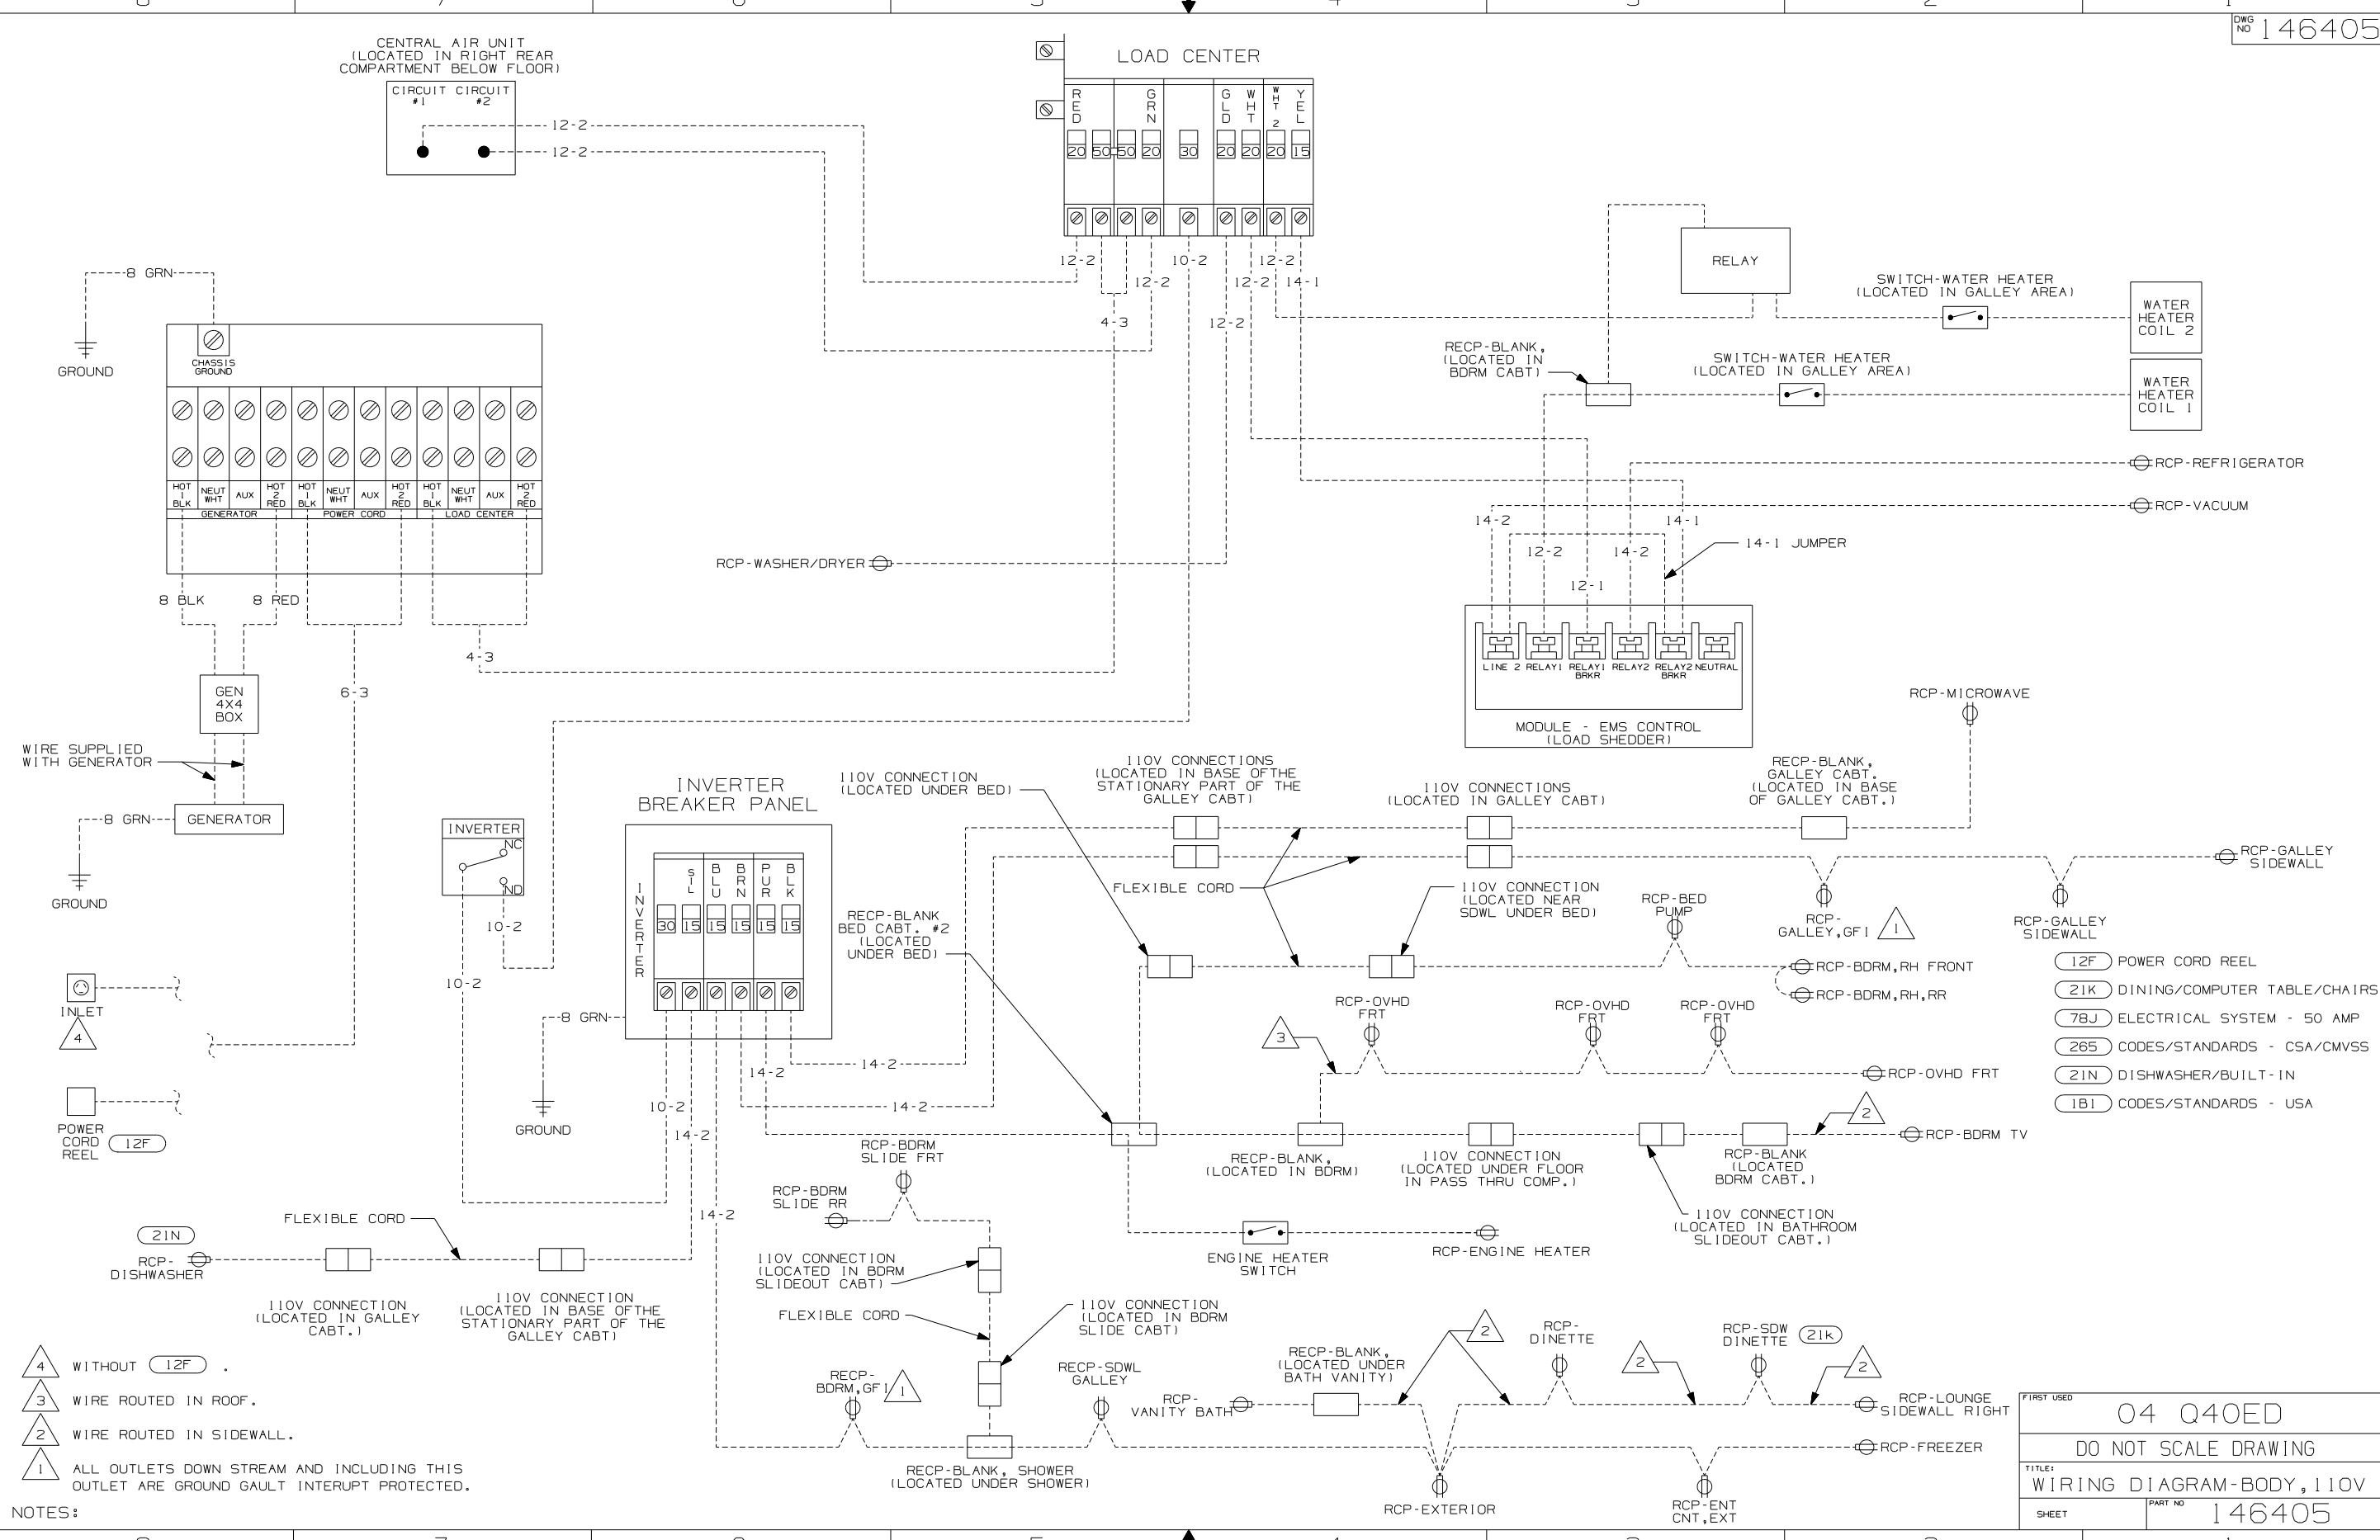

- NOTES:
- 4 WITHOUT 12F .
 - 3 WIRE ROUTED IN ROOF.
 - 2 WIRE ROUTED IN SIDEWALL.
 - 1 ALL OUTLETS DOWN STREAM AND INCLUDING THIS OUTLET ARE GROUND GAULT INTERRUPT PROTECTED.

- 12F POWER CORD REEL
- 21K DINING/COMPUTER TABLE/CHAIRS
- 78J ELECTRICAL SYSTEM - 50 AMP
- 265 CODES/STANDARDS - CSA/CMVSS
- 21N DISHWASHER/BUILT-IN
- 1B1 CODES/STANDARDS - USA

FIRST USED	04 Q40ED
DO NOT SCALE DRAWING	
TITLE	WIRING DIAGRAM-BODY, 110V
SHEET	PART NO 146405