



**DANGER**


**Danger of electrical shock, burns or death.** Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



**CAUTION**

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.



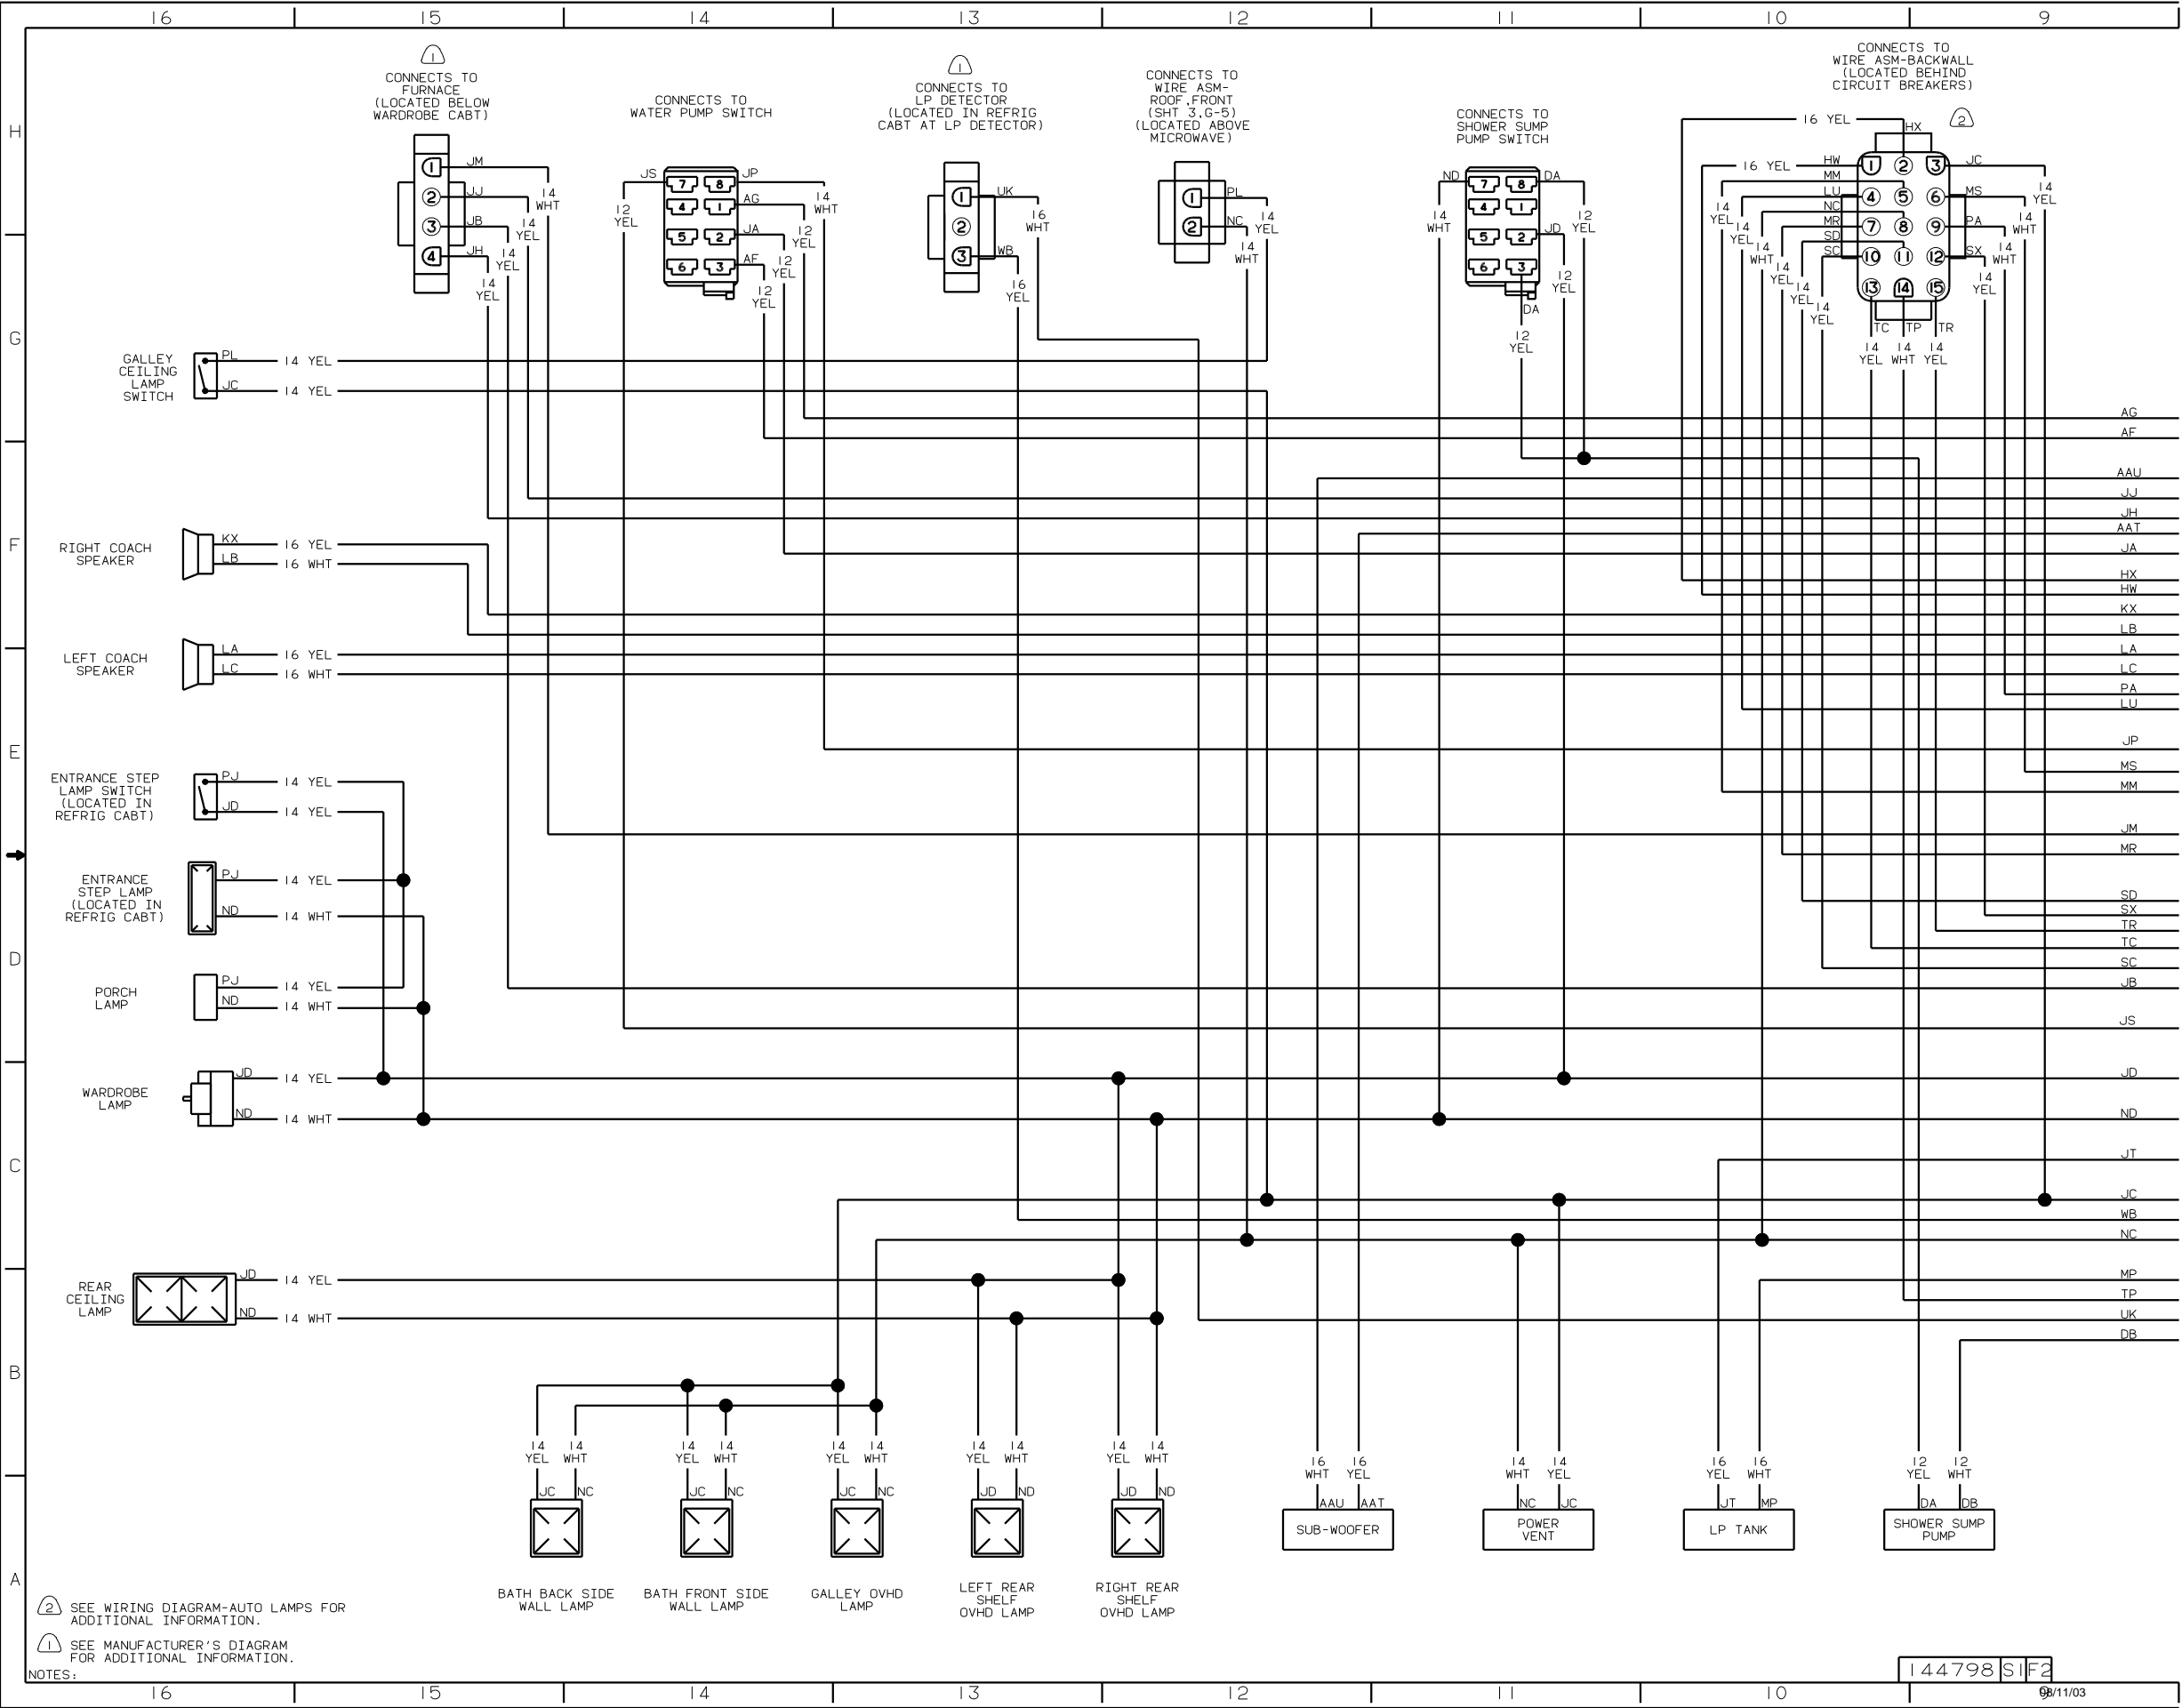

①  
CONNECTS TO FURNACE  
(LOCATED BELOW WARDROBE CABT)

CONNECTS TO WATER PUMP SWITCH

 
①  
CONNECTS TO LP DETECTOR  
(LOCATED IN REFRIG CABT AT LP DETECTOR)

CONNECTS TO WIRE ASM-ROOF-FRONT  
(SHT. 3, G-5)  
(LOCATED ABOVE MICROWAVE)


CONNECTS TO SHOWER SUMP PUMP SWITCH

CONNECTS TO WIRE ASM-BACKWALL  
(LOCATED BEHIND CIRCUIT BREAKERS)

② SEE WIRING DIAGRAM-AUTO LAMPS FOR ADDITIONAL INFORMATION.  
① SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.  
NOTES:



WIRING DIAGRAM-ROOF,FRONT  
(WIRE ASM 119112)

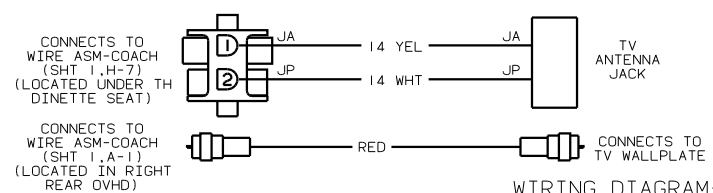

WIRING DIAGRAM-SIDEWALL  
(WIRE ASM 111451-03)