

05/28/11
REPORT 3593-1

WIRE IDENTIFICATION CHART

| CODE / COLOR | FROM: | TO: |
|-----------------|--|---|
| A / 14 YEL | GALLEY CEILING LAMP SWITCH | GALLEY CEILING LAMP |
| B / 12 YEL | OVERCURRENT PROTECTION (30A BREAKER TYPICAL) | POWER PASSENGER SEAT ("BUDDY SEAT") |
| C / 12 WHT | POWER PASSENGER SEAT | GROUND |
| D / 14 YEL | SHOWER OVHD LAMP SWITCH SEE WIRE PF, START OF 97 | SHOWER OVHD LAMP |
| E / 095038-01- | PHONE INPUT JACK | REAR PHONE JACK |
| F / 095038-01- | PHONE INPUT JACK | EXTERIOR PHONE JACK |
| G / 12/ 10 YEL | OVERCURRENT PROTECTION (30A BREAKER TYPICAL) | HIGH SPEED HEATER FAN (USE 10 IF OVER 6' RUN) |
| H / 095038-01- | PHONE INPUT JACK | FRONT PHONE JACK |
| J / 6 BLK | OVERCURRENT PROTECTION (45 OR 55A BREAKER TYP) | COACH 12V PANEL/ CONVERTER BATTERY CHARGE |
| K / 6 BLK | OVERCURRENT PROTECTION (45 OR 55A BREAKER TYP) | COACH 12V PANEL |
| L / 6 GRN | CONVERTER 45 OR 55 AMP | GROUND |
| M / 6 BLK | OVERCURRENT PROTECTION (45 OR 50A BREAKER) | CONVERTER BATTERY CHARGE |
| N / 10 WHT | REFRIGERATOR | GROUND |
| P / 10YEL(BLK) | OVERCURRENT PROTECTION (20A FUSE TYPICAL) | REFRIGERATOR (3 WAY) |
| R / 8 GRN | REFRIGERATOR CHASSIS | GROUND |
| S / 8 OR 6 GRN | GROUND BAR (LEFT SIDE) | CHASSIS GROUND |
| T / 8 OR 6 GRN | GROUND BAR (RIGHT SIDE) | CHASSIS GROUND |
| U / 6 GRN | CONVERTER CHASSIS | GROUND |
| W / 8 GRN | - GROUND STUD | - GROUND STUD |
| X / 14 YEL | - CHASSIS BRAKE LAMP CIRCUIT | - CENTER MOUNT BRAKE LAMP |
| Y / 16 YEL | VOLUME CONTROL | RADIO/TV SPEAKER |
| Z / 6 BLK | OVERCURRENT PROTECTION (45 OR 55A BREAKER TYP) | COACH 12V PANEL |
| AA / 16 WHT | SERVICE ENGINE SOON LAMP | VEHICLE SERVICE ENGINE SOON LAMP CIRCUIT |
| AB / 16 WHT | WATER TANK LEVEL SENSORS | GROUND |
| AC / 16 WHT | MAIN HOLDING TANK SENSORS (BLACK WATER) | GROUND |
| AD / 16 WHT | AUXILIARY HOLDING TANK #1 (GRAY WATER) | GROUND |
| AE / 16 WHT | AUXILIARY HOLDING TANK #2 (GRAY WATER) | GROUND |
| AF / 12 YEL | WATER PUMP SWITCH #1 | MONITOR PANEL WATER PUMP SWITCH |
| AG / 12 YEL | WATER PUMP SWITCH #1 | MONITOR PANEL WATER PUMP SWITCH |
| AH / 14 YEL | OVERCURRENT PROTECTION (10A FUSE TYPICAL) | BRAKE LAMP SWITCH WARNING LAMP (IGNITION RUN/START FED) |
| AJ / 12 WHT | CHASSIS GROUND | BODY GROUND |
| AK / 12 WHT | CHASSIS GROUND | BODY GROUND |
| AL / 12 YEL | HEATER CONTROL (LOW SPEED) | BLOWER MOTOR (LOW SPEED) |
| AM / 12YEL(WHT) | HEATER CONTROL (MEDIUM/LOW SPEED) | BLOWER MOTOR (MEDIUM/LOW SPEED) |

05/28/11
REPORT 3593-1

WIRE IDENTIFICATION CHART

| CODE / COLOR | FROM: | TO: |
|-----------------|--|--|
| AN / 12 YEL | HEATER CONTROL (MEDIUM/HIGH SPEED) | BLOWER MOTOR (MEDIUM/HIGH SPEED) |
| AP / 14 YEL | IGNITION SWITCH ACCESSORY FEED | OVERCURRENT PROTECTION (15A FUSE TYPICAL) |
| AR / 14 WHT | HORN, FOG LAMPS | GROUND |
| AS / 18 WHT | DASH RADIO | RIGHT FRONT SPEAKER (NEGATIVE) |
| AT / 18 WHT | DASH RADIO | LEFT FRONT SPEAKER (NEGATIVE) |
| AU / 16 YEL | OVERCURRENT PROTECTION (15A BREAKER TYPICAL) | FRONT CARGO LAMP SWITCH (IGNITION ACCESSORY FED) |
| AW / 16 YEL | FRONT CARGO LAMP SWITCH | REAR CARGO LAMP SWITCH |
| AX / 16 YEL | FRONT CARGO LAMP SWITCH | REAR CARGO LAMP SWITCH |
| AY / 16 YEL | REAR CARGO LAMP SWITCH | CARGO LAMPS |
| BA / 14 WHT | WINDSHIELD WIPER MOTOR | GROUND |
| BB / 16 YEL | OVERCURRENT PROTECTION (6A BREAKER TYPICAL) | INSTRUMENT PANEL GAUGES (IGNITION ACCESSORY FED) |
| BC / 14 WHT | INDICATOR LAMPS | GROUND |
| BD / 14 YEL | OVERCURRENT PROTECTION (10A FUSE TYPICAL) | BRAKE LAMP SWITCH |
| BE / 12 WHT | BLOWER MOTOR | GROUND |
| BF / 14 WHT | WASHER BOTTLE PUMP/HORN | GROUND |
| BG / 14 YEL | FUEL SENDER | FUEL GAUGE |
| BH / 14 YEL | RUN ONLY POWER RELAY | ENGINE WIRING |
| BJ / 16 YEL | OVERCURRENT PROTECTION (10A FUSE TYPICAL) | ENGINE WIRING (IGNITION RUN/START FED) |
| BK / 14 YEL | OVERCURRENT PROTECTION (10A FUSE TYPICAL) | HORN RELAY FEED |
| BL / 16 WHT | CIGAR LIGHTER | GROUND |
| BM / 16 YEL | CHASSIS BATTERY POWER | CIGAR LIGHTER |
| BN / 16 YEL | ACCESSORY POWER | SPOTLAMP |
| BP / 14 WHT | POWER MIRROR | GROUND |
| BR / 14 YEL | POWER MIRROR (RIGHT SIDE) | POWER MIRROR CONTROL SWITCH |
| BS / 14 YEL | POWER MIRROR HEAT SWITCH | POWER MIRRORS |
| BT / 14 YEL | POWER MIRROR (LEFT SIDE) | POWER MIRROR CONTROL SWITCH |
| BU / 14 YEL | RUN ONLY POWER | POWER MIRROR HEAT/ CONTROL SWITCHES |
| BW / 12 YEL | IGNITION SWITCH | ACCESSORY CIRCUIT FEED |
| BX / 12YEL(ORN) | IGNITION SWITCH RUN ONLY SOURCE | GENERAL(TURN, BACK UP,DASH IGNITION CIRCUIT,ETC) |
| BY / 12YEL/8BLK | OVERCURRENT PROTECTION (16GA FUSELINK)(8GA PASSTHRU) | CHASSIS BATTERY SOURCE(AUTO AC BLOWER,POWER DRIVER SEAT,ETC) |
| CA / 12 YEL | OVERCURRENT PROTECTION (16GA FUSELINK TYPICAL) | CHASSIS BATTERY SOURCE |
| CB / 12 YEL | IGNITION SWITCH START SOURCE | START CIRCUIT SOURCE |
| CC / 16 YEL | ALTERNATOR | ALTERNATOR WARNING LAMP |
| CD / 16 YEL | OIL PRESSURE WARNING SENDER | OIL PRESSURE WARNING LAMP |

05/28/11
REPORT 3593-1

WIRE IDENTIFICATION CHART

| CODE / COLOR | FROM: | TO: |
|-----------------|---|--|
| CE / 16 YEL | WATER TEMPERATURE WARNING SENDER | WATER TEMPERATURE WARNING LAMP |
| CF / 14 YEL | REAR TV JACK | POWER FEED SWITCH |
| CG / 14 YEL | CLUTCH/NEUTRAL SWITCH | START ISOLATION RELAY |
| CH / 14 YEL | START RELAY | ENGINE WIRING |
| CJ / 14 YEL | WINDSHIELD WIPER/WASHER CONTROL SWITCH | WINDSHIELD WASHER PUMP |
| CK / 16 YEL | TELEVISION | SPEAKER (POSITIVE) |
| CL / 16 WHT | TELEVISION | SPEAKER (NEGATIVE) |
| CM / 10 YEL | DVERCURRENT PROTECTION (15A BREAKER TYPICAL) | INVERTER FEED |
| CN / 10 WHT | INVERTER | GROUND |
| CP / 12 WHT | INVERTER CHASSIS | GROUND |
| CR / 16 WHT | VEHICLE CHECK ENGINE LAMP CIRCUIT | CHECK ENGINE LAMP |
| CS / 16 WHT | REMOTE THERMOSTAT (RC TERM/ORG EXPORT AIR) | GROUND |
| CT / 16 YEL | DAYTIME RUNNING LAMP MODULE OUTPUT(PIN 30) | LOW BEAM HEADLAMP CIRCUIT |
| CU / 16 YEL | DAYTIME RUNNING LAMP MODULE ENABLE(PIN 85) | RUN/START CIRCUIT |
| CW / 14 YEL | DAYTIME RUNNING LAMP MODULE POWER(PIN 87A) | CHASSIS BATTERY POWER |
| CX / 16 WHT | DAYTIME RUNNING LAMP MODULE GROUND(PIN 87) | GROUND |
| CY / 16 YEL | DAYTIME RUNNING LAMP MODULE HIGH BEAM DISABLE(PIN 86) | HIGH BEAM HEADLAMP CIRCUIT |
| DA / 12 YEL | SHOWER SUMP SYSTEM PUMP SWITCH | SHOWER SUMP SYSTEM PUMP |
| DB / 12 WHT | SHOWER SUMP SYSTEM PUMP | GROUND |
| DC / 16 YEL | REAR ROOF AIR CONDITIONER EXHAUST CIRCUIT | THERMOSTAT |
| DD / 16 YEL | REAR ROOF AIR CONDITIONER COOL CIRCUIT | THERMOSTAT (Y TERM-EXPORT AIR/YEL) |
| DE / 16 YEL | REAR ROOF AIR CONDITIONER HIGH SPEED FAN CIRCUIT | THERMOSTAT (H TERM-EXPORT AIR/BLU) |
| DF / 16 YEL | REAR ROOF AIR CONDITIONER LOW SPEED FAN CIRCUIT | THERMOSTAT (G TERM-EXPORT AIR/RED) |
| DG / 12YEL(GRY) | IGNITION SWITCH | ACCESSORY/RUN FEED |
| DH / 14 YEL | EMERGENCY SHUTDOWN GAUGE | FUEL SOLENOID (DIESEL ENGINE) |
| DJ / 16 YEL | TV/RADIO SPEAKER SWITCHING RELAY OUTPUT | LEFT REAR SPEAKER POSITIVE |
| DK / 16 WHT | TV/RADIO SPEAKER SWITCHING RELAY OUTPUT | LEFT REAR SPEAKER NEGATIVE |
| DL / 16 YEL | TV/RADIO SPEAKER SWITCHING RELAY OUTPUT | RIGHT REAR SPEAKER POSITIVE |
| DM / 16 WHT | TV/RADIO SPEAKER SWITCHING RELAY OUTPUT | RIGHT REAR SPEAKER NEGATIVE |
| DN / 10 YEL | BATTERY DISCONNECT RELAY | CIRCUIT BREAKER SLIDEOUT ROOM CIRCUIT BRKR |
| DP / 14 YEL | TV/RADIO SPEAKER FEED SELECT SWITCH | TV/RADIO SPEAKER SWITCHING RELAY COIL INPUT OR AMPLIFIER |
| DR / 16 YEL | HWH WIRING OR KWIKEE FRONT SLIDE MODULE | SLIDEOUT SWITCH (ROOM ONE EXTEND) |
| DS / 16 WHT | CONTROL MODULE (FRONT SLIDE)(GROUND) | SLIDEOUT SWITCH (FRONT SLIDEOUT) |
| DT / 16 YEL | SLIDEOUT ROOM RELAY (PIN 30) | SLIDEOUT ROOM CONTROL SWITCH |

WIRE IDENTIFICATION CHART

| CODE / COLOR | FROM: | TO: |
|-----------------|---|--|
| DU / 16 YEL | HWH WIRING OR KWIKEE FRONT SLIDE MODULE | SLIDEOUT SWITCH (ROOM ONE RETRACT) |
| DW / 16 WHT | SLIDEOUT ROOM SWITCH (G) (SWITCHED GROUND TO PUMP) | HWH WIRING (SWITCHED GROUND TO PUMP) |
| DX / 16 WHT | HWH WIRING (G) (GROUND) | SLIDEOUT ROOM SWITCH (GROUND) |
| DY / 16 WHT | HWH WIRING (G) (JACK SENSE; SWITCHED GROUND) | SLIDEOUT ROOM RELAY (JACK SENSE; SWITCHED GROUND) |
| EA / 16 YEL | HWH WIRING (G) (ACCESSORY POWER) | SLIDEOUT ROOM RELAY (ACCESSORY POWER) |
| EB / 16 YEL | SLIDEOUT ROOM RELAY (G) (SWITCHED ACCESSORY POWER) | FRT/RR SLIDEOUT ROOM SWITCH (SWITCHED EXTEND/RETRACT PWR) |
| EC / 10 YEL | CHASSIS BATTERY POWER SOURCE (BATTERY MODE SOLENOID POST) | THRU FUSE TO AMP SOURCE SELECT RELAY(PIN 87)(OPTION 21V,95 Q |
| ED / 10 YEL | COACH BATTERY POWER SOURCE (BATTERY MODE SOLENOID POST) | THRU FUSE TO AMP SOURCE SELECT RELAY(PIN 87A)(OPTION 21V,95Q |
| EE / 16 YEL | AIR RIDE SUSPENSION LEFT DOWN SWITCH POSITION | AIR RIDE SUSPENSION LEFT HEIGHT CONTROL BOX |
| EF / 16 YEL | AIR RIDE SUSPENSION LEFT UP SWITCH POSITION | AIR RIDE SUSPENSION LEFT HEIGHT CONTROL BOX |
| EG / 16 WHT | AIR RIDE SUSPENSION WIRE ASM GROUND | AIR RIDE SUSPENSION CONTROL LAMP GROUNDS |
| EH / 16 YEL | AIR RIDE SUSPENSION RIGHT DOWN SWITCH POSITION | AIR RIDE SUSPENSION RIGHT HEIGHT CONTROL BOX |
| EJ / 16 YEL | AIR RIDE SUSPENSION RIGHT UP SWITCH POSITION | AIR RIDE SUSPENSION RIGHT HEIGHT CONTROL BOX |
| EK / 16 YEL | AIR RIDE SUSPENSION AUTO MODE SWITCH POSITION | AIR RIDE SUSPENSION HEIGHT CONTROL BOXES |
| EL / 16 YEL | RUN ONLY POWER | AIR RIDE SUSPENSION AUTO/MANUAL MODE SWITCH |
| EM / 16 YEL | AIR RIDE SUSPENSION COMPRESSOR | COMPRESSOR ON WARNING LAMP |
| EN / 16 YEL | AIR RIDE SUSPENSION MANUAL MODE SWITCH POSITION | LEVEL CONTROL SWITCHES AND INDICATOR LAMP |
| EP / 14 YEL | OVERCURRENT PROTECTION (15A BREAKER TYPICAL) | SPOTLAMP |
| ER / 16 YEL | OVERCURRENT PROTECTION (6A BREAKER TYPICAL) | ELECTRIC STEP KILL SWITCH |
| ES / 16 YEL | ELECTRIC STEP KILL SWITCH | ELECTRIC STEP |
| ET / 16 YEL | OVERCURRENT PROTECTION (6A BREAKER TYPICAL) | REFRIGERATOR (2 WAY) |
| EU / 16 WHT | REFRIGERATOR (2 WAY) | GROUND |
| EW / 14 YEL | FUEL HEATER SWITCH | FUEL HEATER (DIESEL ENGINE) |
| EX / 14 YEL | TELEVISION POWER SWITCH | TELEVISION WALL PLATE |
| EY / 12YELLTBLU | OVERCURRENT PROTECTION (16GA FUSELINK TYPICAL) | IGNITION SWITCH FEED #2 |
| FA / 14 YEL | DRIVER'S DOOR PASSENGER SIDE POWER WINDOW SWITCH(DOWN,PIN2) | PASSENGER'S POWER WINDOW SWITCH(PIN 2) |
| FB / 14 YEL | DRIVER'S DOOR PASSENGER SIDE POWER WINDOW SWITCH(UP,PIN 4) | PASSENGER'S POWER WINDOW SWITCH(PIN 4) |
| FC / 14 YEL | PASSENGER'S DOOR POWER WINDOW SWITCH(DOWN,PIN 1) | PASSENGER'S DOOR POWER WINDOW MOTOR(DOWN) |
| FD / 14 YEL | PASSENGER'S DOOR POWER WINDOW SWITCH(UP,PIN 5) | PASSENGER'S DOOR POWER WINDOW MOTOR(UP) |
| FG / 16/10 YEL | AMPLIFIER POWER SOURCE | AMPLIFIER POWER FEED |
| FH / 16/10 WHT | AMPLIFIER | GROUND |
| FJ / 12 YEL | WATER PUMP SWITCH #2 (THREE SWITCH SYSTEM) | WATER PUMP SWITCH #1 (THREE SWITCH SYSTEM) |
| FK / 12 YEL | WATER PUMP SWITCH #2 (THREE SWITCH SYSTEM) | WATER PUMP SWITCH #1 (THREE SWITCH SYSTEM) |
| FL / 14 YEL | SECOND PORCH LAMP SWITCH | SECOND PORCH LAMP |

WIRE IDENTIFICATION CHART

| CODE / COLOR | FROM: | TO: |
|----------------|---|--|
| FM / 14 WHT | SOLENOID MOUNTING BOLT | GROUND |
| FN / 16 YEL | SOURCE SELECTOR SWITCH (DELUXE SOUND SYSTEM,95 LUXOR) | AMP & EQUALIZER REMOTE TRIGGER (DELUXE SOUND SYSTEM,95 LUXOR |
| FP / 16 YEL | EXHAUST BRAKE SWITCH (DIESEL PUSHER CHASSIS) | CHASSIS EXHAUST BRAKE HARNESS & BRAKE ON DASH INDICATOR LAM |
| FR / 14 YEL | FORD RUN/ACCESSORY IGNITON CIRCUIT(WHT/PUR,10A FUSED) | DOCKING LAMPS, RELAY TRIGGER, REAR MONITOR CAMERA FEED |
| FS / 14 YEL | DOCKING LAMPS RELAY(PIN 87) | DOCKING LAMPS |
| FT / 14 WHT | DOCKING LAMPS | GROUND |
| FU / 14 YEL | AUTOMOTIVE AIR WIRING | FORD A/C COMPRESSOR CLUTCH SWITCH CIRCUIT |
| FW / 14 YEL | DOCKING LAMPS SWITCH | DOCKING LAMPS RELAY(PIN 30) |
| FX / 12 YEL | OVERCURRENT PROTECTION (30A BRKR OR FUSE) | POWER DRIVER SEAT (I.E.,6 WAY) |
| FY / 12 WHT | POWER DRIVER SEAT (I.E.,6 WAY) | GROUND |
| GA / 14 YEL | WATER SYSTEM WINTERIZATION SWITCH | WINTERIZATION VALVE |
| GB / 14 YEL | WATER HEATER BYPASS SWITCH | WATER HEATER BYPASS VALVE |
| GC / 16 YEL | SLIDEOUT ROOM SPDT SWITCH (M) (SWITCHED WIRE) | HWH WIRING (SWITCHED WIRE) |
| GD / 16 YEL | WIPER CONTROL MODULE | WIPER MOTOR (S TERMINAL) |
| GE / 16 YEL | SWITCHED DOME LAMP FEED | DOME LAMP |
| GF / 16 WHT | COMMON REAR CHANNEL SPEAKER RETURN | REAR SPEAKERS |
| GG / 16 YEL | RADIO REMOTE TRIGGER (DELUXE SOUND OPTION) | SOURCE SELECTOR SWITCH (LUXOR) |
| GH / 14 WHT | GLOW PLUG WAIT LAMP (DIESEL ENGINE) | ENGINE SENDER |
| GJ / 16 YEL | COACH BATTERY POWER (UPSTREAM OF DISCONNECT) | LP DETECTOR AND/OR SOLAR PANEL WIRING OVERCURRENT PROTECTION |
| GK / 14 YEL | AIR HORN SWITCH | CHASSIS HORN |
| GL / 16 WHT | WATER/HOLDING TANKS LEVEL SENSORS | GROUND |
| GM / 16 YEL | JET AIR RIDE SUSPENSION PRESSURE SENSORS | CHECK REAR AIR SUSPENSION DASH WARNING LAMP |
| GN / 16 YEL | REAR TV SPEAKER OUTPUT (POSITIVE) | REAR TV SPEAKER (POSITIVE) |
| GP / 16 WHT | REAR TV SPEAKER OUTPUT (NEGATIVE) | REAR TV SPEAKER (NEGATIVE) |
| GR / 14 YEL | THERMOSTATICALLY CONTROLLED ROOF VENT (SEND) | THERMOSTAT (RETURN) |
| GS / 14 YEL | THERMOSTATICALLY CONTROLLED ROOF VENT (RETURN) | THERMOSTAT (RETURN) |
| GT / 16 YEL | RADIO POWER SWITCH (MEMORY FEED) | RADIO (MEMORY FEED) |
| GU / 16 YEL | DEFOG MODULE OUTPUT | DEFOG RELAY, INDICATOR LAMP |
| GW / 16 WHT | DEFOG SWITCH ON/OFF | DEFOG MODULE ON/OFF |
| GX / 16/12 WHT | STEP COVER SWITCH (REF AAA-16/KA-12) | GROUND |
| GY / 12 YEL | DEFOG RELAY | DEFOG UNIT |
| HA / 14 YEL | READING LAMPS SWITCH (93 VANS) | READING LAMPS |
| HB / 14 YEL | "MOOD" LAMPS SWITCH (93 VANS) | "MOOD" LAMPS |
| HC / 14 YEL | 12V POWER SOURCE (93 VANS) | OVERCURRENT PROTECTION (15A FUSE TYPICAL) |

WIRE IDENTIFICATION CHART

| CODE / COLOR | FROM: | TO: |
|--------------|---|--|
| HD / 14 YEL | SOFA SLIDE MOTOR POSITIVE (94 VANS) | SOFA MONOPLEX CONTROLLER |
| HE / 14 WHT | SOFA SLIDE MOTOR NEGATIVE (94 VANS) | SOFA MONOPLEX CONTROLLER |
| HF / 14 YEL | SOFA RECLINE MOTOR POSITIVE (94 VANS) | SOFA MONOPLEX CONTROLLER |
| HG / 14 WHT | SOFA RECLINE MOTOR NEGATIVE (94 VANS) | SOFA MONOPLEX CONTROLLER |
| HH / 16 YEL | SOFA MONOPLEX SWITCH (94 VANS) | SOFA MONOPLEX CONTROLLER |
| HJ / 16 WHT | SOFA MONOPLEX SWITCH (94 VANS) | GROUND |
| HK / 14 WHT | SOFA MONOPLEX CONTROLLER (94 VANS) | GROUND |
| HL / 14 YEL | FLOOD LAMP SWITCH (94 VANS) | FLOOD LAMP |
| HM / 16 YEL | REAR TV SPEAKER OUTPUT (POSITIVE) | REAR TV SPEAKER (POSITIVE) |
| HN / 16 WHT | REAR TV SPEAKER OUTPUT (NEGATIVE) | REAR TV SPEAKER (NEGATIVE) |
| HP / 16 YEL | OVERCURRENT PROTECTION (94 VANS) | REAR AC |
| HR / 14 YEL | SWITCH (94 1200 MODEL VAN) | 12VOLT RECEPTACLE |
| HS / 16 YEL | SOLAR PANEL (1HS INDICATOR TO BATTERY) | COACH BATTERY THRU OVERCURRENT PROTECTION |
| HT / 16 WHT | SOLAR PANEL (1HT INDICATOR TO GROUND) | GROUND |
| HU / 16 YEL | GENERATOR SWITCH (LED) | GENERATOR (POSITIVE SIGNAL) |
| HW / 16 YEL | LICENSE PLATE LAMP FEED | LICENSE PLATE LAMP |
| HX / 16 YEL | CHASSIS CLEARANCE LAMP CRT #2 | CLEARANCE/MARKER LAMPS |
| HY / 12 WHT | DEFOG UNIT | GROUND |
| JA / 14 YEL | OVERCURRENT PROTECTION (15A FUSE/BREAKER TYPICAL) | WATER PUMP, MONITOR PANEL, ETC ("CLEAN CIRCUIT", REF JP) |
| JB / 14 YEL | OVERCURRENT PROTECTION (15A FUSE/BREAKER TYPICAL) | FURNACE, ROOF VENT, ETC (REF JM) |
| JC / 14 YEL | OVERCURRENT PROTECTION (15A FUSE/BREAKER TYPICAL) | COACH LIGHTING, ETC CIRCUIT #1 (REF NC) |
| JD / 14 YEL | OVERCURRENT PROTECTION (15A FUSE/BREAKER TYPICAL) | COACH LIGHTING, ETC CIRCUIT #2 (REF ND) |
| JE / 14 YEL | OVERCURRENT PROTECTION (15A FUSE/BREAKER TYPICAL) | COACH LIGHTING, ETC CIRCUIT #3 (REF NE) |
| JF / 14 YEL | OVERCURRENT PROTECTION (15A FUSE/BREAKER TYPICAL) | COACH LIGHTING, ETC CIRCUIT #4 (REF NF) |
| JG / 14 YEL | OVERCURRENT PROTECTION (15A FUSE/BREAKER TYPICAL) | COACH LIGHTING, ETC(ALT CLEAN) CIRCUIT #5 (REF JN) |
| JH / 14 YEL | MAIN FURNACE (12V POWER) | MAIN FURNACE THERMOSTAT |
| JJ / 14 YEL | MAIN FURNACE (HEAT) | MAIN FURNACE THERMOSTAT |
| JK / 14 YEL | AUXILIARY FURNACE | AUXILIARY FURNACE THERMOSTAT |
| JL / 14 YEL | AUXILIARY FURNACE | AUXILIARY FURNACE THERMOSTAT |
| JM / 14 WHT | MAIN FURNACE | GROUND |
| JN / 14 WHT | COACH LIGHTING CIRCUIT #5 (REF JG) | GROUND(ALTERNATE CLEAN CIRCUIT FOR LINEAR CONVERTER) |
| JP / 14 WHT | "CLEAN CIRCUIT" DEVICES (REF JA) | GROUND |
| JR / 16 YEL | MONITOR PANEL | LP TANK #2 LEVEL SENSOR |
| JS / 12 YEL | MONITOR PANEL WATER PUMP SWITCH | WATER PUMP |

05/28/11
REPORT 3593-1

WIRE IDENTIFICATION CHART

| CODE / COLOR | FROM: | TO: |
|--------------|---|--|
| JT / 16 YEL | MONITOR PANEL | LP TANK #1 LEVEL SENSOR |
| JU / 14 YEL | MONITOR PANEL WATER HEATER SWITCH | WATER HEATER (PILOT OUT INDICATOR) |
| JW / 14 YEL | MONITOR PANEL WATER HEATER SWITCH | WATER HEATER (LP GAS TRIGGER) |
| JX / 14 WHT | WATER HEATER | GROUND |
| JY / 12 WHT | WATER PUMP OR WATER PUMP CONTROL | GROUND |
| KA / 12 YEL | OVERCURRENT PROTECTION (25A BREAKER TYPICAL) | ELECTRIC STEP BATTERY POWER |
| KB / 10 YEL | OVERCURRENT PROTECTION (25A BREAKER TYPICAL) | ELECTRIC STEP KILL SWITCH (OLD STEP WIRING STYLE) |
| KC / 10 YEL | ELECTRIC STEP KILL SWITCH (OLD STEP WIRING STYLE) | ELECTRIC STEP |
| KD / 18 WHT | ELECTRIC STEP DOOR JAMB SWITCH | ELECTRIC STEP |
| KE / 14 YEL | RUN ONLY POWER SOURCE | GENERAL PURPOSE(RELAY TRIGGER, REAR AUTO HTR,DRL,MONITOR,ETC |
| KF / 16 WHT | COACH BATTERY DISCONNECT RELAY SWITCH | GROUND |
| KG / 14 YEL | POWER LIFT VENT (BLU) | POWER LIFT SWITCH(UP) |
| KH / 14 YEL | POWER LIFT VENT (RED) | POWER LIFT SWITCH(DOWN) |
| KJ / 14 YEL | POWER LIFT VENT (BLK) | FAN SWITCH |
| KK / 18 YEL | REAR STEREO | RIGHT SPEAKER (POSITIVE) |
| KL / 18 WHT | REAR STEREO | RIGHT SPEAKER (NEGATIVE) |
| KM / 14 YEL | POWER LIFT VENT LAMP | LAMP SWITCH |
| KN / 18 YEL | REAR STEREO | LEFT SPEAKER (POSITIVE) |
| KP / 18 WHT | REAR STEREO | LEFT SPEAKER (NEGATIVE) |
| KR / 14 WHT | REAR STEREO ANTENNA | GROUND |
| KS / 14 YEL | REAR AUTO HEATER SWITCH (HIGH SPEED) | REAR AUTO HEATER |
| KT / 14 YEL | REAR AUTO HEATER SWITCH (MEDIUM SPEED) | REAR AUTO HEATER |
| KU / 14 YEL | REAR AUTO HEATER SWITCH (LOW SPEED) | REAR AUTO HEATER |
| KW / 18 YEL | DASH RADIO | RIGHT FRONT SPEAKER (POSITIVE) |
| KX / 18 YEL | DASH RADIO | RIGHT REAR SPEAKER (POSITIVE) |
| KY / 18 YEL | DASH RADIO | LEFT FRONT SPEAKER (POSITIVE) |
| LA / 18 YEL | DASH RADIO | LEFT REAR SPEAKER (POSITIVE) |
| LB / 18 WHT | DASH RADIO | RIGHT REAR SPEAKER (NEGATIVE) |
| LC / 18 WHT | DASH RADIO | LEFT REAR SPEAKER (NEGATIVE) |
| LD / 14 YEL | IGNITION SWITCH ACCESSORY POWER SOURCE | GENERAL PURPOSE(AUX FANS,RELAY TRIGGER,ETC.) |
| LE / 14 YEL | AUXILIARY DEFROST FANS SWITCH (HIGH SPEED) | AUXILIARY DEFROST FANS (BLK) |
| LF / 14 YEL | AUXILIARY DEFROST FANS SWITCH (LOW SPEED) | AUXILIARY DEFROST FANS (RED) |
| LG / 16 YEL | COACH BATTERY DISCONNECT RELAY (TERMINAL I) | COACH BATTERY DISCONNECT RELAY SWITCH |
| LH / 16 YEL | COACH BATTERY DISCONNECT RELAY (TERMINAL S) | COACH BATTERY DISCONNECT RELAY SWITCH |

WIRE IDENTIFICATION CHART

| CODE / COLOR | FROM: | TO: |
|----------------|---|---|
| LJ / 16 YEL | COACH BATTERY DISCONNECT RELAY BATTERY SIDE FUSE FEED | COACH BATTERY DISCONNECT RELAY SWITCH |
| LK / 16 YEL | COACH BATTERY DISCONNECT RELAY LOAD SIDE FUSE FEED | COACH BATTERY DISCONNECT RELAY SWITCH/INDICATOR LAMP |
| LL / 16 WHT | GENERATOR SWITCH (START) | GENERATOR (RED) |
| LM / 16 WHT | GENERATOR SWITCH (STOP) | GENERATOR (ORN) |
| LN / 16 WHT | GENERATOR SWITCH/INDICATOR (GROUND) | GENERATOR (GRN) |
| LP / 16 YEL | GENERATOR SWITCH/INDICATOR (RUN) | GENERATOR (BLU) |
| LR / 14 YEL | BATTERY MODE SWITCH (AUX START SWITCH) | BATTERY MODE SOLENOID (AUX START SOLENOID) |
| LS / 12 YEL | OVERCURRENT PROTECTION 20A BREAKER TYPICAL,COACH FEED | GENERAL PURPOSE(BATTERY MODE, RADIO POWER,BATTERY CONDITION |
| LT / 16 YEL | BATTERY CONDITION SWITCH | VOLTMETER (POWER FEED) |
| LU / 14 YEL | CHASSIS BRAKE LAMP CIRCUIT | VEHICLE BRAKES, TAG AXLE CONTROL MODULE,ETC. |
| LW / 14 YEL | WIPER CONTROL MODULE (PARK) | WINDSHIELD WIPER MOTOR (FRONT) |
| LX / 14 YEL | WIPER CONTROL MODULE (LOW SPEED) | WINDSHIELD WIPER MOTOR (FRONT) |
| LY / 14 YEL | WIPER CONTROL MODULE (HIGH SPEED) | WINDSHIELD WIPER MOTOR (FRONT) |
| MA / 14 YEL | WIPER CONTROL MODULE (WASHER BOTTLE PUMP) | WINDSHIELD WASHER BOTTLE PUMP (FRONT) |
| MB / 14 YEL | CHASSIS WINDSHIELD WIPER FEED CIRCUIT | OVERCURRENT PROTECTION (6A BREAKER TYPICAL) |
| MC / 16 WHT | INSTRUMENT PANEL LAMPS | GROUND |
| MD / 14 YEL | OVERCURRENT PROTECTION (15A BREAKER TYPICAL) | REMOTE MIRROR RELAY/POWER WINDOW FEED |
| ME / 14 YEL | OVERCURRENT PROTECTION (15A BREAKER TYPICAL) | AIR HORN RELAY FEED/ MARKER LAMPS RELAY FEED |
| MF / 14 YEL | OVERCURRENT PROTECTION (15A BREAKER TYPICAL) | FOG LAMP RELAY FEED/ SPOT LAMP FEED |
| MG / 14 WHT | GENERAL PURPOSE(RELAYS,DASH DEVICES,ETC.) | GROUND |
| MH / 16 WHT | CHASSIS CHOKE LAMP INDICATOR CIRCUIT | CHOKE LAMP |
| MJ / 14 YEL | CHASSIS WINDSHIELD WIPER FEED CIRCUIT | WIPER CONTROL MODULE (POWER FEED) |
| MK / 14 YEL | CHASSIS BATTERY POWER FEED CIRCUIT | GENERAL PURPOSE(CIGAR LIGHTER, DOME/COURTESY LAMPS,ETC) |
| ML / 16 YEL | CHASSIS INSTRUMENT PANEL LAMPS FEED CIRCUIT | INSTRUMENT PANEL LAMPS |
| MM / 14 YEL | CHASSIS CLEARANCE LAMP CRT #1 (BRN TYPICAL) | CLEARANCE/MARKER LAMPS |
| MN / 14 WHT | DOME LAMP SWITCHED GROUND | DOME LAMP SWITCH(DOOR JAMB, INSTRUMENT PANEL SWITCH,ETC) |
| MP / 18/16 WHT | ELEC STEP DOOR JAMB SWITCH, LP TANK SENDER, ETC | GROUND |
| MR / 14 YEL | REAR WINDOW WIPER SWITCH (LOW SPEED) | REAR WINDOW WIPER MOTOR (LOW SPEED) |
| MS / 14 WHT | CLEARANCE/MARKER LAMPS | GROUND |
| MT / 8 WHT | ELECTRIC STEP | GROUND |
| MU / 14 WHT | GENERAL PURPOSE(CIGAR LIGHTER, DOME LAMPS,12 V OUTLETS,ETC) | GROUND |
| MW / 16 YEL | VEHICLE CHECK ENGINE LAMP CIRCUIT | CHECK ENGINE LAMP |
| MX / 16 YEL | WINDSHIELD WIPER SWITCH | WIPER RELAY |
| MY / 14 YEL | VEHICLE HEADLAMP FEED CIRCUIT | DIMMER MODULE |

05/28/11
REPORT 3593-1

WIRE IDENTIFICATION CHART

| CODE / COLOR | FROM: | TO: |
|--------------|---|-------------------------------------|
| NA / 14 YEL | VEHICLE HEADLAMP LOW BEAM CIRCUIT | DIMMER MODULE |
| NB / 14 YEL | VEHICLE HEADLAMP HIGH BEAM CIRCUIT | DIMMER MODULE |
| NC / 14 WHT | COACH LIGHTING CIRCUIT #1 (REF JC) | GROUND |
| ND / 14 WHT | COACH LIGHTING CIRCUIT #2 (REF JD) | GROUND |
| NE / 14 WHT | COACH LIGHTING CIRCUIT #3 (REF JE) | GROUND |
| NF / 14 WHT | COACH LIGHTING CIRCUIT #4 (REF JF) | GROUND |
| NG / 14 YEL | WOG LAMPS SWITCH (OR LEFT FOG LAMP FEED) | FOG LAMPS RELAY (OR LEFT FOG LAMP) |
| NH / 14 YEL | FOG LAMPS RELAY (OR RIGHT FOG LAMP FEED) | FOG LAMPS (OR RIGHT FOG LAMP) |
| NJ / 16 YEL | CHASSIS HORN FEED CIRCUIT | AIR HORN SWITCH |
| NK / 14 YEL | AIR HORN SWITCH | AIR HORN AIR TANK AIR RELEASE VALVE |
| NL / 14 YEL | AR HORN RELAY | AIR HORN AIR COMPRESSOR |
| NM / 14 YEL | OVERCURRENT PROTECTION (15A FUSE TYPICAL) | COACH LIGHTING CIRCUIT #6 (REF PM) |
| NN / 16 YEL | LEFT POWER MIRROR MOTOR (HORIZONTAL CONTROL, YEL) | POWER MIRROR CONTROL SWITCH |
| NR / 16 YEL | LEFT POWER MIRROR (VERTICAL CONTROL, WHT) | POWER MIRROR CONTROL SWITCH |
| NS / 14 YEL | POWER MIRROR HEATER SWITCH | POWER MIRRORS (RED) |
| NT / 14 YEL | POWER MIRROR RELAY | POWER MIRROR CONTROL SWITCH |
| NU / 14 YEL | aisle LAMPS SWITCH #1 | aisle LAMPS SWITCH #2 |
| NW / 14 YEL | FRONT COMPARTMENT LAMPS SWITCH | COMPARTMENT LAMPS |
| NX / 14 YEL | INTERSTATE COMMERCE COMMITTEE COURTESY BLINK SWITCH | CLEARANCE LAMPS |
| NY / 14 YEL | aisle LAMPS SWITCH #1 | aisle LAMPS SWITCH #2 |
| PA / 14 WHT | REAR AUTO HEATER | GROUND |
| PB / 14 WHT | REAR WINDOW WIPER MOTOR | GROUND |
| PC / 14 YEL | BEDROOM CEILING LAMP SWITCH | BEDROOM CEILING LAMP |
| PD / 14 YEL | MAKE UP LAMP #1 SWITCH | MAKE UP LAMP #1 |
| PE / 14 YEL | BATH CEILING LAMP SWITCH | BATH CEILING LAMP |
| PF / 14 YEL | SHOWER LAMP SWITCH WIRE D WAS FIRST USED ON C'S | SHOWER LAMP |
| PG / 14 YEL | WARDROBE LAMP SWITCH | WARDROBE LAMP |
| PH / 14 YEL | aisle LAMPS SWITCH | aisle LAMPS |
| PJ / 14 YEL | PORCH LAMP SWITCH | PORCH LAMP |
| PK / 14 YEL | STRIP LAMP SWITCH | STRIP LAMP |
| PL / 14 YEL | FRONT CEILING LAMP SWITCH | FRONT CEILING LAMP |
| PM / 14 WHT | COACH LIGHTING CIRCUIT #6 (REF NM) | GROUND |
| PN / 16 WHT | RIGHT POWER MIRROR (COMMON, BLK) | POWER MIRROR CONTROL SWITCH |
| PP / 16 YEL | RIGHT POWER MIRROR (HORIZONTAL CONTROL, YEL) | POWER MIRROR CONTROL SWITCH |

WIRE IDENTIFICATION CHART

| CODE / COLOR | FROM: | TO: |
|-----------------|---|--|
| PR / 16 YEL | RIGHT POWER MIRROR (VERTICAL CONTROL,WHT) | POWER MIRROR CONTROL SWITCH |
| PS / 14 YEL | MAP LAMP SWITCH | MAP LAMP |
| PT / 14 YEL | BEVERAGE TRAY LAMP SWITCH | BEVERAGE TRAY LAMP |
| PU / 14 YEL | DUMP LAMP SWITCH | DUMP LAMP |
| PW / 14 YEL | OVERCURRENT PROTECTION (15A BREAKER TYPICAL) | POWER DOOR LOCK/UNLOCK RELAY (PIN 30) |
| PX / 16 YEL | POWER DOOR LOCK SWITCH (LOCK) (PIN 1) | POWER DOOR LOCK RELAY (PIN 86) |
| PY / 16 YEL | POWER DOOR LOCK SWITCH (UNLOCK) (PIN 5) | POWER DOOR UNLOCK RELAY (PIN 86) |
| RA / 14 YEL | VEHICLE LEFT FRONT TURN SIGNAL CIRCUIT | LEFT FRONT TURN SIGNAL/MARKER LAMP |
| RB / 14 YEL | VEHICLE RIGHT FRONT TURN SIGNAL CIRCUIT | RIGHT FRONT TURN SIGNAL/MARKER LAMP |
| RC / 14 WHT | FRONT AUTOMOTIVE LAMPS(TURN, MARKER,ETC) | GROUND |
| RD / 14 YEL | OVERCURRENT PROTECTION (15 A FUSE TYPICAL) | HAZARD FLASHER, HORN RELAY |
| RE / 12 YEL | RADIATOR FAN RELAY#1 (COMMON) | RADIATOR FAN #1 |
| RF / 12 YEL | RADIATOR FAN RELAY #2 (COMMON) | RADIATOR FAN #2 |
| RG / 14 WHT | RADIATOR FAN THERMOSTAT SWITCH | RADIATOR FAN RELAYS (COILS,TRIGGER) |
| RH / 12YEL(BLK) | OVERCURRENT PROTECTION (25A BREAKER TYPICAL) | RADIATOR FAN RELAY #1 (NORMALLY OPEN) |
| RJ / 12YEL(BLK) | OVERCURRENT PROTECTION (25A BREAKER TYPICAL) | RADIATOR FAN RELAY #2 (NORMALLY OPEN) |
| RK / 12 WHT | RADIATOR FAN #1 | GROUND |
| RL / 12 WHT | RADIATOR FAN #2 | GROUND |
| RM / 14 WHT | VEHICLE IGNITION SWITCH GROUND DURING START CIRCUIT | BULB CHECK(LOW TAG AIR,PARK BRAKE,ETC) |
| RN / 14 YEL | AUTOMOTIVE AIR CONDITIONER THERMOSTAT CUTOFF SWITCH | AUTOMOTIVE AIR CONDITIONER COMPRESSOR CLUTCH |
| RP / 14 YEL | AUTOMOTIVE AIR CONDITIONER COOLANT FAN CONTROL | COOLANT FAN RELAY |
| RR / 14 YEL | BRAKE LAMP SWITCH | TURN SIGNAL SWITCH |
| RS / 14 YEL | HEADLAMP SWITCH INSTRUMENT PANEL LAMP FEED SWITCH | OVERCURRENT PROTECTION (5A FUSE TYPICAL) |
| RT / 14 YEL | HORN RELAY (COMMON) | HORN |
| RU / 14 YEL | HORN RELAY (COIL) | HORN SWITCH |
| RW / 14 YEL | HAZARD FLASHER | TURN SIGNAL SWITCH |
| RX / 14 YEL | EUL WARNING LAMP | EUL MODULE |
| RY / 14 WHT | INSTRUMENT CLUSTER/ EUL MODULE | GROUND |
| SA / 14 YEL | ENGINE WATER TEMPERATURE SENDER | ENGINE WATER TEMPERATURE GAUGE |
| SB / 14 YEL | ENGINE OIL PRESSURE SENDER | ENGINE OIL PRESSURE GAUGE |
| SC / 14 YEL | VEHICLE RIGHT REAR TURN SIGNAL/BRAKE LAMP CIRCUIT | RIGHT REAR TURN SIGNAL/ BRAKE LAMPS |
| SD / 14 YEL | VEHICLE LEFT REAR TURN SIGNAL/BRAKE LAMP CIRCUIT | LEFT REAR TURN SIGNAL/ BRAKE LAMPS |
| SE / 16YEL(WHT) | SPEED SENSOR (TWISTED PAIR) | SPEEDOMETER AND SPEED CONTROL MODULE |
| SF / 16WHT(BLK) | SPEED SENSOR (TWISTED PAIR) | SPEEDOMETER AND SPEED CONTROL MODULE |

WIRE IDENTIFICATION CHART

| CODE / COLOR | FROM: | TO: |
|-----------------|---|---|
| SG / 14 YEL | IGNITION SWITCH START FEED | GENERAL(NEUTRAL SAFETY SWITCH, FUEL PUMP RELAY COIL,ETC) |
| SH / 14 YEL | IGNITION SWITCH RUN/START FEED | GENERAL(IGNITION COIL RELAY NORMALLY OPEN CONTACT,ETC) |
| SJ / 12/10 YEL | OVERCURRENT PROTECTION | CHASSIS BATTERY FEED |
| SK / 12YEL(WHT) | OVERCURRENT PROTECTION (16GA FUSELINK TYPICAL) | CHASSIS BATTERY HEADLAMP SWITCH FEED #1 |
| SL / 12YEL(BLU) | OVERCURRENT PROTECTION (16GA FUSELINK TYPICAL) | CHASSIS BATTERY IGNITION SWITCH FEED #1 |
| SM / 12YEL(BLK) | OVERCURRENT PROTECTION (16GA FUSELINK TYPICAL) | RADIATOR FAN #1 CIRCUIT BREAKER FEED |
| SN / 12YEL(BLK) | OVERCURRENT PROTECTION (16GA FUSELINK TYPICAL) | RADIATOR FAN #2 CIRCUIT BREAKER FEED |
| SP / 14 YEL | HEADLAMP SWITCH MARKER CIRCUIT FEED | OVERCURRENT PROTECTION (15A FUSE TYPICAL) |
| SR / 12YEL(BRN) | IGNITION SWITCH RUN ONLY FEED | OVERCURRENT PROTECTION (15A FUSE TYPICAL) |
| SS / 12YEL(WHT) | IGNITION SWITCH ACCESSORY FEED | OVERCURRENT PROTECTION (15A FUSE TYPICAL) |
| ST / 14 YEL | OVERCURRENT PROTECTION (15A FUSE TYPICAL) | TURNS/BACK UP CIRCUIT FEED |
| SU / | STARTER SOLENOID BATTERY TERMINAL | ALTERNATOR BATTERY TERMINAL |
| SW / 14 YEL | TURN SIGNAL FLASHER | TURN SIGNAL SWITCH |
| SX / 14 YEL | REAR WINDOW WASHER SWITCH | REAR WINDOW WASHER BOTTLE PUMP |
| SY / 14 YEL | IGNITION COIL | TACHOMETER |
| TA / 14 YEL | OVERCURRENT PROTECTION (15A FUSE TYPICAL) | IGNITION RUN ONLY GENERAL FEED (RADIATOR FAN RELAY COIL,ETC) |
| TB / 12 YEL | OVERCURRENT PROTECTION (25A FUSE TYPICAL) | IGNITION RUN ONLY GENERAL FEED (AUTO AC BLOWER(NOT HIGH),ETC) |
| TC / 14 YEL | OVERCURRENT PROTECTION (15A FUSE TYPICAL) | IGNITION RUN ONLY GENERAL FEED (DOOR LOCKS,REAR WIPER,ETC.) |
| TD / 14/12YEL | OVERCURRENT PROTECTION | CHASSIS BATTERY GENERAL FEED |
| TE / 16 WHT | GENERATOR | GENERATOR LOW OIL INDICATOR LAMP |
| TF / 16 YEL | GENERATOR | GENERATOR LOW OIL INDICATOR LAMP |
| TG / 16 YEL | TELEVISION | SPEAKER RIGHT (POSITIVE) |
| TH / 16 WHT | TELEVISION | SPEAKER RIGHT (NEGATIVE) |
| TJ / 16 YEL | TELEVISION | SPEAKER LEFT (POSITIVE) |
| TK / 16 WHT | TELEVISION | SPEAKER LEFT (NEGATIVE) |
| TL / 16 YEL | FRONT RIGHT TV SPEAKER NEGATIVE,SERIES CONNECTION | FRONT LEFT TV SPEAKER POSITIVE,SERIES CONNECTION |
| TM / 16 WHT | STEP COVER SWITCH | STEP COVER SOLENOID MOVES STEP OUT |
| TN / 14 YEL | STARTER SOLENOID BATTERY TERMINAL | ALTERNATOR REGULATOR |
| TP / 14 WHT | 917R AUTOMOTIVE LAMPS(TURN, MARKER,ETC) | GROUND |
| TR / 14 YEL | VEHICLE BACK UP CIRCUIT FEED | BACK UP LAMPS |
| TS / 14 YEL | STARTER SOLENOID (I TERMINAL) | ENGINE WIRING (IGNITION MODULE) |
| TT / 14 YEL | NEUTRAL SAFETY SWITCH | STARTER SOLENOID (S TERMINAL) |
| TU / 14 WHT | IGNITION COIL RELAY (COIL) | GROUND |
| TW / 14 YEL | IGNITION SWITCH START/RUN FEED | IGNITION COIL |

WIRE IDENTIFICATION CHART

| CODE / COLOR | FROM: | TO: |
|-----------------|--|---|
| TX / 14 YEL | IGNITION COIL RELAY (COMMON) | IGNITION COIL |
| TY / 14 YEL | ALTERNATOR (T TERMINAL) | CHOKE HEATER |
| UA / 14 YEL | FUEL PUMP FUSE | OIL PRESSURE CUTOUT SWITCH/ FUEL PUMP RELAY(NO),ETC |
| UB / 14 YEL | INERTIA SWITCH (FUEL PUMP SHUTOFF) | FUEL PUMP RELAY (NORMALLY CLOSED) |
| UC / 14 YEL | FUEL PUMP RELAY (COMMON) | FUEL PUMP |
| UD / 16 WHT | FUEL GAUGE | FUEL SENDER |
| UE / 14 YEL | INERTIA SWITCH (FUEL PUMP SHUTOFF) | OIL PRESSURE CUTOFF SWITCH |
| UF / 14 WHT | FUEL PUMP | GROUND |
| UG / 14 WHT | FUEL PUMP RELAY (COIL) | GROUND |
| UH / 16 YEL | LP DETECTOR (SHUTOFF SYSTEM,YEL) | LP SAFETY VALVE |
| UJ / 16 YEL | LP DETECTOR (SHUTOFF SYSTEM,YEL) | LP SAFETY SWITCH |
| UK / 16 WHT | LP DETECTOR (BLK)(REF WB) | GROUND |
| UL / 16 WHT | EUL LAMP | EUL MODULE |
| UM / 16 WHT | DOOR JAMB DOME LAMP SWITCH | GROUND |
| UN / 16 WHT | SEAT BELT LAMP | EUL MODULE |
| UP / 16 YEL | SEAT BELT LAMP | SEAT BELT BUZZER |
| UR / 16 WHT | PARK BRAKE SWITCH | PARK BRAKE LAMP |
| US / 16 YEL | OVERCURRENT PROTECTION (6A BREAKER TYPICAL) | COACH BATTERY FEED TO BATTERY CONDITION SWITCH |
| UT / 14 YEL | DOOR JAMB DOME LAMP SWITCH (SWITCH POSITIVE) | DOME LAMP |
| UU / 16 YEL | WATER HEATER | VACUUM VALVE SOLENOID |
| UW / 16 WHT | VACUUM VALVE SOLENOID | GROUND |
| UX / 16 YEL | LP DETECTOR #2 (SHUTOFF SYSTEM,YEL) | LP SAFETY VALVE |
| UY / 16 YEL | LP DETECTOR #2 (SHUTOFF SYSTEM,YEL) | LP SAFETY VALVE |
| WA / 14 YEL | EXTERIOR SERVICE LAMP SWITCH | EXTERIOR SERVICE LAMP |
| WB / 16 YEL | OVERCURRENT PROTECTION (6A BREAKER TYPICAL) | LP DETECTOR (REF UK) |
| WC / 14 YEL | OVERCURRENT PROTECTION (15A BREAKER TYPICAL) | COMPARTMENT LAMPS (REF WE) |
| WD / 14 WHT | AISLE LAMPS | GROUND |
| WE / 14 WHT | COMPARTMENT LAMPS (REF WC) | GROUND |
| WF / 12YEL(WHT) | OVERCURRENT PROTECTION (30A BREAKER TYPICAL) | PARK BRAKE COMPRESSOR SOENOID |
| WG / 12YEL(BLK) | OVERCURRENT PROTECTION (30A BREAKER TYPICAL) | IGNITION RELAY |
| WH / 14 YEL | OVERCURRENT PROTECTION (15A BREAKER TYPICAL) | IGNITION SWITCH RUN ONLY FEED |
| WJ / 12 YEL | OVERCURRENT PROTECTION (20A BREAKER TYPICAL) | IGNITION SWITCH ACCESSORY FEED RELAY |
| WK / 14 YEL | OVERCURRENT PROTECTION (15A BREAKER TYPICAL) | IGNITION SWITCH ACCESSORY FEED |
| WL / 14 YEL | POWER DOOR LOCK RELAY (PIN 30) | POWER DOOR LOCK MOTOR(S) (LOCK) |

05/28/11
REPORT 3593-1

WIRE IDENTIFICATION CHART

| CODE / COLOR | FROM: | TO: |
|-----------------|---|---|
| WM / 14 WHT | POWER DOOR UNLOCK RELAY (PIN 30) | POWER DOOR LOCK MOTOR(S) (UNLOCK) |
| WN / 16 YEL | RADIO POWER SWITCH (ACCESSORY POWER) | DASH RADIO (ACCESSORY POWER) |
| WP / 10 YEL | OVERCURRENT PROTECTION (25A BREAKER TYPICAL) | FRONT PANEL LOADS(INVERTER, RADIO)(96 M-SERIES) |
| WR / 14 YEL | OVERCURRENT PROTENTION (15A BREAKER TYPICAL) | POWER SEAT LIFT SWITCH |
| WS / 14 WHT | POWER SEAT LIFT SWITCH | GROUND |
| WT / 14 YEL | POWER SEAT LIFT SWITCH (UP) | MOTOR (POSITIVE UP) |
| WU / 14 WHT | POWER SEAT LIFT SWITCH (DOWN) | MOTOR (POSITIVE DOWN) |
| WW / 14 WHT | SPOT LAMP SWITCH | GROUND |
| WX / 14 YEL | HALLWAY CEILING LAMP SWITCH | HALLWAY CEILING LAMP |
| WY / 10 WHT | AUTOMOTIVE AIR CONDITIONER MOTOR | GROUND |
| XA / 12/10 YEL | VEHICLE AUTOMOTIVE AIR FEED CIRCUIT | AUTOMOTIVE AIR CONDITIONER BLOWER (USE 10 IF OVER 6') |
| XB / 14 YEL | DRIVER'S DOOR POWER WINDOW SWITCH(PIN 5) | DRIVER'S DOOR POWER WINDOW MOTOR(POSITIVE UP) |
| XC / 14 WHT | DRIVER'S DOOR POWER WINDOW SWITCH(PIN 1) | DRIVER'S DOOR POWER WINDOW MOTOR(POSITIVE DOWN) |
| XD / 16 WHT | MONITOR PANEL | HOLDING TANK LEVEL SENSOR (FULL) |
| XE / 16 WHT | MONITOR PANEL | HOLDING TANK LEVEL SENSOR (3/4) |
| XF / 16 WHT | MONITOR PANEL | HOLDING TANK LEVEL SENSOR (1/2) |
| XG / 16 WHT | MONITOR PANEL | HOLDING TANK LEVEL SENSOR (1/4) |
| XH / 16 YEL | MONITOR PANEL | WATER TANK LEVEL SENSOR |
| XJ / 16 YEL | MONITOR PANEL | BLACK HOLDING LEVEL SENSOR (MAIN TANK) |
| XK / 16 YEL | MONITOR PANEL | GRAY AUXILIARY HOLDING TANK #1 LEVEL SENSOR (AUX TANK #1) |
| XL / 16 YEL | MONITOR PANEL | GRAY AUXILIARY HOLDING TANK #2 LEVEL SENSOR (AUX TANK #2) |
| XM / 14 YEL | OVERCURRENT PROTECTION (18GA FUSELINK TYPICAL) | IGNITION START RELAY |
| XN / 16 YEL | FRONT ROOF AIR CONDITIONER (EXHAUST) | THERMOSTAT (EX TERMINAL) |
| XP / 16 YEL | FRONT ROOF AIR CONDITIONER (COOL) | THERMOSTAT (Y TERMINAL)(Y EXPORT AIR) |
| XR / 16 YEL | FRONT ROOF AIR CONDITIONER (HIGH SPEED BLOWER) | THERMOSTAT (GH TERMINAL)(H EXPORT AIR) |
| XS / 16 YEL | FRONT ROOF AIR CONDITIONER (LOW SPEED BLOWER) | THERMOSTAT (GL TERMINAL)(G EXPORT AIR) |
| XT / 14 YEL | IGNITION START RELAY #1 (NORMALLY CLOSED CONTACT) | IGNITION START RELAY #2 (COMMON CONTACT) |
| XU / 14 YEL | DINETTE OVHD LAMP SWITCH | DINETTE OVHD LAMP |
| XW / 14 WHT | IGNITION SWITCH ACCESSORY FEED RELAY CIRCUIT | GROUND |
| XX / 14 YEL | GALLEY LAMP SWITCH | GALLEY LAMP |
| XY / 14 YEL | MAKE UP LAMP #2 SWITCH | MAKE UP LAMP #2 |
| YA / 14 YEL | TAG AXLE PRESSURE CONTROL SWITCH | COMPRESSOR SOLENOID/ SOLENOID AIR VALVE |
| YB / 14 WHT | LOW AIR PRESSURE SWITCH | GROUND |
| YC / 10YEL(BLU) | OVERCURRENT PROTECTION (30A BREAKER TYPICAL) | TAG AXLE COMPRESSOR SOLENOID |

WIRE IDENTIFICATION CHART

| CODE / COLOR | FROM: | TO: |
|-----------------|--|--|
| YD / 14 WHT | TAG AXLE MOUNTING PLATE SCREW | GROUND |
| YE / 10 WHT | TAG AXLE COMPRESSOR | GROUND |
| YF / 12 WHT | TAG AXLE BRAKE CONTROL MODULE/BRAKE MAGNET | GROUND |
| YG / 12YEL(BLK) | OVERCURRENT PROTECTION (20A BREAKER TYPICAL) | TAG AXLE BRAKE CONTROL MODULE |
| YH / 12YEL(BLU) | TAG AXLE BRAKE CONTROL MODULE | TAG AXLE BRAKE MAGNET |
| YJ / 10YEL(WHT) | TAG AXLE COMPRESSOR SOLENOID | TAG AXLE COMPRESSOR |
| YK / 14 YEL | BEDROOM CEILING LAMP SWITCH#1 (2 SWITCH SYSTEM) | BEDROOM CEILING LAMP SWITCH #2 (2 SWITCH SYSTEM) |
| YL / 14 YEL | BEDROOM CEILING LAMP SWITCH #1 (2 SWITCH SYSTEM) | BEDROOM CEILING LAMP SWITCH #2 (2 SWITCH SYSTEM) |
| YM / 14 YEL | HALLWAY CEILING LAMP SWITCH #1 (2 SWITCH SYSTEM) | HALLWAY CEILING LAMP SWITCH #2 (2 SWITCH SYSTEM) |
| YN / 14 YEL | HALLWAY CEILING LAMP SWITCH #1 (2 SWITCH SYSTEM) | HALLWAY CEILING LAMP SWITCH #2 (2 SWITCH SYSTEM) |
| YP / 14 YEL | VALANCE LAMP SWITCH #1 (3 WAY SWITCH) | VALANCE LAMP SWITCH #2 (3 WAY SWITCH) |
| YR / 14 YEL | VALANCE LAMP SWITCH #1 (3 WAY SWITCH) | VALANCE LAMP SWITCH #2 (3 WAY SWITCH) |
| YS / 14 YEL | VALANCE LAMP SWITCH | VALANCE LAMP |
| YT / 14 YEL | FRONT VALANCE LAMP SWITCH | FRONT VALANCE LAMP |
| YU / 14 YEL | REAR VALANCE LAMP SWITCH | REAR VALANCE LAMP |
| YW / 14 WHT | DOOR BELL SWITCH | DOOR BELL |
| YX / 14 YEL | IGNITION SWITCH RUN/START FEED | ALTERNATOR WARNING LAMP |
| YY / 14 YEL | ALTERNATOR VOLTAGE REGULATOR | ALTERNATOR WARNING LAMP |
| AAA / 16 WHT | STEP COVER SWITCH (REF GX) | STEP COVER SOLENOID MOVES STEP IN |
| AAB / 14 YEL | DINETTE READING LAMPS | DINETTE READING LAMP SWITCH |
| AAC / 14 YEL | LOUNGE READING LAMPS | LOUNGE READING LAMP SWITCH |
| AAD / 14 YEL | FORD CHASSIS TRAILER MARKER LAMP CIRCUIT (BR/WHT) | TRAILER CONNECTOR SOCKET MARKER LAMPS |
| AAE / 14 YEL | FORD CHASSIS TRAILER BACKUP LAMP CIRCUIT (BLK/LT GRN) | TRAILER CONNECTOR SOCKET BACKUP LAMPS |
| AAF / 14 YEL | FORD CHASSIS TRAILER LEFT TURN/BRAKE LAMP CIRCUIT (YEL) | TRAILER CONNECTOR SOCKET LEFT TURN/BRAKE LAMP |
| AAG / 14 YEL | FORD CHASSIS TRAILER RIGHT TURN/BRAKE LAMP CIRCUIT (DKG) | TRAILER CONNECTOR SOCKET RIGHT TURN/BRAKE LAMP |
| AAH / 14 YEL | BATH-VENT,POWER | BATH-VENT, THERMOSTAT |
| AAJ / 14 YEL | BATH-VENT,POWER | BATH-VENT, THERMOSTAT |
| AAK / 16 WHT | SWITCH-WATER PUMP (MULTIPLEX SYSTEM) | LATCHING RELAY (WITH 4 OR MORE SWITCHES) |
| AAL / 16 WHT | SWITCH-WATER PUMP (MULTIPLEX SYSTEM) | GROUND |
| AAM / 14 YEL | CHASSIS SUPPLIED WIRE ASM (DARK BLUE)(GM) | RIGHT TAIL LAMP PARK (WIE) |
| AAN / 14 YEL | CHASSIS SUPPLIED WIRE ASM (PURPLE) (GM) | LEFT TAIL LAMP PARK (WIE) |
| AAP / 10 YEL | 55 AMP BREAKER JUMPER WIRE | 30 AMP BREAKER |
| AAR / 14 YEL | TV/RADIO SPEAKER FEED SELECTOR SWITCH | TV SPEAKER AMPLIFIER |
| AAS / 16 YEL | SPEAKER (NEGATIVE) SPEAKERS IN SERIES | SPEAKER (POSITIVE) |

WIRE IDENTIFICATION CHART

| CODE / COLOR | FROM: | TO: |
|--------------|---|---|
| AAT / 16 YEL | AMPLIFIER POSITIVE OUT (AAU NEGATIVE) | FRONT WOOFER (WITH DELUXE SOUND SYSTEM) |
| AAU / 16 WHT | AMPLIFIER NEGATIVE OUT (AAT POSITIVE) | FRONT WOOFER (WITH DELUXE SOUND SYSTEM) |
| AAW / 16 YEL | AMPLIFIER POSITIVE OUT (AAX NEGATIVE) | REAR WOOFER (WITH DELUXE SOUND SYSTEM) |
| AAX / 16 WHT | AMPLIFIER NEGATIVE OUT (AAW POSITIVE) | REAR WOOFER (WITH DELUXE SOUND SYSTEM) |
| AAZ / 12 YEL | SLIDEOUT ROOM CONTROL SWITCH (RAM #1) | SLIDEOUT DRIVE MOTOR LEAD #1 |
| AAZ / 12 YEL | SLIDEOUT ROOM CONTROL SWITCH (RAM #1) | SLIDEOUT DRIVE MOTOR LEAD #2 |
| BBA / 16 WHT | SLIDEOUT WIRING (PARK BRAKE SW)(SWITCHED GRD) | SLIDEOUT ROOM RELAY (GROUND TERMINAL) |
| BBB / 16 YEL | SLIDEOUT ROOM CIRCUIT BREAKER (6 AMP) | SLIDEOUT ROOM RELAY (PIN 86 & 87) |
| BBC / 16 YEL | LOAD SHEDDER MONITOR PANEL (RED WIRE) | LOAD SHEDDER CONTROL BOARD (RED WIRE) |
| BBD / 16 YEL | LOAD SHEDDER MONITOR PANEL (BLUE WIRE) | LOAD SHEDDER CONTROL BOARD (BLUE WIRE) |
| BBE / 16 YEL | LOAD SHEDDER MONITOR PANEL (BLACK WIRE) | LOAD SHEDDER CONTROL BOARD (BLACK WIRE) |
| BBF / 16 YEL | LOAD SHEDDER MONITOR PANEL (GRAY WIRE) | LOAD SHEDDER CONTROL BOARD (GRAY WIRE) |
| BBG / 14 YEL | DINETTE CEILING LAMP SWITCH | DINETTE CEILING LAMP |
| BBH / 16 YEL | REAR COMPRESSOR SIGNAL REAR THERMOSTAT | LOAD SHEDDER CONTROL BOARD |
| BBJ / 16 YEL | LOAD SHEDDER CONTROL BOARD | REAR A/C (COOL) |
| BBK / 12 WHT | JET AIR/TAG AXLE WIRING | GROUND, CHASSIS |
| BBL / 14 YEL | OVHD SWITCH | OVHD HALOGEN LAMPS |
| BBM / 16 YEL | SLIDEOUT ROOM SWITCH (ROOM TWO EXTEND) | HWH WIRING (ROOM TWO EXTEND) |
| BBN / 16 YEL | SLIDEOUT ROOM SWITCH (ROOM TWO RETRACT) | HWH WIRING (ROOM TWO RETRACT) |
| BBP / 14 YEL | ICC COURTESY BLINK SWITCH | ICC COURTESY BLINK RELAY |
| BBR / 14 YEL | ICC COURTESY BLINK RELAY | CLEARANCE LAMPS |
| BBS / 14 YEL | CHASSIS FUSE PANEL | ICC COURTESY BLINK RELAY |
| BBT / 14 YEL | DOCKING LAMP SWITCH TRIGGER RELAY | DOCKING LAMP SWITCH |
| BBU / 12 YEL | DOCKING LAMP CIRCUIT BREAKER | DOCKING LAMP RELAY |
| BBW / 14 YEL | VEHICLE LEFT HEADLAMP LOW BEAM CIRCUIT | LEFT LOW BEAM LAMP |
| BBX / 14 YEL | VEHICLE RIGHT HEADLAMP LOW BEAM CIRCUIT | RIGHT LOW BEAM LAMP |
| BBY / 14 YEL | SWITCH-MONITOR PANEL (IN EXT. WATER CENTER) | EXTERIOR MONITOR PANEL (IN EXT. WATER CENTER) |
| BBZ / 14 YEL | OVERCURRENT PROTECTION (15A FUSE/BREAKER TYPICAL) | AUXILIARY FURNACE (CCA) |
| CCA / 14 WHT | AUXILIARY FURNACE | GROUND |
| CCB / 16 YEL | EXTERIOR MONITOR PANEL | WATER TANK LEVEL SENSOR |
| CCC / 16 YEL | EXTERIOR MONITOR PANEL | MAIN HOLDING TANK LEVEL SENSOR |
| CCD / 16 YEL | EXTERIOR MONITOR PANEL | AUX HOLDING TANK LEVEL SENSOR |
| CCE / 14 YEL | COMPARTMENT LAMP SWITCH | COMPARTMENT LAMP |
| CCF / 14 YEL | COMPARTMENT LAMP SWITCH | COMPARTMENT LAMP |

WIRE IDENTIFICATION CHART

| CODE / COLOR | FROM: | TO: |
|--------------|--|---|
| CCG / 14 YEL | COMPARTMENT LAMP SWITCH | COMPARTMENT LAMP |
| CCH / 14 YEL | COMPARTMENT LAMP SWITCH | COMPARTMENT LAMP |
| CCJ / 14 YEL | COMPARTMENT LAMP SWITCH | COMPARTMENT LAMP |
| CCK / 14 YEL | COMPARTMENT LAMP SWITCH | COMPARTMENT LAMP |
| CCL / 14 YEL | COMPARTMENT LAMP SWITCH | COMPARTMENT LAMP |
| CCM / 14 YEL | COMPARTMENT LAMP SWITCH | COMPARTMENT LAMP |
| CCN / 16 YEL | THERMOSTATE LOW SPEED FAN SIGNAL | CENTRAL AIR AND LOAD SHEDDER |
| CCP / 16 YEL | LOAD SHEDDER COMPRESSOR TWO CONTROL RELAY | CENTRAL A/C COMPRESSOR TWO |
| CCR / 14 YEL | SWITCH-MONITOR PANEL (IN EXT. WATER CENTER) | EXTERIOR MONITOR PANEL (IN EXT. WATER CENTER) |
| CCS / 16 YEL | NOISE FILTER | RADIO POWER INPUT |
| CCT / 16 YEL | REAR RIGHT TV SPEAKER NEGATIVE,SERIES CONNECTION | REAR LEFT TV SPEAKER POSITIVE,SERIES CONNECTION |
| CCU / 14 YEL | GM DOME LAMP POWER | DOMELAMP |
| CCW / 12 YEL | DUAL MODE SOLENOID (CHASSIS SIDE) | FUSE HOLDER (30 AMP) |
| CCX / 16 YEL | ORG WIRE ON AIR COMPRESSOR | AIR PRESSURE SWITCH ON AIR TANK |
| CCY / 16 YEL | HWH WIRING (BATTERY POWER) | SLIDEOUT ROOM SWITCH (POSITIVE) |
| CCZ / 16 YEL | HWH WIRING (SWITCHED BATTERY POWER) | SLIDEOUT ROOM #1 SWITCH (POSITIVE) |
| DDA / 16 YEL | HWH WIRING (PUMP RELAY CONTROL) | SLIDEOUT ROOM SWITCH (POSITIVE) |
| ddb / 14 YEL | REAR AUTO HEATER CIRCUIT BREAKER | REAR AUTO HEATER RELAY (POWER) |
| DDC / 14 YEL | REAR AUTO HEATER RELAY (SWITCHED POWER) | REAR AUTO HEATER SWITCH (COMMON TERMINAL) |
| DDD / 14 YEL | MODULE-CHARGE CONTROL RELAY OUTPUT | AUX-START SOLENOID RELAY |
| DDE / 14 YEL | AUX-START SOLENOID RELAY | AUX-START SOLENOID |
| DDF / 10 YEL | HEATER BLOWER CIRCUIT BREAKER | HEATER BLOWER RELAY |
| DDG / 10 YEL | CIRCUIT BREAKER BUSS BAR | CHASSIS BATTERY FEED CIRCUIT BREAKER |
| DDH / 14 YEL | FREIGHTLINER RUN ONLY TRIGGER CIRCUIT | HEATER BLOWER RELAY |
| DDJ / 16 WHT | CHASSIS PARKING BRAKE TRIGGER CIRCUIT | LEVELING SYSTEM PARKING BRAKE SENSOR WIRE |
| DDK / 16 YEL | HWH WIRING (PUMP RELAY CONTROL) | REAR SLIDEOUT ROOM SWITCH (POSITIVE) |
| DDL / 14 WHT | FRONT LEFT AUTOMOTIVE LAMPS | GROUND |
| DDM / 14 WHT | FRONT RIGHT AUTOMOTIVE LAMPS | GROUND |
| DDN / 16 YEL | TIMER MODULE | CHECK ANTENNA LIGHT |
| DDP / 12 YEL | OVERCURRENT PROTECTION (20A BREAKER TYPICAL) | INVERTER FEED (INVERTER NUMBER 2) |
| DDR / 12 WHT | INVERTER (INVERTER NUMBER 2) | GROUND |
| DDS / 12 WHT | INVERTER CHASSIS (INVERTER NUMBER 2) | GROUND |
| DDT / 12 YEL | POWER COMPT DOOR LOCK RELAY (RIGHT SIDE) | POWER COMPT DOOR LOCK MOTOR(S) (RIGHT SIDE) |
| DDU / 12 WHT | POWER COMPT DOOR UNLOCK RELAY (RIGHT SIDE) | POWER COMPT LOCK MOTOR(S) (UNLOCK) (RIGHT SIDE) |

WIRE IDENTIFICATION CHART

| CODE / COLOR | FROM: | TO: |
|-----------------|---|--|
| DDV / 12 YEL | POWER COMPT DOOR LOCK RELAY (LEFT SIDE) | POWER COMPT LOCK MOTOR(S) (LOCK) (LEFT SIDE) |
| DDW / 12 WHT | POWER COMPT DOOR UNLOCK RELAY (LEFT SIDE) | POWER COMPT LOCK MOTOR(S) (UNLOCK) (LEFT SIDE) |
| DDX / 12 YEL | OVERCURRENT PROTECTION (20A BREAKER TYPICAL) | POWER COMPT DOOR LOCK/ UNLOCK RELAY (RIGHT SIDE) |
| DDY / 12 YEL | OVERCURRENT PROTECTION (20A BREAKER TYPICAL) | POWER COMPT DOOR LOCK/ UNLOCK RELAY (LEFT SIDE) |
| DDZ / 12 YEL | POWER COMPT DOOR LOCK SWITCH (LOCK) (PIN 1) | POWER COMPT DOOR LOCK RELAY (PIN 86) |
| EEA / 12 WHT | POWER COMPT DOOR LOCK SWITCH (UNLOCK) (PIN 5) | POWER COMPT DOOR UNLOCK RELAY (PIN 86) |
| EEB / 12 WHT | POWER COMPT DOOR LOCK RELAYS (LEFT SIDE) | GROUND |
| EEC / 12 YEL | 25 AMP BREAKER IN 12 VOLT PANEL | SOFA RECLINER SWITCH SOFA 4-WAY RECLINER |
| EED / 12 WHT | SOFA RECLINER SWITCH SOFA 4-WAY RECLINER | GROUND |
| EEE / 14 YEL | OVERCURRENT PROTECTION (15A BREAKER TYPICAL) | 12V POWER JACK |
| EEF / 14 WHT | 12V POWER JACK | GROUND |
| EEG / 12 WHT | POWER COMPT DOOR LOCK RELAYS (RIGHT SIDE) | GROUND |
| EEH / 12 YEL | SOFA RECLINER SWITCH EXTEND | SOFA RECLINER MOTOR SOFA 4-WAY |
| EEJ / 12 YEL | SOFA RECLINER SWITCH RETRACT | SOFA RECLINER MOTOR SOFA 4-WAY |
| EEK / 18 YEL | AUDIO AMPLIFIER | LH FRT SPKR (+) |
| EEL / 18 WHT | AUDIO AMPLIFIER | LH FRT SPKR (-) |
| EEM / 18 YEL | AUDIO AMPLIFIER | RH FRT SPKR (+) |
| EEN / 18 WHT | AUDIO AMPLIFIER | RH FRT SPKR (-) |
| EEP / 18 YEL | AUDIO AMPLIFIER | LH RR SPKR (+) |
| EER / 18 WHT | AUDIO AMPLIFIER | LH RR SPKR (-) |
| EES / 18 YEL | AUDIO AMPLIFIER | RH RR SPKR (+) |
| EET / 18 WHT | AUDIO AMPLIFIER | RH RR SPKR (-) |
| EEU / 18 YEL | RADIO AMPLIFIER | CTR CHANNEL SPKR (+) |
| EEW / 18 WHT | AUDIO AMPLIFIER | CTR CHANNEL SPKR (-) |
| EEX / 12/10 YEL | PASSENGER AUTO A/C FEED CIRCUIT | PASSENGER AUTO A/C BLOWER (USE 10 IF OVER 6') |
| EYY / 10 WHT | PASSENGER AUTO A/C MOTOR | GROUND |
| EEZ / 12/10 YEL | OVERCURRENT PROTECTION (30A BREAKER TYPICAL) | PASSENGER HI-SPEED HEATER FAN (USER 10 IF OVER 6') |
| FFA / 10 YEL | PASSENGER HEATER BLOWER CIRCUIT BREAKER | PASSENGER HEATER BLOWER RELAY |
| FFB / 10 YEL | OVERCURRENT PORTECTION (30A BREAKER TYPICAL) | POWER LOUNGE CHAIR |
| FFC / 10 WHT | POWER LOUNGE CHAIR | GROUND |
| FFD / 12 YEL | OVERCURRENT PROTECTION (30A BREAKER TYPICAL) | AWNING CONTROL BOX (12V POSITIVE) |
| FFE / 12 WHT | AWNING CONTROL BOX | GROUND |
| FFF / 12 YEL | AWNING CONTROL BOX | DOOR AWNING (+) EXTEND |
| FFG / 12 WHT | AWNING CONTROL BOX | DOOR AWNING (-) EXTEND |

WIRE IDENTIFICATION CHART

| CODE / COLOR | FROM: | TO: |
|-----------------|---|---|
| FFH / 12 YEL | AWNING CONTROL BOX | PATIO AWNING (MOTOR POSITIVE) |
| FFJ / 12 WHT | PATIO AWNING (MOTOR GROUND) | AWNING CONTROL BOX |
| FFK / 16 YEL | AWNING CONTROL BOX | DOOR AWNING SWITCH (EXTEND) |
| FFL / 16 YEL | DOOR AWNING SWITCH (COMMON) | AWNING CONTROL BOX |
| FFM / 16 YEL | AWNING CONTROL BOX | DOOR AWNING SWITCH (RETRACT) |
| FFN / 12/16 YEL | AWNING CONTROL BOX | PATIO AWNING SWITCH (EXTEND) |
| FFP / 16 YEL | PATIO AWNING SWITCH (COMMON) | AWNING CONTROL BOX |
| FFR / 12/16 YEL | AWNING CONTROL BOX | PATIO AWNING SWITCH (RETRACT) |
| FFS / 14 WHT | RELAY (PIN 30) | AWNING CONTROL BOX |
| FFT / 12 YEL | PATIO AWNING SWITCH | AWNING CONTROL BOX |
| FFU / 16 YEL | AWNING SELECTOR SWITCH (DOOR AWNING) | AWNING CONTROL SWITCH (DOOR AWNING) |
| FFV / 16 YEL | AWNING SELECTOR SWITCH (PATIO AWNING) | AWNING CONTROL SWITCH (PATIO AWNING) |
| FFW / 14 YEL | LOUNGE LAMPS SWITCH #1 | LOUNGE LAMPS SWITCH #2 |
| FFX / 14 YEL | LOUNGE LAMPS SWITCH #1 | LOUNGE LAMPS SWITCH #2 |
| FFY / 14 YEL | CEILING FAN SWITCH | CEILING FAN |
| FFZ / 14 YEL | OVERCURRENT PROTECTION (15A FUSE/BREAKER TYPICAL) | COACH LIGHTING,ETC CIRCUIT #7 (REF GGA) |
| GGA / 14 WHT | COACH LIGHTING (REF-FFZ) | GROUND |
| GGB / 14 YEL | POWER LIFT VENT | POWER LIFT SWITCH (UP) |
| GGC / 14 YEL | POWER LIFT VENT | POWER LIFT SWITCH (DOWN) |
| GGD / 16 YEL | CONTROL MODULE (LEFT FRONT SLIDE)(STOP) | SLIDEOUT SWITCH (LEFT FRONT SLIDE) |
| GGE / 16 YEL | CONTROL MODULE (LEFT FRONT SLIDE)(GREEN LED) | SLIDEOUT SWITCH (LEFT FRONT SLIDE) |
| GGF / 16 YEL | CONTROL MODULE (LEFT FRONT SLIDE)(RED LED) | SLIDEOUT SWITCH (LEFT FRONT SLIDE) |
| GGG / 16 YEL | CONTROL MODULE (LEFT FRONT SLIDE)(SIGNAL) | LEFT FRONT SLIDE,FRONT RAM (ENCODER) |
| GGH / 16 YEL | CONTROL MODULE (LEFT FRONT SLIDE)(+) | LEFT FRONT SLIDE,FRONT RAM (ENCODER) |
| GGJ / 16 WHT | CONTROL MODULE (LEFT FRONT SLIDE)(-) | LEFT FRONT SLIDE,FRONT RAM (ENCODER) |
| GGK / 16 YEL | CONTROL MODULE (LEFT FRONT SLIDE)(SIGNAL) | LEFT FRONT SLIDE,REAR RAM (ENCODER) |
| GGL / 16 YEL | CONTROL MODULE (LEFT FRONT SLIDE)(+) | LEFT FRONT SLIDE,REAR RAM (ENCODER) |
| GGM / 16 WHT | CONTROL MODULE (LEFT FRONT SLIDE)(-) | LEFT FRONT SLIDE,REAR RAM (ENCODER) |
| GGN / 12 YEL | CONTROL MODULE (RAM #2) | SLIDEOUT ACTUATOR DRIVE LEAD #1 |
| GGP / 12 YEL | CONTROL MODULE (RAM #2) | SLIDEOUT ACTUATOR DRIVE LEAD #2 |
| GGR / 16 YEL | FRONT ROOF HEAT PUMP | THERMOSTAT (W TERMINAL) |
| GGS / 16 YEL | REAR ROOF HEAT PUMP | THERMOSTAT (W TERMINAL) |
| GGT / 12 YEL | SOFA RECLINER SWITCH EXTEND | SOFA RECLINER MOTOR SOFA 4-WAY |
| GGU / 12 YEL | SOFA RECLINER SWITCH RETRACT | SOFA RECLINER MOTOR SOFA 4-WAY |

05/28/11
REPORT 3593-1

WIRE IDENTIFICATION CHART

| CODE / COLOR | FROM: | TO: |
|--------------|---|---|
| GGV / 14 WHT | GPS (BLACK WIRE) | GROUND |
| GGW / 16 YEL | GPS (GREEN/WHITE WIRE) | VEHICLE SPEED SENSOR (CHASSIS SUPPLIED) |
| GGX / 14 YEL | 10 OHM RESISTOR * | BEDROOM CEILING FAN (LOW SPEED) |
| GGY / 14 YEL | BATHROOM VENT SWITCH | BATHROOM VENT |
| GGZ / 14 YEL | BEDROOM VENT SWITCH | BEDROOM VENT |
| HHA / 14 YEL | OVERCURRENT PROTECTION (15A FUSE/BREAKER TYPICAL) | COACH VENTS/LAMPS (REF HHB) |
| HHB / 14 WHT | COACH VENTS/LAMPS (REF HHA) | GROUND |
| HHC / 12 YEL | STEP COVER SWITCH | STEP COVER MOTOR (+)RETRACT, (-)EXTEND |
| HHD / 12 YEL | STEP COVER SWITCH | STEP COVER MOTOR (+)EXTEND, (-)RETRACT |
| HHE / 16 YEL | SLIDEOUT ROOM SWITCH (ROOM THREE EXTEND) | HWH WIRING (ROOM THREE EXTEND) |
| HHF / 16 YEL | SLIDEOUT ROOM SWITCH (ROOM THREE RETRACT) | HWH WIRING (ROOM THREE RETRACT) |
| HHG / 16 YEL | SLIDEOUT ROOM SWITCH (ROOM FOUR EXTEND) | HWH WIRING (ROOM FOUR EXTEND) |
| HHH / 16 YEL | SLIDEOUT ROOM SWITCH (ROOM FOUR RETRACT) | SLIDEOUT ROOM SWITCH (ROOM FOUR RETRACT) |
| HHJ / 14 YEL | 110V WATER HEATER TRIGGER SWITCH | WATER HEATER RELAY (110V ELECTRIC TRIGGER) |
| HHK / 14 YEL | DRIVER'S POWER SUNVISOR SWITCH | DRIVER'S POWER SUNVISOR |
| HHL / 14 YEL | DRIVER'S POWER SUNVISOR SWITCH | DRIVER'S POWER SUNVISOR |
| HHM / 14 YEL | PASS POWER SUNVISOR SWITCH | PASS POWER SUNVISOR |
| HHN / 14 YEL | PASS POWER SUNVISOR SWITCH | PASS POWER SUNVISOR |
| HHP / 14 YEL | HOT WATER HEAT CONTROL BOARD (F1) | ZONE 1 FAN SPEED SWITCH |
| HHR / 14 YEL | ZONE 1 FAN SPEED SWITCH | ZONE 1 HEATER FAN |
| HHS / 16 YEL | HOT WATER HEAT CONTROL BOARD (TC) | ZONE 2 & 3 THERMOSTAT |
| HHT / 16 YEL | HOT WATER HEAT CONTROL BOARD (T2) | ZONE 2 THERMOSTAT |
| HHU / 14 YEL | HOT WATER HEAT CONTROL BOARD (F2) | ZONE 2 FAN SPEED SWITCH |
| HHV / 14 YEL | ZONE 2 FAN SPEED SWITCH | ZONE 2 HEATER FAN |
| HHW / 16 YEL | HOT WATER HEAT CONTROL BOARD (T3) | ZONE 3 THERMOSTAT |
| HHX / 14 YEL | HOT WATER HEAT CONTROL BOARD (F3) | ZONE 3 HEATER FAN |
| HHY / 16 WHT | AWNING CONTROL BOX | WIND SENSOR (NEGATIVE) |
| HHZ / 16 YEL | AWNING CONTROL BOX | WIND SENSOR (POSITIVE) |
| JJA / 16 YEL | AWNING CONTROL BOX | WIND SENSOR TEMPERATURE OUTPUT |
| JJB / 16 YEL | AWNING CONTROL BOX | WIND SENSOR SPEED OUTPUT |
| JJC / 14 YEL | ENGINE HEATER CIRCULATING PUMP SWITCH | HOT WATER HEAT CONTROL PANEL (BLU/BLK WIRE) |
| JJD / 10 YEL | OVERCURRENT PROTECTION (25 FUSE TYPICAL) | HOT WATER HEAT CONTROL BOARD |
| JJE / 10 WHT | HOT WATER HEAT CONTROL BOARD | GROUND |
| JJF / 14 YEL | SATELLITE POWER SWITCH | SATELLITE-AUTO SEEK |

WIRE IDENTIFICATION CHART

| CODE / COLOR | FROM: | TO: |
|-----------------|--|---|
| JJG / 12 YEL | OVERCURRENT PROTECTION (20 AMP BREAKER TYPICAL) | SLIDEOUT ROOM CONTROL SWITCH (RAM #3) |
| JJH / 12 WHT | SLIDEOUT ROOM CONTROL SWITCH (RAM #3) | GROUND |
| JJJ / 12 YEL | SLIDEOUT ROOM CONTROL SWITCH (RAM #3) | SLIDEOUT DRIVE MOTOR LEAD #1 |
| JJK / 12 YEL | SLIDEOUT ROOM CONTROL SWITCH (RAM #3) | SLIDEOUT DRIVE MOTOR LEAD #2 |
| JJL / 12 YEL | OVERCURRENT PROTECTION (20 AMP BREAKER TYPICAL) | SLIDEOUT ROOM CONTROL SWITCH (RAM #2) |
| JJM / 16 YEL | HWH WIRING (SWITCHED BATTERY POWER) | SLIDEOUT ROOM SWITCH #2 (SWITCHED EXTEND/RETRACT PWR) |
| JJN / 16 YEL | HWH WIRING (SWITCHED BATTERY POWER) | SLIDEOUT ROOM SWITCH #3 (SWITCHED EXTEND/RETRACT PWR) |
| JJP / 16 YEL | HWH WIRING (SWITCHED BATTERY POWER) | SLIDEOUT ROOM SWITCH #4 (SWITCHED EXTEND/RETRACT PWR) |
| JJR / 12/16 YEL | REMOTE SWITCH (EXTEND) | PATIO AWNING CONTROL MODULE (RELAY POSITION 87A,EXTEND) |
| JJS / 12 YEL | REMOTE SWITCH | DOOR AWNING CONTROL RELAY (RELAY POSITION 87A,EXTEND) |
| JJT / 14 YEL | OVERCURRENT PROTECTION (15A FUSE/BREAKER TYPICAL) | COACH 12V RECEPTACLES (REF JJU) |
| JJU / 14 WHT | COACH 12V RECEPTACLES (REF JJT) | GROUND |
| JJV / 14 YEL | MONITOR PANEL LAMP SWITCH | MONITOR PANEL LAMP |
| JJW / 14 YEL | RUN ONLY POWER BREAKER | RUN ONLY POWER RELAY |
| JJX / 14 YEL | RUN ONLY POWER RELAY | GENERAL PURPOSE (RUN ONLY FEED) |
| JJY / 14 YEL | RUN/ACC POWER #1 BREAKER | RUN/ACC POWER #1 RELAY |
| JJZ / 14 YEL | RUN/ACC POWER #1 RELAY (REF LLD) | GENERAL PURPOSE (RUN/ACC FEED #1) |
| KKA / 14 YEL | RUN/ACC POWER #2 BREAKER | RUN/ACC POWER #2 RELAY |
| KKB / 14 YEL | RUN/ACC POWER #2 RELAY (REF LLE) | GENERAL PURPOSE (RUN/ACC FEED #2) |
| KKC / 12 YEL | POWER SEAT RELAY | POWER SEAT (HEATER) |
| KKD / 16 YEL | CONFIRMATION EMERGENCY SHUT OFF SWITCH (IN COACH) | EMERGENCY SHUT OFF SWITCH (ON REMOTE FILL BRACKET) |
| KKE / 16 YEL | EMERGENCY SHUT OFF SWITCH (ON REMOTE FILL BRACKET) | EMERGENCY SHUT OFF SOLENOID (ON LP TANK) |
| KKF / 6 BLK | BATTERY DISCONNECT RELAY | COACH BUSS BAR |
| KKG / 8 BLK | BATTERY MODE SOLENOID | CHASSIS BUSS BAR |
| KKH / 14 YEL | EXTERIOR SERVICE LAMP SWITCH #1 | EXTERIOR SERVICE LAMP SWITCH #2 |
| KKJ / 14 YEL | EXTERIOR SERVICE LAMP SWITCH #1 | EXTERIOR SERVICE LAMP SWITCH #2 |
| KKK / 16 YEL | HWH WIRING (SWITCHED BATTERY POWER) | SLIDEOUT ROOM #2 SWITCH (POSITIVE) |
| KKL / 16 YEL | HWH WIRING (SWITCHED BATTERY POWER) | SLIDEOUT ROOM #3 SWITCH (POSITIVE) |
| KKM / 16 YEL | HWH WIRING (SWITCHED BATTERY POWER) | SLIDEOUT ROOM #4 SWITCH (POSITIVE) |
| KKN / 14 YEL | KEYLESS ENTRY PORCH LIGHT OUTPUT | PORCH/STEP/MAP LAMP |
| KKP / 14 YEL | LOUNGE CEILING ROPE LAMP SWITCH (CIRCUIT #1) | LOUNGE CEILING ROPE LAMP (REF CIRCUIT SSZ) |
| KKR / 14 YEL | BEDROOM/BATHROOM CEILING LAMP SWITCH | BEDROOM/BATHROOM CEILING LAMP |
| KKS / 14 YEL | BEDROOM VALANCE LAMP SWITCH | BEDROOM VALANCE LAMP |
| KKT / 14 YEL | BEDROOM "MOOD" LAMP SWITCH | BEDROOM "MOOD" LAMP |

WIRE IDENTIFICATION CHART

| CODE / COLOR | FROM: | TO: |
|-----------------|---|---|
| KKU / 16 YEL | REAR TV SPEAKER OUTPUT (RIGHT POSITIVE) | RIGHT SPEAKER (POSITIVE) |
| KKV / 16 WHT | REAR TV SPEAKER OUTPUT (RIGHT NEGATIVE) | RIGHT SPEAKER (NEGATIVE) |
| KKW / 16 YEL | REAR TV SPEAKER OUTPUT (LEFT POSITIVE) | LEFT SPEAKER (POSITIVE) |
| KKX / 16 WHT | REAR TV SPEAKER OUTPUT (LEFT NEGATIVE) | LEFT SPEAKER (NEGATIVE) |
| KKY / 14 YEL | OVERCURRENT PROTECTION (15A FUSE/BREAKER TYPICAL) | COACH LIGHTING,ETC CIRCUIT #8 (REF KKZ) |
| KKZ / 14 WHT | COACH LIGHTING (REF KKY) | GROUND |
| LLA / 14 YEL | OVERCURRENT PROTECTION (15A FUSE/BREAKER TYPICAL) | COACH LIGHTING,ETC CIRCUIT #9 (REF LLB) |
| LLB / 14 WHT | COACH LIGHTING (REF LLA) | GROUND |
| LLC / 14 YEL | SEAT HEATER BREAKER (15 AMP BREAKER TYPICAL) | SEAT HEATER RELAY POSITION 30 |
| LLD / 14 WHT | RUN/ACC FEED #1 (REF JJZ) | GROUND |
| LLE / 14 WHT | RUN/ACC FEED #2 (REF KKB) | GROUND |
| LLF / 14 YEL | DOME LAMP RELAY | DOME LAMP |
| LLG / 10/12 YEL | TRAILER BRAKE SIGNAL (OUTPUT FROM CONTROLLER) | TRAILER CONNECTOR (ELECTRIC BRAKES) |
| LLH / 14 WHT | RUN ONLY GROUND SOURCE (CHASSIS SUPPLIED) | AUX START RELAY |
| LLJ / 14 YEL | AUX START RELAY (RUN ONLY POWER) | AUX START SWITCH |
| LLK / 10 YEL | CHASSIS BREAKER PANEL (LH FRT SLIDE)(FRT RAM) | CONTROL MODULE (LH FRT SLIDE) |
| LLL / 10 WHT | CHASSIS GROUND BAR (LH FRT SLIDE)(FRT RAM) | CONTROL MODULE (LH FRT SLIDE) |
| LLM / 10 YEL | CHASSIS BREAKER PANEL (LH FRT SLIDE)(REAR RAM) | CONTROL MODULE (LH FRT SLIDE) |
| LLN / 10 WHT | CHASSIS GROUND BAR (LH FRT SLIDE)(REAR RAM) | CONTROL MODULE (LH FRT SLIDE) |
| LLP / 10 YEL | CHASSIS BREAKER PANEL (REAR SLIDE RAM) | CONTROL MODULE (REAR SLIDE) |
| LLR / 10 WHT | CHASSIS GROUND BAR (REAR SLIDE RAM) | CONTROL MODULE (REAR SLIDE) |
| LLS / 10 YEL | CONTROL MODULE (LEFT FRONT SLIDE) | LT FRT SLIDE FRT RAM (MOTOR DRIVE LINE) |
| LLT / 10 YEL | CONTROL MODULE (LEFT FRONT SLIDE) | LT FRT SLIDE FRT RAM (MOTOR DRIVE LINE) |
| LLU / 10 YEL | CONTROL MODULE (LEFT FRONT SLIDE) | LT FRT SLIDE RR RAM (MOTOR DRIVE LINE) |
| LLV / 10 YEL | CONTROL MODULE (REAR SLIDE) | REAR SLIDEOUT RAM (MOTOR DRIVE LINE) |
| LLW / 10 YEL | CONTROL MODULE (LEFT FRONT SLIDE) | LT FRT SLIDE RR RAM (MOTOR DRIVE LINE) |
| LLX / 10 YEL | CONTROL MODULE (REAR SLIDE) | REAR SLIDEOUT RAM (MOTOR DRIVE LINE) |
| LLY / 16 WHT | CONTROL MODULE (REAR SLIDE)(GROUND) | SLIDEOUT SWITCH (REAR SLIDEOUT) |
| LLZ / 16 YEL | CONTROL MODULE (REAR SLIDE)(RETRACT) | SLIDEOUT SWITCH (REAR SLIDEOUT) |
| MMA / 16 YEL | CONTROL MODULE (REAR SLIDE)(STOP) | SLIDEOUT SWITCH (REAR SLIDEOUT) |
| MMB / 16 YEL | CONTROL MODULE (REAR SLIDE)(GREEN LED) | SLIDEOUT SWITCH (REAR SLIDEOUT) |
| MMC / 16 YEL | CONTROL MODULE (REAR SLIDE)(EXTEND) | SLIDEOUT SWITCH (REAR SLIDEOUT) |
| MMD / 16 YEL | CONTROL MODULE (REAR SLIDE)(RED LED) | SLIDEOUT SWITCH (REAR SLIDEOUT) |
| MME / 10 YEL | CHASSIS SIDE OF SOLENOID (FRT LT/REAR SLIDE RAMS) | BREAKER PANEL BUSS BAR (FRT LT/REAR SLIDE RAMS) |

WIRE IDENTIFICATION CHART

| CODE / COLOR | FROM: | TO: |
|--------------|--|--|
| MMF / 10 YEL | CHASSIS SIDE OF SOLENOID (FRT RT SLIDE RAMS) | BREAKER PANEL BUSS BAR (FRT RT SLIDE RAMS) |
| MMG / 10 YEL | CHASSIS SIDE OF SOLENOID (REAR SLIDE RAM) | BREAKER PANEL (REAR SLIDE RAM) |
| MMH / 16 YEL | OVERCURRENT PROTECTION (6 AMP BREAKER TYPICAL) | POWER SUNVISOR SWITCH |
| MMJ / 16 WHT | GROUND | POWER SUNVISOR SWITCH |
| MMK / 16 YEL | BEDROOM STEREO (LEFT SPEAKER REF) | CROSS OVER BOX (POSITIVE) |
| MML / 16 WHT | BEDROOM STEREO (LEFT SPEAKER REF) | CROSS OVER BOX (NEGATIVE) |
| MMM / 16 YEL | BEDROOM STEREO (RIGHT SPEAKER REF) | CROSS OVER BOX (POSITIVE) |
| MMN / 16 WHT | BEDROOM STEREO (RT SPKR/WOOFER REF) | CROSS OVER BOX (NEGATIVE) |
| MMP / 16 YEL | CROSS OVER COIL (POSITIVE) | SUBWOOFER (BEDROOM) |
| MMR / 14 YEL | CHASSIS TOW MARKER LAMPS CIRCUIT | TRAILER CONNECTOR (TAIL/MARKER LAMPS) |
| MMS / 12 YEL | +12V | PASSENGER AC/HEATER CONTROLS |
| MMT / 12 YEL | PASSENGER FAN SWITCH (LOW SPEED) | PASSENGER FAN |
| MMU / 12 YEL | PASSENGER FAN SWITCH (MED SPEED) | PASSENGER FAN |
| MMV / 12 YEL | PASSENGER FAN SWITCH (HIGH SPEED) | PASSENGER FAN |
| MMW / 16 YEL | +12V | PASSENGER CONTROL PANEL LAMPS |
| MMX / 16 WHT | PASSENGER CONTROL PANEL LAMPS | GROUND |
| MMY / 16 WHT | PASSENGER TEMP AND VENT CONTROL | GROUND |
| MMZ / 12 YEL | SLIDEOUT ROOM CONTROL SWITCH (RAM #1) | SLIDEOUT DRIVE MOTOR LEAD #1 |
| NNA / 12 YEL | SLIDEOUT ROOM CONTROL SWITCH (RAM #1) | SLIDEOUT DRIVE MOTOR LEAD #2 |
| NNB / 16 YEL | CONTROL MODULE (FRONT SLIDE) (SIGNAL) | FRONT SLIDE FRONT RAM (ENCODER) |
| NNC / 16 YEL | CONTROL MODULE (FRONT SLIDE) (+) | FRONT SLIDE FRONT RAM (ENCODER) |
| NND / 16 WHT | CONTROL MODULE (FRONT SLIDE) (-) | FRONT SLIDE FRONT RAM (ENCODER) |
| NNE / 16 YEL | CONTROL MODULE (FRONT SLIDE) (SIGNAL) | FRONT SLIDE REAR RAM (ENCODER) |
| NNF / 16 YEL | CONTROL MODULE (FRONT SLIDE) (+) | FRONT SLIDE REAR RAM (ENCODER) |
| NNG / 16 WHT | CONTROL MODULE (FRONT SLIDE) (-) | FRONT SLIDE REAR RAM (ENCODER) |
| NNH / 12 YEL | CONTROL MODULE (RAM #2) | SLIDEOUT ACTURATOR DRIVE LEAD #1 |
| NNJ / 12 YEL | CONTROL MODULE (RAM #2) | SLIDEOUT ACTURATOR DRIVE LEAD #2 |
| NNK / 16 YEL | KEYLESS ENTRY TOUCH PAD SIGNAL | ENTRANCE DOOR TOUCH PAD |
| NNL / 16 YEL | PASSENGER TEMP CONTROL (CONTROL OUT) | PASSENGER AC/HEATER |
| NNM / 16 YEL | PASSENGER VENT CONTROL (CONTROL OUT) | PASSENGER VENT |
| NNN / 16 YEL | CONTROL MODULE (RIGHT FRONT SLIDE)(STOP) | SLIDEOUT SWITCH (RIGHT FRONT SLIDE) |
| NNP / 16 YEL | CONTROL MODULE (RIGHT FRONT SLIDE)(GREEN LED) | SLIDEOUT SWITCH (RIGHT FRONT SLIDE) |
| NNR / 16 YEL | CONTROL MODULE (RIGHT FRONT SLIDE)(RED LED) | SLIDEOUT SWITCH (RIGHT FRONT SLIDE) |
| NNS / 16 WHT | CONTROL MODULE (RIGHT FRONT SLIDE)(GROUND) | SLIDEOUT SWITCH (RIGHT FRONT SLIDEOUT) |

WIRE IDENTIFICATION CHART

| CODE / COLOR | FROM: | TO: |
|--------------|---|--|
| NNT / 16 YEL | CONTROL MODULE (RIGHT FRONT SLIDE)(SIGNAL) | RIGHT FRONT SLIDE,FRONT RAM (ENCODER) |
| NNU / 16 YEL | CONTROL MODULE (RIGHT FRONT SLIDE)(+) | RIGHT FRONT SLIDE,FRONT RAM (ENCODER) |
| NNV / 16 WHT | CONTROL MODULE (RIGHT FRONT SLIDE)(-) | RIGHT FRONT SLIDE,FRONT RAM (ENCODER) |
| NNW / 16 YEL | CONTROL MODULE (RIGHT FRONT SLIDE)(SIGNAL) | RIGHT FRONT SLIDE,REAR RAM (ENCODER) |
| NNX / 16 YEL | CONTROL MODULE (RIGHT FRONT SLIDE)(+) | RIGHT FRONT SLIDE,REAR RAM (ENCODER) |
| NNY / 16 WHT | CONTROL MODULE (RIGHT FRONT SLIDE)(-) | RIGHT FRONT SLIDE,REAR RAM (ENCODER) |
| NNZ / 10 YEL | CHASSIS BREAKER PANEL (RH FRT SLIDE)(FRT RAM) | CONTROL MODULE (RIGHT FRONT SLIDE) |
| PPA / 10 WHT | CHASSIS GROUND BAR (RH FRT SLIDE)(FRT RAM) | CONTROL MODULE (RIGHT FRONT SLIDE) |
| PPB / 10 YEL | CHASSIS BREAKER PANEL (RH FRT SLIDE)(REAR RAM) | CONTROL MODULE (RIGHT FRONT SLIDE) |
| PPC / 10 WHT | CHASSIS GROUND BAR (RH FRT SLIDE)(REAR RAM) | CONTROL MODULE (RIGHT FRONT SLIDE) |
| PPD / 10 YEL | CONTROL MODULE (RIGHT FRONT SLIDE) | RH FRT SLIDE FRT RAM (MOTOR DRIVE LINE) |
| PPE / 10 YEL | CONTROL MODULE (RIGHT FRONT SLIDE) | RH FRT SLIDE FRT RAM (MOTOR DRIVE LINE) |
| PPF / 10 YEL | CONTROL MODULE (RIGHT FRONT SLIDE) | RH FRT SLIDE RR RAM (MOTOR DRIVE LINE) |
| PPG / 10 YEL | CONTROL MODULE (RIGHT FRONT SLIDE) | RH FRT SLIDE RR RAM (MOTOR DRIVE LINE) |
| PPH / 14 YEL | CHASSIS CLEARANCE LAMPS CRT #2 (REF MM) | CLEARANCE/MARKER LAMPS |
| PPJ / 14 YEL | PASSENGER SUNVISOR SWITCH DRIVER'S SIDE | PASSENGER SUNVISOR SWITCH PASSENGER'S SIDE |
| PPK / 14 YEL | PASSENGER SUNVISOR SWITCH DRIVER'S SIDE | PASSENGER SUNVISOR SWITCH PASSENGER'S SIDE |
| PPL / 14 YEL | DASH RADIO ACCESSORY POWER | TV/RADIO SPEAKER SELECTOR SWITCH |
| PPM / 12 YEL | OVERCURRENT PROTECTION (15A BREAKER TYPICAL) | LEFT FRONT SLIDEOUT LOCK SWITCH |
| PPN / 12 WHT | LEFT FRONT SLIDEOUT LOCK SWITCH (REF PPM) | GROUND |
| PPP / 12 YEL | OVERCURRENT PROTECTION (15A BREAKER TYPICAL) | RIGHT FRONT SLIDEOUT LOCK SWITCH |
| PPR / 12 WHT | RIGHT FRONT SLIDEOUT LOCK SWITCH (REF PPP) | GROUND |
| PPS / 12 YEL | LEFT FRONT SLIDEOUT LOCK SWITCH | LEFT FRONT SLIDEOUT LOCK MOTOR |
| PPT / 12 YEL | LEFT FRONT SLIDEOUT LOCK SWITCH | LEFT FRONT SLIDEOUT LOCK MOTOR |
| PPU / 12 YEL | RIGHT FRONT SLIDEOUT LOCK SWITCH | RIGHT FRONT SLIDEOUT LOCK MOTOR |
| PPV / 12 YEL | RIGHT FRONT SLIDEOUT LOCK SWITCH | RIGHT FRONT SLIDEOUT LOCK MOTOR |
| PPW / 14 YEL | SLIDEOUT LOCK SWITCH W/SLIDEOUT SWITCH #1 IN DASH | SLIDEOUT ROOM #1 SWITCH (POSITIVE) |
| PPX / 14 YEL | SLIDEOUT LOCK SWITCH W/SLIDEOUT SWITCH #3 IN DASH | SLIDEOUT ROOM #3 SWITCH (POSITIVE) |
| PPY / 14 YEL | SLIDEOUT LOCK SWITCH W/SLIDEOUT SWITCH #4 IN DASH | SLIDEOUT ROOM #4 SWITCH (POSITIVE) |
| PPZ / 12 YEL | CHASSIS SUPPLIED WIRING | TRAILER TOW BATTERY FEED (7 WAY TOW CONNECTOR) |
| RRA / 14 YEL | GENERAL SWITCH | GENERAL LAMP |
| RRB / 14 YEL | GENERAL SWITCH | GENERAL LAMP |
| RRC / 14 YEL | GENERAL SWITCH | GENERAL LAMP |
| RRD / 14 YEL | GALLEY CEILING FAN SWITCH | GALLEY CEILING FAN |

WIRE IDENTIFICATION CHART

| CODE / COLOR | FROM: | TO: |
|--------------|--|---|
| RRE / 14 YEL | 10 OHM RESISTOR | LOUNGE CEILING FAN (LOW SPEED) |
| RRF / 14 YEL | BEDROOM READING LAMP SWITCH | BEDROOM READING LAMP |
| RRG / 14 YEL | BEDROOM READING LAMP SWITCH #1 (2 SWITCH SYSTEM) | BEDROOM READING LAMP SWITCH #2 (2 SWITCH SYSTEM) |
| RRH / 14 YEL | BEDROOM READING LAMP SWITCH #1 (2 SWITCH SYSTEM) | BEDROOM READING LAMP SWITCH #2 (2 SWITCH SYSTEM) |
| RRJ / 12 WHT | SEVEN PIN CONNECTOR (TRAILER CONNECTOR) | GROUND |
| RRK / 16 YEL | 2ND GALLEY HOLDING TANK | SELECTOR SWITCH |
| RRL / 16 YEL | HOLDING TANK SELECTOR SWITCH | MONITOR PANEL |
| RRM / 14 YEL | CENTER POWER SUNVISOR SWITCH | CENTER SUNVISOR |
| RRN / 14 YEL | CENTER POWER SUNVISOR SWITCH | CENTER SUNVISOR |
| RRP / 16 YEL | THERMOSTAT (LOW STAGE) | FURNACE (LOW STAGE) |
| RRR / 16 YEL | THERMOSTAT (HIGH STAGE) | FURNACE (HIGH STAGE) |
| RRS / 16 YEL | SLIDEOUT LOCK SWITCH (#1) | SLIDEOUT LOCK SWITCH (#2) |
| RRT / 16 YEL | AWNING CONTROL BOX (LOCATED IN HOUSING PIN 1) | DOOR AWNING LIMIT SWITCH (LOCATED IN HOUSING PIN 1) |
| RRU / 16 WHT | AWNING CONTROL BOX (LOCATED IN HOUSING PIN 2) | DOOR AWNING LIMIT SWITCH (LOCATED IN HOUSING PIN 2) |
| RRV / 14 YEL | VIDEO CAMERA SWITCHER | MONITOR |
| RRW / 14 YEL | LOCKOUT POSITIONING SWITCH | FIREPLACE LOCKOUT RECP |
| RRX / 10 YEL | 12V BREAKER PANEL (30 AMP TYPICAL) | SMART FUSE BLOCK (POSITIVE) |
| RRY / 18 YEL | SMART FUSE BLOCK (COMMUNICATION BUS) | SMART FUSE SWITCH PANEL |
| RRZ / 18 WHT | SMART FUSE BLOCK (COMMUNICATION GROUND) | SMART FUSE SWITCH PANEL |
| SSA / 14 WHT | FRONT LEFT SLIDE LOCK (INDICATOR OUTPUT-GROUND) | FRONT LEFT LOCK SWITCH LED |
| SSB / 14 WHT | FRONT RIGHT SLIDE LOCK (INDICATOR OUTPUT-GROUND) | FRONT RIGHT LOCK SWITCH LED |
| SSC / 14 YEL | JACK CONTROL PANEL (LEVEL) | REMOTE AUTO LEVEL SWITCH |
| SSD / 14 YEL | JACK CONTROL PANEL (STORE) | REMOTE AUTO LEVEL SWITCH |
| SSE / 14 YEL | JACK CONTROL PANEL (COMMON) | REMOTE AUTO LEVEL SWITCH (+)HWH (-)KWIKEE |
| SSF / 14 YEL | JACK CONTROL PANEL (INDICATOR LED) | REMOTE AUTO LEVEL SWITCH (-)HWH (+)KWIKEE |
| SSG / 18 YEL | TRANSFORMER | AUTO GENERATOR START MONITOR PANEL |
| SSH / 18 WHT | TRANSFORMER | AUTO GENERATOR START MONITOR PANEL |
| SSJ / 10 YEL | BRAKE CONTROLLER POWER (30-AMP BREAKER TYPICAL) | BRAKE CONTROLLER (POWER INPUT) |
| SSK / 14 WHT | BRAKE CONTROLLER (GROUND) | GROUND |
| SSL / 14 YEL | CHASSIS REAR LAMP WIRING (LEFT TURN ONLY) | LEFT TURN SIGNAL *NOT COMBO TURN/BRAKE* |
| SSM / 14 YEL | CHASSIS REAR LAMP WIRING (RIGHT TURN ONLY) | RIGHT TURN SIGNAL *NOT COMBO TURN/BRAKE* |
| SSN / 18 WHT | FRONT RIGHT SLIDEOUT LOCK END SWITCH (FROM NNS) | CONTROL MODULE (RIGHT FRONT SLIDE)(GROUND) |
| SSP / 18 WHT | LEFT FRONT SLIDEOUT LOCK END SWITCH (FROM DS) | CONTROL MODULE (LEFT FRONT SLIDE)(GROUND) |
| SSR / 16 YEL | EXTERIOR HOLDING TANK SELECTOR SWITCH | EXTERIOR MONITOR PANEL |

WIRE IDENTIFICATION CHART

| CODE / COLOR | FROM: | TO: |
|--------------|---|---|
| SSS / 16 YEL | EXTERIOR HOLDING TANK SELECTOR SWITCH | 2ND GALLEY HOLDING TANK |
| SST / 14 YEL | GALLEY LAMP SWITCH #1 | GALLEY LAMP SWITCH #2 |
| SSU / 14 YEL | GALLEY LAMP SWITCH #1 | GALLEY LAMP SWITCH #2 |
| SSV / 14 YEL | BATH CEILING LAMP SWITCH #1 (2 SWITCH SYSTEM) | BATH CEILING LAMP SWITCH #2 (2 SWITCH SYSTEM) |
| SSW / 14 YEL | BATH CEILING LAMP SWITCH #1 (2 SWITCH SYSTEM) | BATH CEILING LAMP SWITCH #2 (2 SWITCH SYSTEM) |
| SSX / 12 YEL | DOOR AWNING SWITCH | DOOR AWNING CONTROL RELAY (RELAY POSITION 87A EXTEND) |
| SSY / 12 WHT | DOOR AWNING SWITCH | DOOR AWNING LIMIT SWITCH |
| SSZ / 14 YEL | LOUNGE CEILING ROPE LAMP SWITCH (CIRCUIT #2) | LOUNGE CEILING ROPE LAMP (REF CIRCUIT KKP) |
| TTA / 14 YEL | LEVELING SYSTEM CONTROLS | INDICATOR LAMP/ALARM (POSITIVE) |
| TTB / 14 WHT | LEVELING SYSTEM CONTROLS | INDICATOR LAMP/ALARM (NEGATIVE) |
| TTC / 10 YEL | CHASSIS BATTERY | SLIDEOUT LOCK BREAKER |
| TTD / 14 YEL | VEHICLE LEFT HEADLAMP HI BEAM CIRCUIT | LEFT HI BEAM LAMP |
| TTE / 14 YEL | RELAY | RIGHT DOCKING LAMP |
| TTF / 14 YEL | RELAY | LEFT DOCKING LAMP |
| TTG / 18 YEL | FRONT THERMOSTAT (MAIN OR ZONE #1) | REMOTE SENSOR |
| TTH / 18 YEL | FRONT THERMOSTAT (MAIN OR ZONE #1) | REMOTE SENSOR |
| TTJ / 14 YEL | BRAKE LAMP CIRCUIT BREAKER | BRAKE LAMP RELAY |
| TTK / 14 YEL | RIGHT TURNLAMP CIRCUIT BREAKER | RIGHT TURN LAMP RELAY |
| TTL / 14 YEL | LEFT TURN LAMP CIRCUIT BREAKER | LEFT TURN LAMP RELAY |
| TTM / 14 YEL | BACKUP LAMP CIRCUIT BREAKER | BACKUP LAMP RELAY |
| TTN / 14 YEL | PARK LAMP CIRCUIT BREAKER | PARK LAMP RELAY |
| TTP / 12 YEL | AWNING CONTROL BOX | PATIO AWNING #2 (MOTOR) |
| TTR / 12 WHT | AWNING CONTROL BOX | PATIO AWNING #2 (MOTOR) |
| TTS / 16 YEL | AWNING CONTROL BOX | PATIO AWNING #2 (SWITCH EXTEND) |
| TTT / 16 YEL | AWNING CONTROL BOX | PATIO AWNING #2 (SWITCH COMMON) |
| TTU / 16 YEL | AWNING CONTROL BOX | PATIO AWNING #2 (SWITCH RETRACT) |
| TTV / 16 YEL | AWNING CONTROL BOX | WIND SENSOR #2 (POSITIVE) |
| TTW / 16 YEL | AWNING CONTROL BOX | WIND SENSOR #2 (NEGATIVE) |
| TTX / 16 YEL | AWNING CONTROL BOX | WIND SENSOR #2 (SPEED OUTPUT) |
| TTY / 18 YEL | CHASSIS BATT DISCONNECT RELAY (TERMINAL I) | CHASSIS BATT DISCONNECT SWITCH |
| TTZ / 18 YEL | CHASSIS BATT DISCONNECT RELAY (TERMINAL S) | CHASSIS BATT DISCONNECT SWITCH |
| UUA / 18 YEL | CHASSIS BATT DISCONNECT RELAY LOAD SIDE FUSE FEED | CHASSIS BATT DISCONNECT SWITCH INDICATOR LAMP |
| UUB / 18 YEL | CHASSIS BATT DISCONNECT LOCKOUT RELAY-NC CONTACT | CHASSIS BATT DISCONNECT RELAY SWITCH |
| UUC / 18 WHT | CHASSIS BATT DISCONNECT SWITCH | GROUND |

WIRE IDENTIFICATION CHART

| CODE / COLOR | FROM: | TO: |
|---------------|--|---|
| UUD / 12 YEL | RIGHT REAR SLIDEOUT LOCK SWITCH | RIGHT REAR SLIDEOUT LOCK MOTOR |
| UUE / 12 YEL | RIGHT REAR SLIDEOUT LOCK SWITCH | RIGHT REAR SLIDEOUT LOCK MOTOR |
| UUF / 16 YEL | BATTERY MAINTAINER | CHASSIS BATTERY |
| UUG / 18 YEL | CHASSIS BATT DISCONNECT RELAY BATTERY SIDE FUSE FEED | CHASSIS BATT DISCONNECT RELAY COMMON CONTACT |
| UUH / 18 YEL | THERMOSTAT AGS OUTPUT 9 PIN HSG POSITION 3 | AUTO GEN START MODULE POSITION 10 |
| UUJ / 12 YEL | TRAILER BATTERY BREAKER | TRAILER BATTERY RELAY |
| UUK / 18 YEL | AWNING CONTROL BOX (LOW WIND SPEED SETTING) | AWNING WIND SPEED SWITCH (LOW WIND SPEED) |
| UUL / 18 YEL | AWNING CONTROL BOX (MEDIUM WIND SPEED SETTING) | AWNING WIND SPEED SWITCH (MEDIUM WIND SPEED, COMMON) |
| UUM / 18 YEL | AWNING CONTROL BOX (HIGH WIND SPEED SETTING) | AWNING WIND SPEED SWITCH (HIGH WIND SPEED) |
| UUN / 18 YEL | AWNING #2 CONTROL BOX (LOW WIND SPEED SETTING) | AWNING #2 WIND SPEED SWITCH (LOW WIND SPEED) |
| UUP / 18 YEL | AWNING #2 CONTROL BOX (MEDIUM WIND SPEED SETTING) | AWNING #2 WIND SPEED SWITCH (MEDIUM WIND SPEED, COMMON) |
| UUR / 18 YEL | AWNING #2 CONTROL BOX (HIGH WIND SPEED SETTING) | AWNING #2 WIND SPEED SWITCH (HIGH WIND SPEED) |
| UUS / 18 YEL | FRONT SLIDEOUT MOTOR (ENCODER SIGNAL) | SLIDEOUT MODULE (ENCODER SIGNAL) |
| UUT / 18 YEL | FRONT SLIDEOUT MOTOR (ENCODER SIGNAL) | SLIDEOUT MODULE (ENCODER SIGNAL) |
| UUU / 18 WHT | FRONT SLIDEOUT MOTOR (ENCODER GROUND) | SLIDEOUT MODULE (ENCODER GROUND) |
| UUV / 10 YEL | REAR SLIDEOUT MOTOR (MOTOR 'RED' LEAD) | SLIDEOUT MODULE (CONTROL MOTOR 2 PIN 1) |
| U UW / 10 WHT | REAR SLIDEOUT MOTOR (MOTOR 'BLK' LEAD) | SLIDEOUT MODULE (CONTROL MOTOR 2 PIN 2) |
| UUX / 18 YEL | REAR SLIDEOUT MOTOR (ENCODER COM POWER) | SLIDEOUT MODULE (ENCODER COM POWER) |
| UUY / 18 YEL | REAR SLIDEOUT MOTOR (ENCODER SIGNAL) | SLIDEOUT MODULE (ENCODER SIGNAL) |
| UUZ / 18 YEL | REAR SLIDEOUT MOTOR (ENCODER SIGNAL) | SLIDEOUT MODULE (ENCODER SIGNAL) |
| VVA / 18 WHT | REAR SLIDEOUT MOTOR (ENCODER GROUND) | SLIDEOUT MODULE (ENCODER GROUND) |
| VVB / 18 YEL | SLIDEOUT SWITCH (SWITCH "IN") | SLIDEOUT MODULE (RETRACT) |
| VVC / 18 YEL | SLIDEOUT SWITCH (SWITCH "OUT") | SLIDEOUT MODULE (EXTEND) |
| VVD / 18 YEL | SLIDEOUT SWITCH (MOTOR 1 SWITCH) | SLIDEOUT MODULE (MOTOR 1 SWITCH) |
| VVE / 18 YEL | SLIDEOUT SWITCH (MOTOR 2 SWITCH) | SLIDEOUT MODULE (MOTOR 2 SWITCH) |
| VVF / 18 YEL | SLIDEOUT SWITCH (CALIBRATION SWITCH) | SLIDEOUT MODULE (CALIBRATION SWITCH) |
| VVG / 18 YEL | SLIDEOUT SWITCH (RED LED) | SLIDEOUT MODULE (RED LED) |
| VVH / 18 YEL | SLIDEOUT SWITCH (GREEN LED) | SLIDEOUT MODULE (GREEN LED) |
| VVJ / 18 YEL | SLIDEOUT SWITCH (SWITCH POWER) | INLINE FUSE (1 AMP) (SWITCH POWER) |
| VVK / 10 YEL | FRONT SLIDEOUT MOTOR (MOTOR 'RED' LEAD) | SLIDEOUT MODULE (CONTROL MOTOR 1 PIN 1) |
| VVL / 10 WHT | FRONT SLIDEOUT MOTOR (MOTOR 'BLK' LEAD) | SLIDEOUT MODULE (CONTROL MOTOR 1 PIN 2) |
| VVM / 18 YEL | FRONT SLIDEOUT MOTOR (ENCODER COM POWER) | SLIDEOUT MODULE (ENCODER COM POWER) |
| VVN / 18 YEL | SLIDEOUT SWITCH (LOW VOLTAGE LED) | SLIDEOUT MODULE (LOW VOLTAGE LED) |
| VVP / 18 YEL | SLIDEOUT SWITCH (PARK BRAKE LED) | SLIDEOUT MODULE (PARK BRAKE LED) |

WIRE IDENTIFICATION CHART

| CODE / COLOR | FROM: | TO: |
|--------------|---|---------------------------------------|
| VVR / 18 YEL | SLIDEOUT MODULE (SWITCH POWER) | INLINE FUSE (1 AMP) (SWITCH POWER) |
| VVS / 18 YEL | AQUA-HOT | ZONE 1 T-STAT |
| VVT / 18 YEL | AQUA-HOT | ZONE 1 T-STAT |
| VVU / 18 WHT | AQUA-HOT | ZONE 2 FAN (NEG) (HHU POS) |
| VVV / 18 WHT | AQUA-HOT | ZONE 1 FAN (NEG) (HHP POS) |
| VVW / 18 YEL | AQUA-HOT | ZONE 3 T-STAT (HHW) |
| VVX / 18 WHT | AQUA-HOT | ZONE 3 FAN (NEG) (HHX POS) |
| VVY / 16 YEL | AQUA-HOT | DIESEL BURNER SWITCH |
| VVZ / 16 YEL | AQUA-HOT | DIESEL BURNER SWITCH |
| WWA / 16 YEL | AQUA-HOT | 110V ASSIST SWITCH |
| WWB / 16 YEL | AQUA-HOT | 110V ASSIST SWITCH |
| WWC / 16 YEL | AQUA-HOT | ENGINE PREHEAT SWITCH |
| WWD / 16 YEL | AQUA-HOT | ENGINE PREHEAT SWITCH |
| WWE / 18 YEL | LEFT REAR SLIDEOUT SWITCH (SWITCH POWER) | INLINE FUSE (1 AMP) (SWITCH POWER) |
| WWF / 18 YEL | LEFT REAR SLIDEOUT SWITCH (LOW VOLTAGE LED) | SLIDEOUT MODULE (LOW VOLTAGE LED) |
| WWG / 18 YEL | LEFT REAR SLIDEOUT SWITCH (PARK BRAKE LED) | SLIDEOUT MODULE (PARK BRAKE LED) |
| WWH / 18 YEL | LEFT REAR SLIDEOUT MODULE (SWITCH POWER) | INLINE FUSE(1 AMP) (SWITCH POWER) |
| WWJ / 18 YEL | RIGHT REAR SLIDEOUT SWITCH (SWITCH POWER) | INLINE FUSE (1 AMP) (SWITCH POWER) |
| WWK / 18 YEL | RIGHT REAR SLIDEOUT SWITCH (LOW VOLTAGE LED) | SLIDEOUT MODULE (LOW VOLTAGE LED) |
| WWL / 18 YEL | RIGHT REAR SLIDEOUT SWITCH (PARK BRAKE LED) | SLIDEOUT MODULE (PARK BRAKE LED) |
| WWM / 18 YEL | RIGHT REAR SLIDEOUT MODULE (SWITCH POWER) | INLINE FUSE (1 AMP) (SWITCH POWER) |
| WWN / 18 YEL | RIGHT FRONT SLIDEOUT SWITCH (SWITCH POWER) | INLINE FUSE (1 AMP) (SWITCH POWER) |
| WWP / 18 YEL | RIGHT FRONT SLIDEOUT SWITCH (LOW VOLTAGE LED) | SLIDEOUT MODULE (LOW VOLTAGE LED) |
| WWR / 18 YEL | RIGHT FRONT SLIDEOUT SWITCH (PARK BRAKE LED) | SLIDEOUT MODULE (PARK BRAKE LED) |
| WWS / 18 YEL | RIGHT FRONT SLIDEOUT MODULE (SWITCH POWER) | INLINE FUSE (1 AMP) (SWITCH POWER) |
| WWT / 18 YEL | THERMOSTAT OR CONTROL BOARD (ZONE #2) | REMOTE SENSOR |
| WWU / 18 YEL | THERMOSTAT OR CONTROL BOARD (ZONE #2) | REMOTE SENSOR |
| WWV / 18 YEL | MULTIPLEX POSITIVE (MULTIPLEX CONTROL) | MULTIPLEX POSITIVE (MULTIPLEX DEVICE) |
| WWW / 18 WHT | MULTIPLEX NEGATIVE (MULTIPLEX CONTROL) | MULTIPLEX NEGATIVE (MULTIPLEX DEVICE) |
| WWX / 18 YEL | MULTIPLEX SIGNAL (MULTIPLEX CONTROL) | MULTIPLEX SIGNAL (MULTIPLEX DEVICE) |
| WWY / 18 YEL | LOAD SHEDDER RELAY NORMALLY CLOSED | A/C #2 |
| WWZ / 18 YEL | LOAD SHEDDER RELAY COMMON | A/C #2 |
| XXA / 18 YEL | LOAD SHEDDER RELAY NORMALLY CLOSED | A/C #3 |
| XXB / 18 YEL | LOAD SHEDDER RELAY COMMON | A/C #3 |

WIRE IDENTIFICATION CHART

| CODE / COLOR | FROM: | TO: |
|--------------|---|--|
| XXC / 16 YEL | BATTERY DISC SWITCH (MONOPLEX SIGNAL) | BATTERY DISC MODULE (MONOPLEX SIGNAL) |
| XXD / 16 WHT | BATTERY DISC SWITCH (GROUND) | BATTERY DISC MODULE (GROUND) |
| XXE / 16 YEL | BATTERY DISC SWITCH (CHASSIS VOLTAGE) | BATTERY DISC MODULE (CHASSIS VOLTAGE) |
| XXF / 16 YEL | BATTERY DISC SWITCH (COACH VOLTAGE) | BATTERY DISC MODULE (COACH VOLTAGE) |
| XXG / 16 WHT | LOAD SHEDDER 12V RELAY POSITION 1 (NORMALLY CLOSED) | A/C #1 B- GROUND TERMINAL (TOTAL UNIT SHED) |
| XXH / 16 WHT | LOAD SHEDDER 12V RELAY POSITION 10(NORMALLY CLOSED) | A/C #2 B- GROUND TERMINAL (TOTAL UNIT SHED) |
| XXJ / 18 YEL | LOAD SHEDDER RELAY NORMALLY CLOSED | A/C #1 |
| XXK / 18 YEL | LOAD SHEDDER RELAY COMMON | A/C #1 |
| XXL / 18 YEL | THERMOSTAT STAGE 1 (LOW OR SINGLE STAGE) | STAGE 1 HEAT ISOLATION RELAY COMMON TERMINAL |
| XXM / 18 YEL | THERMOSTAT STAGE 2 (HIGH STAGE) | STAGE 2 HEAT ISOLATION RELAY COMMON TERMINAL |
| XXN / 12 YEL | TV LIFT SWITCH #1 (2-SWITCH SYSTEM TRAVELER 1) | TV LIFT SWITCH #2 (2-SWITCH SYSTEM TRAVELER 1) |
| XXP / 12 YEL | TV LIFT SWITCH #1 (2-SWITCH SYSTEM TRAVELER 2) | TV LIFT SWITCH #2 (2-SWITCH SYSTEM TRAVELER 2) |
| XXR / 16 YEL | REVERSE TRIGGER RELAY | CAMERA MONITOR |
| XXS / 16 YEL | RIGHT TURN TRIGGER RELAY | CAMERA MONITOR |
| XXT / 16 YEL | LEFT TURN TRIGGER RELAY | CAMERA MONITOR |
| XXU / 18 YEL | THERMOSTAT (AUX FURNACE) | HEAT ISOLATION RELAY COMMON TERMINAL |
| XXV / 10 YEL | CHASSIS BREAKER PANEL (REAR SLIDE RAM) | CONTROL RELAY (REAR SLIDE) |
| XXW / 10 WHT | CHASSIS GROUND BAR (REAR SLIDE RAM) | CONTROL RELAY (REAR SLIDE) |
| XXX / 18 WHT | LIFT SWITCH-EXTEND (GROUND SIGNAL) | CONTROL MODULE EXTEND INPUT |
| XXY / 18 WHT | LIFT SWITCH-RETRACT (GROUND SIGNAL) | CONTROL MODULE RETRACT INPUT |
| XXZ / 18 WHT | WATER PUMP SWITCH(S) (GROUND SIGNAL) | WATER PUMP CONTROL MODULE (PUMP START/STOP SIGNAL) |
| YYA / 18 WHT | LP TANK LEVEL SENSOR (REF JT) | MONITOR PANEL (GROUND) |
| YYB / 18 WHT | WATER TANK LEVEL SENSOR (REF XH) | MONITOR PANEL (GROUND) |
| YYC / 18 WHT | BLACK HOLDING LEVEL SENSOR (MAIN TANK)(REF XJ) | MONITOR PANEL (GROUND) |
| YYD / 18 WHT | GRAY HOLDING LEVEL SENSOR (AUX TANK #1)(REF XK) | MONITOR PANEL (GROUND) |
| YYE / 18 WHT | GRAY HOLDING LEVEL SENSOR (AUX TANK #2)(REF XL/RRK) | MONITOR PANEL (GROUND) |
| YYF / 12 WHT | WATER PUMP CONTROL MODULE (PUMP START/STOP GROUND) | WATER PUMP |
| YYG / 14 YEL | AUTOMOTIVE AIR CONDITIONER FREEZE THERMOSTAT. | AUTOMOTIVE AIR CONDITIONER BINARY SWITCH. |
| YYH / 16 YEL | SEAT HEATER MODULE (COMMON) | SEAT HEATER SWITCH (COMMON) |
| YYJ / 16 YEL | SEAT HEATER MODULE (LOW) | SEAT HEATER SWITCH (LOW) |
| YYK / 16 YEL | SEAT HEATER MODULE (HIGH) | SEAT HEATER SWITCH (HIGH) |
| YYL / 14 YEL | HWH LEVEL TOUCHPAD HARNESS (BY DOOR) | HWH LEVEL ALARM HARNESS (UNDER DASH) |
| YYM / 12 YEL | RIGHT REAR SLIDEOUT LOCK SWITCH | RIGHT REAR SLIDEOUT LOCK MOTOR |
| YYN / 12 YEL | RIGHT REAR SLIDEOUT LOCK SWITCH | RIGHT REAR SLIDEOUT LOCK MOTOR |

05/28/11
REPORT 3593-1

WIRE IDENTIFICATION CHART

CODE / COLOR

FROM:

TO:

YYP / 18 YEL

RIGHT REAR SLIDEOUT LOCK END SWITCH

RIGHT REAR SLIDEOUT SWITCH

YYR / 18 WHT

BLACK HOLDING LEVEL SENSOR (MAIN TANK#2)

MONITOR PANEL (GROUND)

YYS / 14 YEL

SLIDEOUT CONTROL (SWITCH COMMON)

SLIDEOUT/PARK BRAKE CTRL RELAY (PIN 87 AND COIL)

YYT / 16 WHT

SEAT HEATER MODULE (LED OUTPUT)

SEAT HEATER SWITCH (LED INDICATOR)