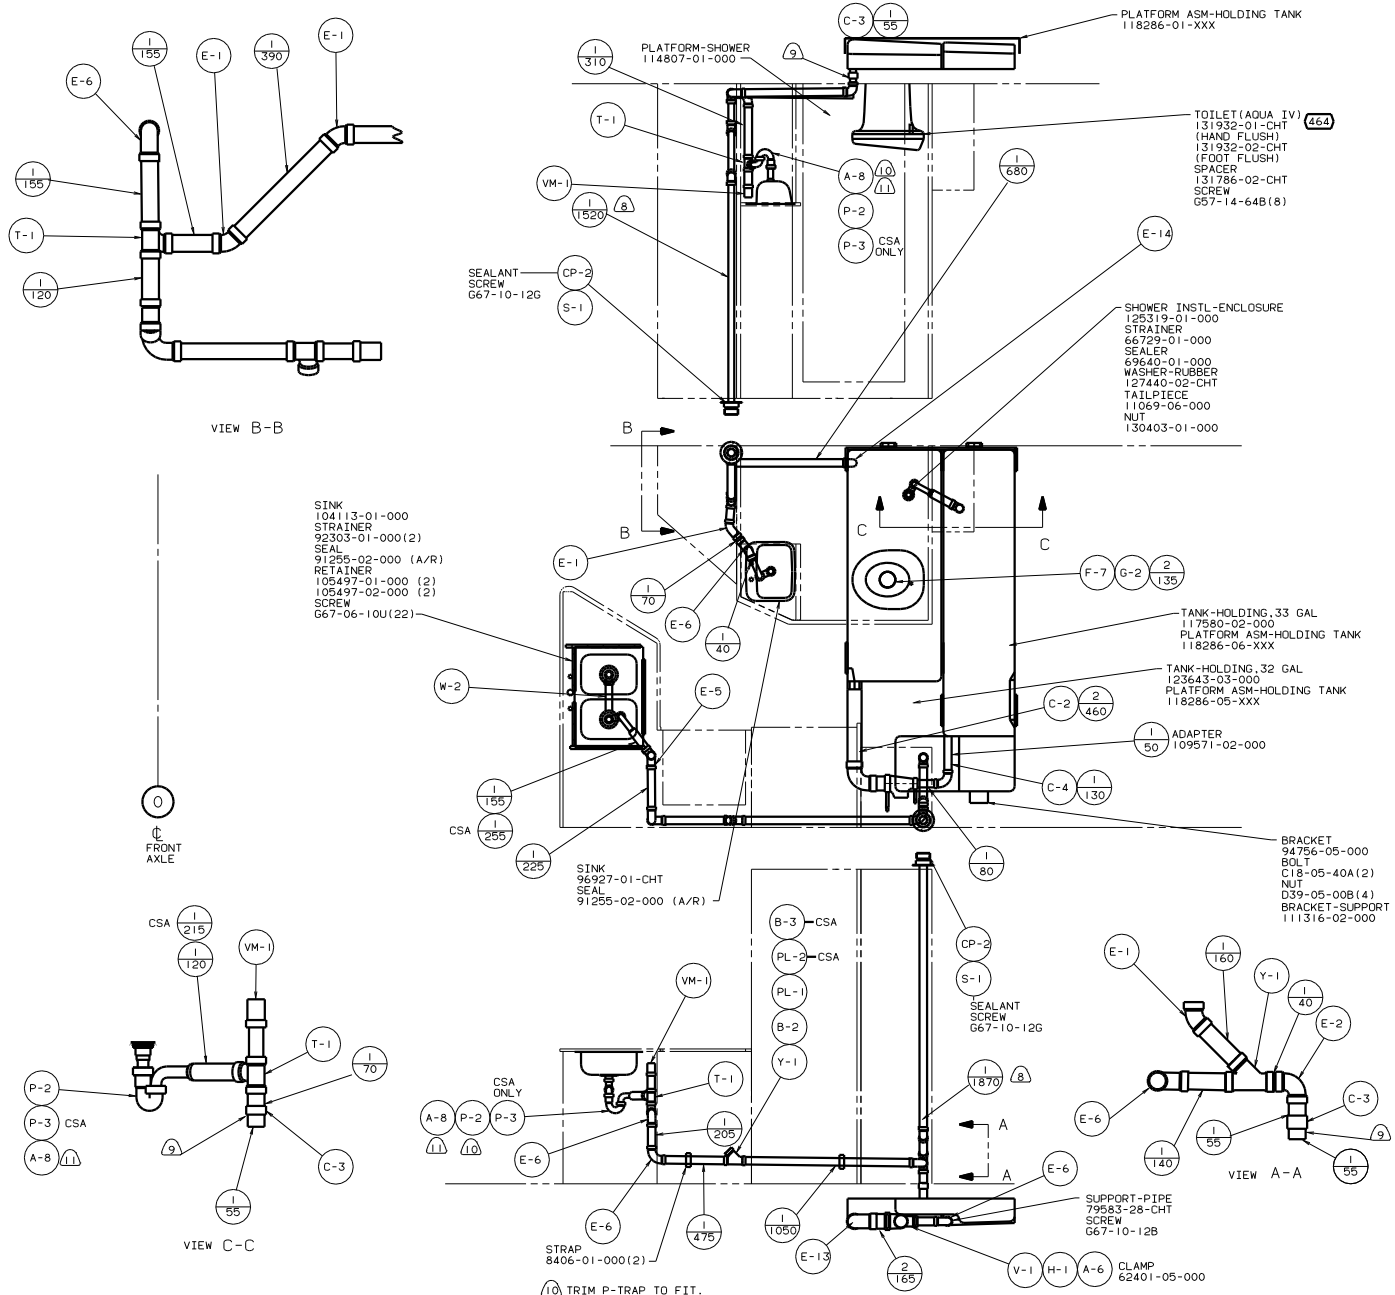


NOTES:

1. SLOPE OF HORIZONTAL PIPING TO BE 6 PER 305 MIN.
2. SLOPE OF TRAP ARM MUST BE 6 PER 305.
3. ALL PIPE AND FITTINGS TO BE ASSEMBLED WITH SOLVENT 4020-01-000.
4. ALL EXTERIOR OPENINGS AROUND PIPE TO BE SEALED WITH 110744-01-000.
5. FOR CAN UNITS EACH HOLDING TANK SHALL HAVE A CSA APPROVAL STAMPED NEAR THE IAMPO APPROVAL.
6. SEAL ALL AROUND SHOWER WITH SILICONE.
7. SEE DWG 61607-01-000 FOR INSTL OF GROMMETS.

(8) VENT PIPE MUST PROJECT 51 MM MIN AND 63.5 MM MAX ABOVE ROOF FOR PROPER FIT AND FUNCTION.

(9) SECURE VENT TUBES TO FLOOR WITH BRACKET 95061-01-000(2),CLAMP 62401-02-000, SCREW G67-10-12B(2).

(10) TRIM P-TRAP TO FIT.

(11) NOT USED ON CANADIAN UNITS.

(464) TOILET

(X-X) FOR DRAINAGE CALLOUTS SEE DWG NO. 116229-01-000

RELEASE A — 133460

WINNEBAGO — 00 429U

DRAINAGE SYSTEM INSTL

133460

REF: 118444 T

Copyright 2005 Winnebago Industries, Inc.

Copyright 2005 Winnebago Industries, Inc.

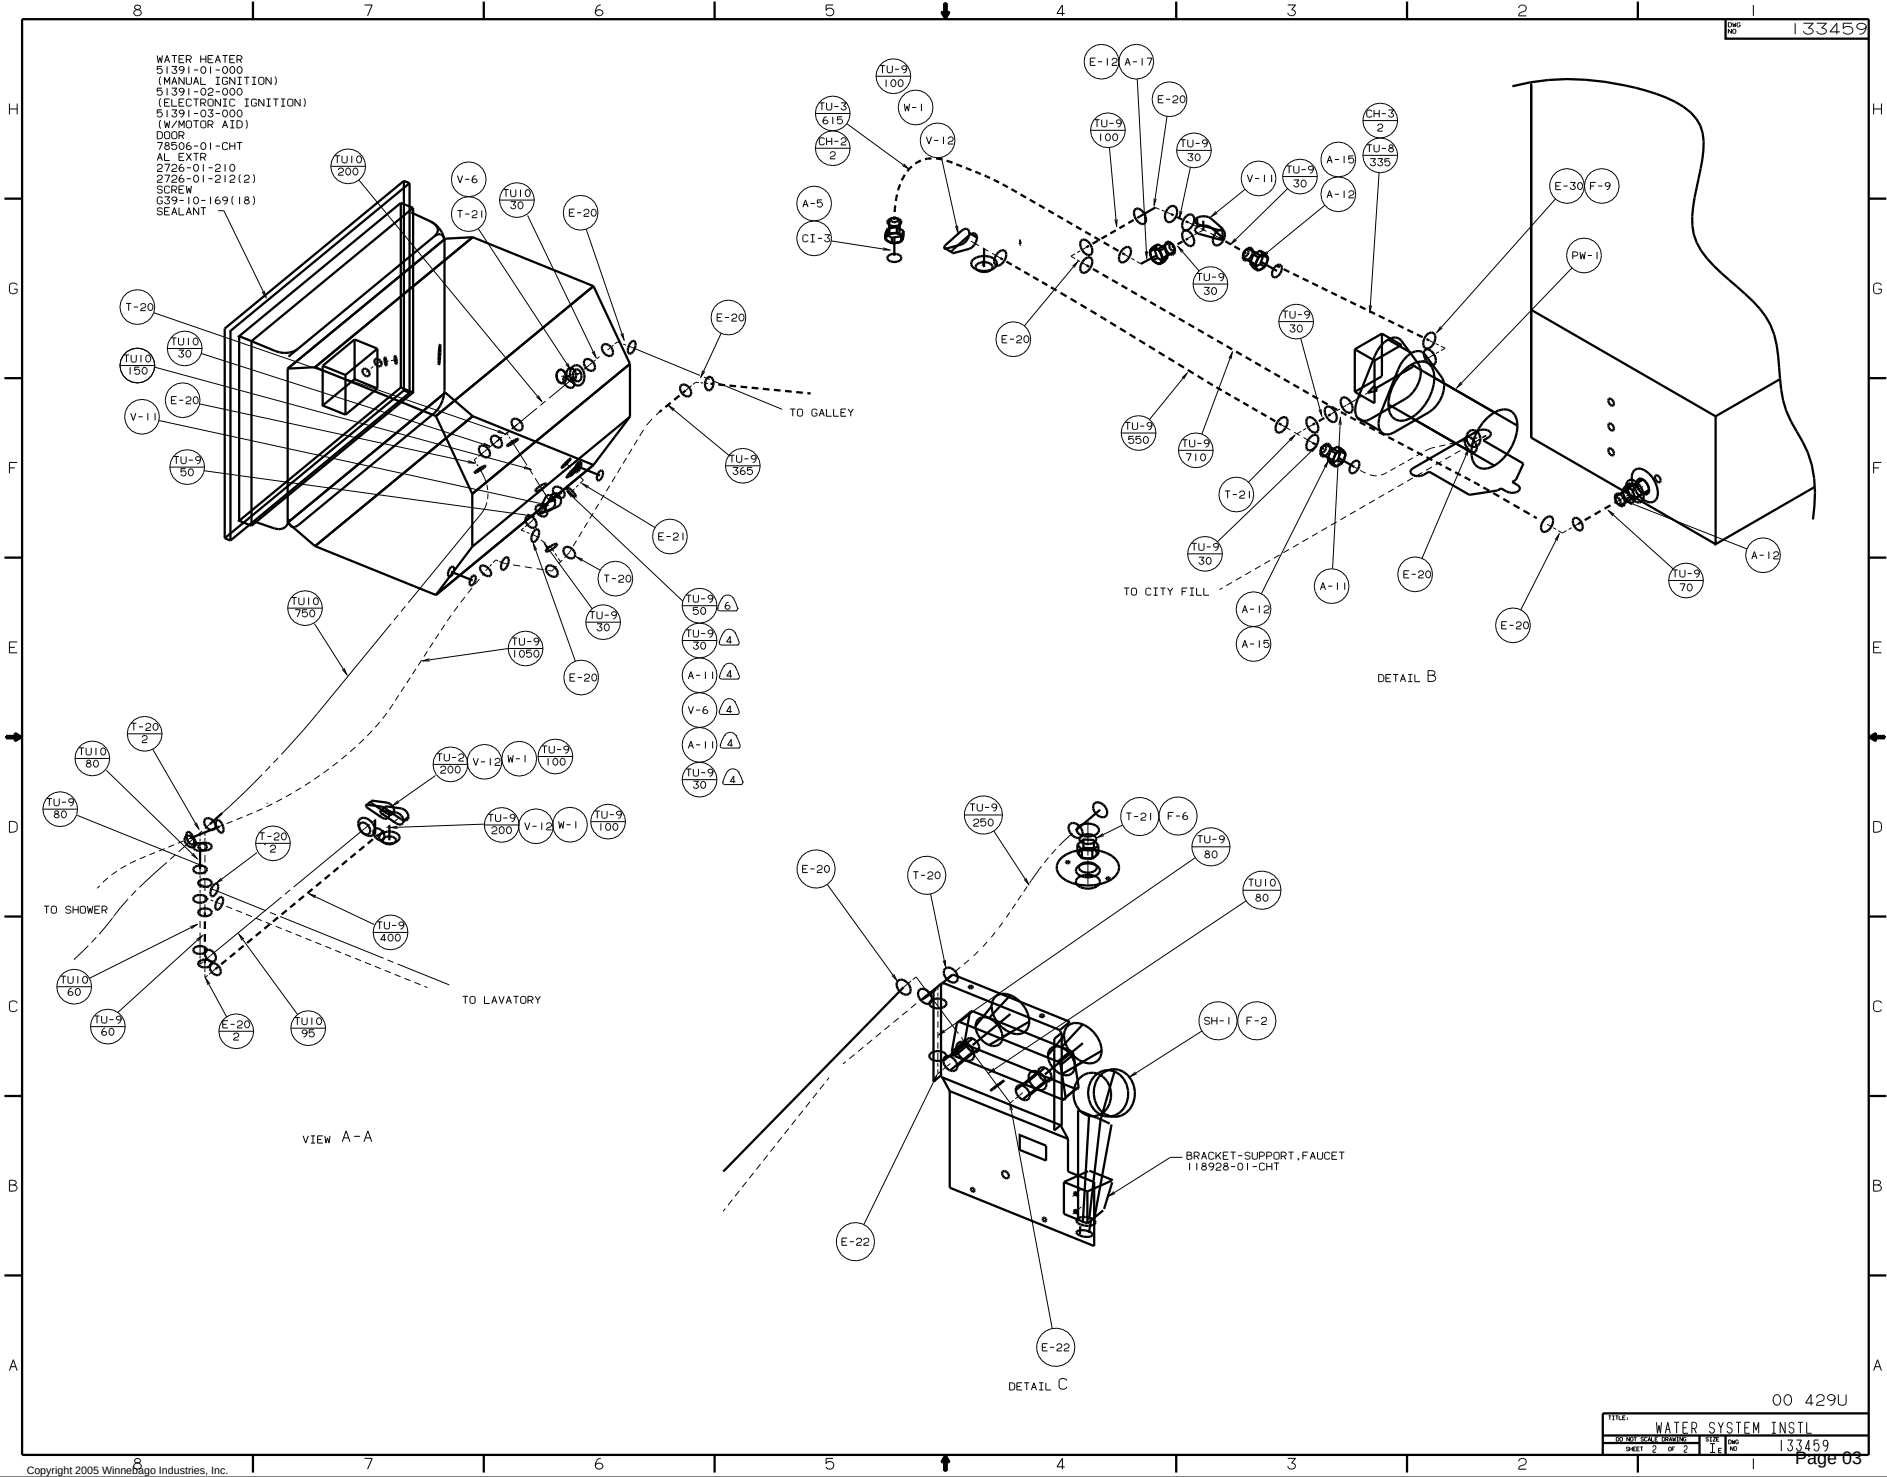


00 429U

TITLE: WATER SYSTEM INSTL
DO NOT SCALE DRAWING
SHEET 2 OF 2
SIZE Tc
DWG NO 133459

Copyright 2005 Winnebago Industries, Inc.